

## 5.1 Setting a Language

## 5.1.1 Checking a Language to Use

- You can check the registered language used in the system from Setting → System → System Information tab.
- The basic language options are English, Chinese, Japanese, German, Italian, Spanish, Russian, French, and Portuguese.
- If you want to change a language, select the desired language to use and click on the **Update** button, and then restart the program.

English	-
Japanese	
German	
Italian	
Spanish (Spain)	
Russian	
French	

## 5.1.2 Adding a Language to Use

If you want to use another language except the default options, you can add a new one by the following steps.

1 Run Microsoft Office Excel and open Language.txt file.

<sup>a</sup> You can find the language file from **D:\Database\Language** (default path).

2 Input the translated words and phrases of a new language at the next row of the previously setting language.

J12 • ( <i>f</i> x					
	А	В	С	D	E
1	Index	English	Chinese	Japanese	New Language
2	// Last modified by	R&D (15/03/26)			
3	'%s' is already in u	%s' is already in us	已经使用了 <mark>%</mark> s'	%s' <mark>が</mark> 既に使用中	Translate
4	&Left	&Left	&左	<mark>&amp;</mark> 左	Translate
5	&Right	&Right	&右	<mark>&amp;</mark> 右	Translate
6	<< New Exposure	<< New Exposure	<< 新曝光	<< 新しい撮影	
7	< < Previewer	<< Previewer	<< 预览器	<< プレビュー	Translate
8	10INX12IN	10INX12IN	10X12英寸	10"×12"	Translate
9	11INX14IN	11INX14IN	11X14英寸	11"×14"	Translate
10	14INX14IN	14INX14IN	14X14英寸	14"×14"	Translate
11	14INX17IN	14INX17IN	14X17英寸	14"×17"	Translate
12	1x1	1x1	1x1	1x1	Translate
13	1x1 Layout	1x1 Layout	1x1 版面	1x1 レイアウト	Translate
14	2x2	2x2	2x2	2x2	Translate
15	2x2 Layout	2x2 Layout	2x2 版面	2x2 レイアウト	Translate
16	3x3	3x3	3x3	3x3	Translate
17	3x3 Layout	3x3 Layout	3x3 版面	3x3 レイアウト	Translate
18	4x4 Layout	4x4 Layout	4x4 版面	4x4 レイアウト	Translate
19	8.5INX11IN	8.5INX11IN	8.5X11英寸	8.5"×11"	Translate
20	8.5INX12IN	8.5INX12IN	8.5X12英寸	8.5"×12"	Translate