



SHENZHEN FENDA TECHNOLOGY CO.,LTD,GUANGDONG,PRC
ADD: Fenda Hi-Tech Park, Zhoushi Road, Shiyan, Baoan, Shenzhen, Guangdong, PRC
Tel: +86-755-27486668 (800 line) Fax: +86-755- 27353777 P.C.: 518108

F&D
www.fenda.com



T-400X User Manual

2.1 Computer Multimedia Speaker

 
Warnings:

- Do not place the system in the high-temp and humid environment,prevent it from raining or rough handling and strong shock.
- In order to avoid electric shock and other accidents,do not open the right side panel cover for repair without any professional guidance.
- In case fragmaents or other liquids is accidentally sprinkled inside the cabinet, please switch off the power immediately In case of repair pls Come to the professional maintenance for help.
- Switch off the power and take off the plug from the power jack when the system is not on work.
- Keep it safe from water drops or splashing water, and no liquid container allowed to be put on its top side.
- Keep the cabinet vent far from the wall by 20mm at least and the air vent should not be blocked.
- Do not keep it close to the fire.


Package contents

- | | |
|-------------------------------|------|
| 1. Sub-woofer speaker | 1pc |
| 2. Satellite speakers | 2pcs |
| 3. Signal input cable | |
| a) 3.5 mm to RCA stereo cable | 1pc |
| b) RCA to RCA stereo cable | 1pc |
| 4. Operation manual | 1pc |
| 5.Full function remote | 1pc |
| 6.Connection Cable | 2pcs |


Product wiring diagram

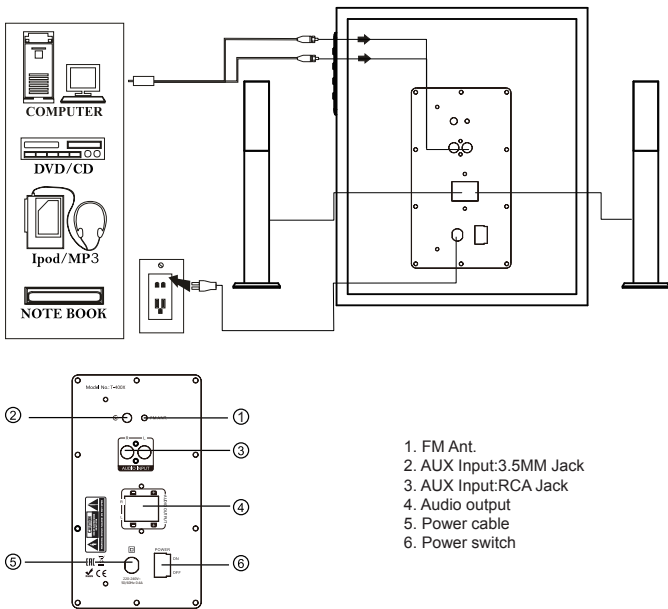

Panel instruction

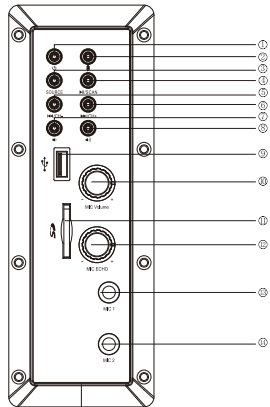 

 1. Standby button
2. Bluetooth button
3. Source button
4. Play/Pause/FM autoscanner button
5. Previous/CH- button
6. Next/CH+ button
7. Volume decrease button
8. Volume increase button
9. USB port
10. Microphone volume knob
11. SD port
12. Echo knob
13. Microphone jack
14. Microphone jack

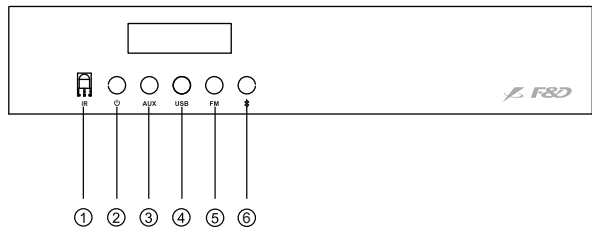

1. IR window
2. Standby and volume indicator
3. AUX indicator
4. USB/SD indicator
5. FM indicator
6. Bluetooth indicator

Panel key controls

 
- A. Standby: Turn on/off unit
- B. : short press to Bluetooth mode, long press entering pairing mode, blue LED will flash fast
- C. : Decrease or increase the value level
- D. Source: Switch between BT、DVD、AUX、USB/SD and FM mode. LED on subwoofer panel will be bright to indicate related source mode.
- E. Play/Pause:
- a. USB/SD Mode: Short press for play/pause the music playback.
 - b. FM Mode: Short press to start Auto Search & this will store the found frequencies (channels) automatically.
 - c. Bluetooth mode:short press to play/pause music.
- F. /CH- Previous:
- a. USB/SD mode: Short press to select previous song and long press to select previous folder.
 - b. FM mode: Short press to select previous stored station.
 - c. Bluetooth mode: short press to select previous song.
- G. /CH+ Next:
- a. USB/SD mode: Short press to select next song and long press to select next folder.
 - b. FM mode: Short press to select next stored station.
 - c. Bluetooth mode: short press to select next song

Specifications

Output power (RMS):
Subwoofer: 60W(THD+N=10%,60Hz)
Satellites: 20Wx2(THD+N=10%,1KHz)
Speaker unit:
Satellite: 3"8Ω
Subwoofer: 8"6Ω
Frequency Response:
Satellites: 400Hz-20KHz
Subwoofer: 20Hz-100Hz
Separation: ≥35dB
S/N Ratio: ≥65dB
Power: 220-240V ~50/60Hz 0.4A

Remote control keys function

- A. Standby: turn on/off unit
- B. Switch between AUX, BT, USB/SD and FM
- C. Mute: press it to mute or unmute the sound
- D. TRE+: increase treble level
- E. TRE-: decrease treble level
- F. BASS+: increase bass level
- G. BASS-: decrease bass level
- H. Vol+/-: increase or decrease master volume
- I. Tune+/-: FM mode:
- Fine Tuning: Short press to increase or decrease one step (100Khz), FM LED flash once. LED stop flashing once it reaches to Minimum or Maximum frequency. Manual Tuning: Long press of this key works for Manual tuning, It finds the next available frequency.
- J. MEM: Short press of this key work to store tuned station through Fine or Manual tuning. FM LED flash once to indicate store/save operation.
- K. CH+/-: select stored station
- L. Scan: FM mode: Short press to start Auto Search & this will store the found frequencies (channels) automatically.
- M. Enter: confirm setting and return to main screen
- N. 0~9 number keys:
1. USB/SD source: directly press numeric keys through remote to select your favorite song if you know the song number in the folder.The system will automatically play the last song of the folder if you press number excess of song number of that folder.
 2. FM source: directly press numeric keys through remote to select your favorite station if you know the station number (1~100). Or press 3 or 4 digits of frequency to play that station, for example, 1026 for 102.6 MHz station.
- O. Play/Pause: USB/SD and BT source, short press to play or pause
- P. Prev: USB/SD and BT source, short press to select previous song
- Q. Next: USB/SD and BT source, short press to select next song
- R. Folder+/-: USB/SD source, short press to select next/previous folder
- S. :short press to Bluetooth mode and Long press entering pairing mode,blue LED will flash fast

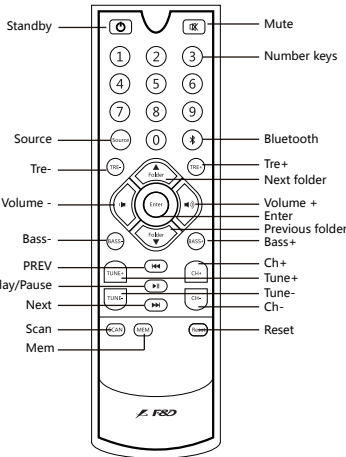

Bluetooth pairing

- Switch to Bluetooth mode, T-400X will automatically search the Bluetooth device. If the device paired before, T-400X will connect automatically.
- If can't find paired device, T-400X will enter pairing mode automatically, bluetooth LED under pairing button flashes quickly.
1. Active "Bluetooth" function on your device and search for "T-400X".Enter "0000" if your device asks for the PIN code..
2. After pairing successfully, bluetooth LED bright, and ready for playing music.
- Recommend to adjust suitable volume before playing music.

Pairing a bluetooth device supporting NFC

- If your Bluetooth device supports Near Field Communication (NFC), make sure that NFC feature is activated. Touch the NFC area of your Bluetooth device to top of T-400X in order to automatically pairing.
- Note: 1. If your phone has NFC support but it is running an OS below Android 4.1, you will need to download an NFC Bluetooth APP from Google play or a similar online store.
- Notice: After switch to Bluetooth source,the unit will automatically search the Bluetooth device and connect it.
- If the device paired before. If can't find paired device,it will enter pairing mode automatically and the bluetooth LED will flash quickly. Bluetooth device should active"Bluetooth" function during pairing and search for "T-400X".

Troubleshooting

Problem	Possible Cause	Solution
F&D system does not turn on	Power cable not connected to the power outlet and/or F&D System	Check connection
Sound reproduction too soft	Volume of F&D System set too low	increase the volume using the "Volume" button. increase the volume of the source device
F&D System does not respond to remote control.	The battery is empty	Replace battery, observe correct polarity at insertion
No sound reproduction	Source device not producing any signal.	Digital output on the source device not activated
	Cable not correctly connected/faulty cable.	Check the connection of the source device to the F&D System and change the cable if necessary.
	Distance is far from device in Bluetooth mode	put your Bluetooth device close to the speaker
	Bluetooth device not connected successfully	please restart the speaker and try again