AT235

Middle ear assessment **made** ideal







User friendly & reliable middle ear analyzer

Flexible use & mounting User friendly & reliable



Tympanogram and reflex test results displayed simultaneously



Visual child distraction

The AT235 is an automatic middle ear analyzer ideal for diagnostic and screening evaluations.

Test batteries

Test batteries of the AT235 include standard tympanometry, ispsilateral and contralateral acoustic reflex, reflex decay, two Eustachian tube function tests (the ETF 1 - Williams test and ETF 2 - Toynbee test) as well as air conduction audiometry including automated test function.

The AT235h, the extended version of the AT235, also includes high frequency probe tones to optimize testing of infants, manual tympanometry, reflex latency and the additional ETF test suitable in case of patulous tympanic membrane (continuous sensitive impedance measurement).

A basic air conduction pure tone audiometry function is a standard feature on the AT235. Basic pure tone audiograms may be generated manually or with an automatic HL function. All that is required is the purchase of an optional headset. Flexible use and mounting Ergonomically designed and user friendly, the AT235 can be used as a desk unit, wall-mounted unit, or portable instrument.

An optional bracket for wall mounting is available, but the mounting holes also make it possible to use a standard bracket with VESA mounting that can be bought in many TV stores.

AT235 is the optimum solution if traveling between sites:

The AT235 can hold up to 500 clients and 50,000 sessions that, in combination with the optional SYNC mode, can be used to synchronize with the Interacoustics database OtoAccess™ or NOAH when returning to your office

A printer can be connected directly to the AT235 eliminating the need for a PC Optional carrying case

Child distraction

To help distract children while obtaining the tympanogram and reflex measures, the AT235 can present a train moving across the lower part of the screen.

Test	AT235	AT235h
Tymp 226Hz	х	х
Tymp 678, 800 & 1000Hz		х
Manual tympanometry		х
Reflex Ipsilateral	х	х
Reflex Contralateral	х	х
ETF 1 test non-perforated tympanic membrane	х	х
ETF 2 test perforated tympanic membrane	х	х
ETF 3 patulous tympanic membrane		х
Reflex Decay	х	х
Reflex Latency		х
Pure tone audiometry	х	х
Modified Hughson-Westlake audiometry test	х	х

Extended version

AT235h is the extended version that offers high frequency probe tones (678, 800 and 1000Hz), manual tympanometry, reflex latency and the additional Eustachian tube test - patulous Tympanometry & basic audiometry in one powerful device



User friendliness brought to the next level

Color:	Probe:	Status:
Red	0	Right ear is selected. Probe is out of the ear.
Blue	0	Left ear is se- lected. Probe is out of the ear.
Green	0	Probe is in the ear and a seal is maintained.
Yellow	0	Probe is in the ear and is blocked, leaking or too noisy.
White	0	The probe has just been attached. Probe status is yet unknown.

Probe status displayed on probe / shoulder box

Customizable protocols

Dedicated probe systems

The AT235 includes either a diagnostic probe or a clinical probe system to fit your needs.

The diagnostic probe is hand-held and ideal for quick tymps and a screening reflex.

The clinical probe is ideal for more lengthy exams where stability is important and noise from rattling should be avoided.

You can choose to have both probe systems included with your AT235. It is quick and easy to change between the two probe systems. The clinical probe shoulderbox can be placed on the client by using the optional headband, clips or key hanger.

Probe status is displayed on the probe shoulderbox for both probe systems which enables you to keep focus on the client. The probe has a button for remote change of ears - this also applies to both probe systems.

Both probe systems are very easy to take apart for cleaning.

Customizable protocols to meet specific client types

AT235 offers the possibility to create user-defined test protocols by combining different tests from the test battery into one test flow. For instance you can create a simple screening procedure and a more indepth evaluation. Avoid wasting time with different client types as each test protocol can have separate test limits to meet the need of a specific client types.

Great overview of test results

The 10" adjustable display provides a great overview of the measurements where several test results can be seen on the same screen. The image is sharp and clear. The screen can be tipped and adjusted to avoid light reflection on the screen.

The built-in HDMI output makes it possible to show the screen on a projector or TV. This may be relevant in counseling sessions to help the client get a better understanding of the test results. It is also ideal for educational purposes, as students can easily follow the test results when displayed on a larger screen.

Reduced number of buttons

Few dedicated buttons on the AT235 make it easy to navigate between various functions. Function buttons with changing help texts on the screen guide you to navigate efficiently.

Clinical probe

Diagnostic probe



Direct printout from the AT235 or via customizable templates in the Diagnostic Suite software. Save in NOAH or the Interacoustics OtoAccess™ database.

PC Integration Printing Language options



Printout via Diagnostic Suite software and the Print Wizard.



Direct printouts from standard printer



Design your own reports. Interacoustics software suites include a common embedded print wizard. This is a flexible tool that supports reporting requirements for streamlining workflow.

Supports several languages

The display language of the AT235 can be changed according to your need: Chinese, English, Finnish, French, German, Greek, Italian, Japanese, Korean, Norwegian, Polish, Portuguese, Russian, Spanish and Turkish.

Printing Options

You can print directly from the AT235 to a small 3" printer or a standard printer eleminating the need for a PC if you just want to print your measurement. If the data is downloaded to the Interacoustics OtoAccess™ database or NOAH, printouts may be generated through the PC.



Direct printout from 3" printer

Combined printing and reporting

The Print Wizard combines audiometric, impedance and fitting data for full client reporting.

Unlimited customizable templates are useful alternative templates for different test applications.

- Retrieve client demographics from OtoAccess™ and NOAH
- Merge audiometric and impedance test data onto a single page
- Text field for session observations and conclusions
- Insert bitmaps, such as clinic logos
- Individual session dates
- Highly configurable symbols for quick reference

Interacoustics A/S

Audiometer Allé 1 5500 Middelfart Denmark

+45 6371 3555 info@interacoustics.com

interacoustics.com

Interacoustics is more than state-ofthe-art solutions

smarter

Science

made

Our mission is clear. We want to lead the way in audiology and balance by translating complexity into clarity:

- Challenges made into clear solutions
- Knowledge made practical
- Invisible medical conditions made tangible and treatable

Our advanced technology and sophisticated solutions ease the lives of healthcare professionals.

We will continue to set the standard for an entire industry. Not for the sake of science. But for the sake of enabling professionals to provide excellent treatment for their millions of patients across the globe.

Interacoustics.com

Go online to explore our full product range



Viot™ Video Otoscope



AD629 Diagnostic audiometer Titan Middle ear analyzer י/כט - כ - טכט/טוא - כ/b SOUSTICE



All technical and hardware specifications concerning all products can be downloaded from our website.





Instructions for Use - EN







Table of Contents

1	INTF	RODUCTION	. 1
	1.1	About this manual	. 1
	1.2	Intended use	. 1
	1.3	Contraindications for performing impedance audiometry	. 1
	1.4	Product description	. 2
	1.5	About warnings and cautions	. 3
2	UNP	ACKING AND INSTALLATION	. 4
	2.1	Unpacking and inspection	. 4
	2.2	Markings	. 5
	2.3	Important safety instructions	. 6
	2.4	Malfunction	. 7
	2.5	Connections	. 8
	2.6	Calibration cavities	. 8
	2.7	Changing probe system	. 9
	2.8	Safety precautions to take when connecting the AT235.	10
	2.9	Security precautions	10
	2.10	License	11
	2.11	About Diagnostic Suite	12
3	OPF	RATING INSTRUCTIONS	13
Ŭ	31	Handling and selection of ear tips	14
	3.2	Switching the AT235 on and off	14
	3.3	Probe status	15
	3.4	Use of standard and clinical probe system	16
	3.5	AT235 stand-alone operation	16
	351	AT235 stand-alone operation nanel	16
	352	Startun	17
	353	Instrument settings – language printer date & time etc	18
	354	Test and module selection	19
	355	Tympanometry test screens	19
	356	Audiometry test screen	24
	357	Start and ston of a tympanometric test	25
	358		26
	350) View historical sessions	20
	3.6	Operating in sync mode (only with Diagnostic Suite)	28
	3.6.1	PC power configuration	28
	3.6.2	2 Starting from OtoAccess®	28
	362	Starting from Noah 4	28
	3.6.4	Crash report	28
	365	Instrument setun	29
	37	lising sync mode	30
	371	Using Syno mode	30
	3.7.	0 Sing IVII Sync	30
	272	SVNC mode	37 21
	27/	Client unload	35
	275	Session download	35
	0.7.0		00

4 M/	AINTENANCE	
4.1	General maintenance procedures	
4.2	General maintenance procedures	
4.3	Cleaning the probe tip	
4.4	Concerning repair	
4.5	Warranty	
4.6	Periodic calibration	
5 TE	ECHNICAL SPECIFICATIONS	
5.1	AT235 Technical specifications	

5.2	Calibration properties	46
5.3	Reference equivalent threshold values for transducers	50
5.4	Pin assignments	51
5.5	Electromagnetic compatibility (EMC)	52



1 Introduction

1.1 About this manual

This manual is valid for the AT235 firmware version 1.42.

The product is manufactured by:

Interacoustics A/S Audiometer Allé 1 5500 Middelfart Denmark Tel.: +45 6371 3555 Fax: +45 6371 3522 E-mail: info@interacoustics.com Web: www.interacoustics.com

1.2 Intended use

The AT235 is an automatic impedance audiometer with built-in screening audiometry suited for screening, as well as diagnostic work. Neonatal screening programs will particularly appreciate the presence of high probe tone tympanometry, allowing more dependable tympanometric results in neonates.

The AT235 tympanometer is intended to be used by an audiologist, hearing healthcare professional, or trained technician in a quiet environment.

1.3 Contraindications for performing impedance audiometry

- Recent stapedectomy or another middle ear surgery
- Discharging ear
- Acute external auditory canal trauma
- Discomfort (e.g., severe otitis externa)
- Occlusion of the external auditory canal
- Presence of tinnitus, hyperacusis or other sensitivity to loud sounds may contraindicate testing when high intensity stimuli are used

Testing should not be performed on patients with such symptoms without a medical doctor's approval.

Visual inspection for obvious structural abnormalities of the external ear structure and positioning as well as the external ear canal should be performed before testing.

1.4 Product description

The AT235 consist of the following parts:

Included Parts



AT235 instrument.



Clinical Probe System¹.



Diagnostic Probe System^{1, 2}.



Power supply unit UES65-240250SPA3.



Contralateral headphone¹.

Daily check cavity. CAT50 (option). DD65v2 Audiometric headset. Patient Response (Option). Printer kit (Option). Wall mounting kit (Option). Cleaning cloth.

Assortment bag BET55.

¹ Applied part as according to IEC60601-1

²One can be selected.

1.5 About warnings and cautions

Throughout this manual the following meaning of warnings, cautions and notices are used:



WARNING indicates a hazardous situation which, if not avoided, could result in death or severe injury.



CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to personal injury.

2 Unpacking and installation

2.1 Unpacking and inspection Check box and contents for damage

When the instrument is received, please check the shipping box for rough handling and damage. If the box is damaged, it should be kept until the contents of the shipment have been checked mechanically and electrically. If the instrument is faulty, please contact your local distributor. Keep the shipping material for the carrier's inspection and insurance claim.

Keep carton for future shipment

AT235 comes in its own shipping carton, which is specially designed for the AT235. Please keep this carton. It will be needed if the instrument must be returned for service. If service is required, please contact your local distributor.

Reporting imperfections

Inspect before connection

Prior to connecting the product it should once more be inspected for damage. All the cabinet and the accessories should be checked visually for scratches and missing parts.

Report immediately any faults

Any missing part or malfunction should be reported immediately to the supplier of the instrument together with the invoice, serial number, and a detailed report of the problem. In the back of this manual, you will find a "Return Report" where you can describe the problem.

Please use the "Return Report"

Use of the return report provides the service engineer with the relevant information to investigate the reported issue. Without this information, there may be difficulty in determining the fault and repairing the device. Please always return the device with a completed Return Report to guarantee that correction of the problem will be to your satisfaction.





Use only specified power supply unit UES65-240250SPA3 type.

2.2 Markings

The following markings can be found on the instrument:

Symbol	Explanation
*	Type B applied parts.
∧	Patient applied parts that are not conductive and can be immediately released from the patient
	Refer to instruction manual
1	
	WEEE (EU-directive)
X	This symbol indicates that when the end-user wishes to discard this product, it must be sent to separate collection facilities for recovery and recycling.
"	The CE-mark in combination with MD symbol indicates that Interacoustics
CE	2017/745. Approval of the quality system is made by TÜV – identification no. 0123.
0123	
	Medical Device
MD	
	Year of manufacture
<u>(</u>	Do not re-use Parts like ear-tips and similar are for single use only
I V	
	Display Port Connection – HDMI type
$ \cup $	
\square	"ON" / "OFF" (push-push)
\square	

2.3 Important safety instructions

Read this instruction manual carefully and completely before using the product.





- 1. External equipment intended for connection to signal input, signal output or other connectors shall comply with relevant IEC standard (e.g., IEC 60950 for IT equipment). In these situations, an optical isolator is recommended to fulfill the requirements. Equipment not complying with IEC 60601-1 shall be kept outside the patient environment, as defined in the standard (usually 1.5 meter). If in doubt, contact qualified medical technician or your local representative.
- 2. This instrument does not incorporate any separation devices at connections for PC's, printers, active speakers etc. (Medical Electrical System). A galvanic I isolator is recommended to fulfill the requirements. For safe setup please refer to section 2.3.
- 3. When the instrument is connected to a PC and other items of equipment of a medical electrical system assure that the total leakage current cannot exceed the safety limits and that separations have the dielectric strength, creepage clearances and air clearances required fulfilling the requirements of IEC/ES 60601-1. When the instrument is connected to a PC and other similar items be aware of not touching the PC and patient simultaneously.
- 4. To avoid the risk of electric shock, this equipment must only be connected to supply mains with protective earth.
- 5. Do not use any additional multiple socket-outlet or extension cord. For safe setup please refer to section 2.3
- 6. This instrument contains a coin-type lithium battery. The cell can only be changed by service personnel. Batteries may explode or cause burns, if disassembled, crushed, or exposed to fire or high temperatures. Do not short-circuit.
- 7. No modification of this equipment is allowed without Interacoustics authorization. Interacoustics will make available on request circuit diagrams, component part lists, descriptions, calibration instructions, or other information that will assist service personnel to repair those parts of this audiometer that are designated by the Interacoustics as repairable by service personnel.
- 8. For maximum electrical safety, turn off the power from a mains powered instrument when it is left unused.
- 9. The instrument is not protected against harmful ingress of water or other liquids. If any spillage occurs check the instrument carefully before use or return for service.
- 10. No part of the equipment can be services or maintained while in use with the patient.



- 1. Never insert or in any way use the insert headset without a new clean non defect test tip. Always make sure that foam or ear-tip is mounted correctly. Ear tips and foam are single use.
- 2. The instrument is not intended to be used in environments exposed to fluid spills.
- 3. The instrument is not intended to be used in oxygen rich environments or use in conjunction with flammable agents.
- 4. Check calibration if any parts of the equipment is exposed to shock or rough handling.

NOTICE

- 1. To prevent system faults, take appropriate precautions to avoid PC viruses and similar.
- 2. Use only transducers calibrated with actual instrument. To identify a valid calibration, the serial number for the instrument will be marked on the transducer.
- 3. Although the instrument fulfils the relevant EMC requirements precautions should be taken to avoid unnecessary exposure to electromagnetic fields, e.g., from mobile phones etc. If the device is used adjacent to other equipment it must be observed that no mutual disturbance appears. Please also refer to EMC considerations in section 5.4
- 4. Use of accessories, transducers, and cables other than specified, except for transducers and cables sold by Interacoustics or representatives may result in increased emission or decreased immunity of the equipment. For list of accessories, transducers and cables that fulfils the requirements please refer to section 5.4
- 5. Within the European Union it is illegal to dispose electric and electronic waste as unsorted municipal



waste. Electric and electronic waste may contain hazardous substances and therefore must be collected separately. Such products will be marked with the crossed-out wheeled bin shown below. The cooperation of the user is important to ensure a high level of reuse and recycling of electric and electronic waste. Failing to recycle such waste products in an appropriate way may endanger the environment and consequently the health of human beings.

6. Outside the European Union, local regulations should be followed when disposing of the product after its useful life.

2.4 Malfunction



In the event of a product malfunction, it is important to protect patients, users, and other persons against harm. Therefore, if the product has caused, or potentially could cause such harm, it must be quarantined immediately.

Both harmful and harmless malfunctions, related to the product itself or to its use, must immediately be reported to the distributor where the product was acquired. Please remember to include as many details as possible e.g., the type of harm, serial number of the product, software version, connected accessories and any other relevant information.

In case of death or serious incident in relation to the use of the device, the incident must immediately be reported to Interacoustics and the local national competent authority.

2.5 Connections

1	Probe	Dedicated probe connection.
2	LAN	LAN (Not used).
3	USB B	For printer, mouse, keyboard, Memory stick .
4	USB A	For PC connection.
5	HDMI	For external monitor or projector.
6	In 24 V	
		Use only specified power supply unit UES65-240250SPA3 type.
7	Trigger in / out	Cochlear implant trigger option.
8	Pat. Resp.	Patient response button.
9	Right	Audiometry Right output.
10	Left	Audiometry Left output.
11	Contra	Contra transducer output.

2.6 Calibration cavities

You can use the 0.2 ml, 0.5 ml, 2.0ml and 5 ml for validity check of the probe calibration.

To perform a calibration check, select a protocol the measures a tympanogram.

Do not use an ear tip! Place the probe tip completely into the cavity. Perform the measurement. Check the volume that was measured.

The allowed tolerance in the volume measurement is ± 0.1 ml for cavities up to 2 ml and $\pm 5\%$ for larger cavities. These tolerances are applicable for all probe tone frequencies.

We strongly recommend calibrating probe and contra phone at least once a year.

2.7 Changing probe system

Change between the standard and clinical probe as follows:



- 1. Locate the probe connection on the back of the unit.
- 2. Open the 2 locks by pushing them to the sides.



- 3. Swap to the other probe system.
 - 4. Close the 2 locks by pushing them to the center.





2.8 Safety precautions to take when connecting the AT235.

NOTICE

Please note that if connections are made to standard equipment like printers and networks, special precautions must be taken to maintain medical safety.

2.9 Security precautions

NOTICE: As a part of data protection, ensure to be compliant to all the following points:

- 1. Use Microsoft supported operating systems
- 2. Ensure operating systems are security patched
- 3. Enable database encryption
- 4. Use individual user accounts and passwords
- 5. Secure psychical and network access to computers with local data storage
- 6. Use updated antivirus and firewall and anti-malware software
- 7. Implement appropriate backup policy
- 8. Implement appropriate log retention policy

Please follow instructions below.

Fig 1. AT235 used with the medically approved power supply UES65-240250SPA3.



Fig. 2. AT235 used with, a medically approved safety transformer and a wired connection to a PC.



2.10 License

When you receive the AT 235 it already contains the license you have ordered. If you would like to add licenses that are available in AT235, please contact your dealer for a license.

(**1)** Interacoustics

2.11 About Diagnostic Suite

Should you go to Menu > Help > About then you will see the below window. This is the area of the software where you can manage license keys and check your Suite, Firmware and Build Versions.

Interacoustics	A/9
Intera	coustics
Copyright (L) 24m	actualities 2009
Harting: The com Information in the	parter program in protected by copyright has and an "Disadhistical reproduction or distribution of this
and will be proceed	ention of A, may result in present the and commend presentions. Mail under the meaning referit provided under fax.
-	
License	
ticense	
License Diagonalic Sal	
Ucanae Diagonalic Sal	
Genne Diagonatic Sul Sulta accon Nati accon	be 2.8.8 Pressants without S.R. 2.4 (1013.5mb)
Cicense Okagonetic Sol Satu teranu Nati teranu	
ticense Okaginestic Suit Suite secon Suite secon Suite secon	
Cleanise Okaginestic Sol Sulta secon Dalig secon Checksone	le 2.2.2 Pressant cettion 0.2 3.4.1335.5449

Also, in this window you will find the Checksum section which is a feature designed to help you identify the integrity of the software. It works by checking the file and folder content of your software version. This is using a SHA-256 algorithm.

On opening the checksum, you will see a string of characters and numbers, you can copy this by double clicking on it.

3 Operating instructions

The instrument is switched on by pressing the ON button on the unit. When operating the instrument, please observe the following general precautions:



- 1. Use this device only as described in this manual.
- 2. Use only the disposable Sanibel ear tips designed for use with this instrument.
- 3. Always use a new ear tip for each patient to avoid cross-contamination. The ear tip is not designed for reuse.
- 4. Never insert the probe tip into the ear canal without affixing an ear tip as omission may damage the patient's ear canal.
- 5. Keep the box of ear tips outside the reach of the patient.
- 6. Be sure to insert the probe tip in a way which will assure an airtight fit without causing any harm to the patient. Use of a correct and clean ear tip is mandatory.
- 7. Be sure to use only stimulation intensities acceptable to the patient.
- 8. When presenting contralateral stimuli using the insert phones do not insert the phones or in any way try to conduct measurements, without a correct insert ear tip in place.
- 9. Clean the headphone cushion regularly using a recognized disinfectant.
- 10. Contraindications to testing include recent stapedectomy or middle ear surgery, a discharging ear, acute external auditory canal trauma, discomfort (e.g., severe otitis externa) or occlusion of the external auditory canal. Testing should not be performed on patients with such symptoms without a medical doctor's approval.
- 11. The presence of tinnitus, hyperacusis or other sensitivity to loud sounds may contraindicate testing when high intensity stimuli are used.

NOTICE

- 1. Careful handling of the instrument whenever in contact with a patient should be given high priority. Calm and stable positioning while testing is preferred for optimal accuracy.
- 2. The AT235 should be operated in a quiet environment, so that measurements are not influenced by outside acoustic noises. This may be determined by an appropriately skilled person trained in acoustics. ISO 8253 Section 11, defines a quiet room for audiometric hearing testing in its guideline.
- 3. It is recommended that the instrument be operated within an ambient temperature range of $15^{\circ}C / 59^{\circ}F 35^{\circ}C / 95^{\circ}F$.
- 4. The headphone and insert phone are calibrated to the AT235 introducing transducers from other equipment requires a re-calibration.
- 5. Never clean the transducer housing with water or insert non-specified instruments into the transducer.
- 6. Do not drop and avoid other undue impact to this device. If the instrument is dropped or otherwise damaged, return it to the manufacturer for repair and/or calibration. Do not use the instrument if any damage is suspected.
- 7. Although the instrument fulfils the relevant EMC requirements, precautions should be taken to avoid unnecessary exposure to electromagnetic fields, e.g., from mobile phones etc. If the device is used adjacent to other equipment, caution must be taken to observe that no mutual disturbance appears.

Mmm

3.1 Handling and selection of ear tips

When using the AT235 probe and CIR contra phone, Sanibel ear tips must be used.



The Sanibel ear tips are single use only and should not be reused. Reuse of ear tips can lead to the spread of infection from patient to patient.

The probe and CIR contra phone must be fitted with an ear tip of a suitable type and size before testing. Your choice will depend on the size and shape of the ear canal and ear. Your choice may also depend on personal preference and the way you perform your test.



When performing a quick impedance screening test, you may choose an umbrella shaped ear tip. Umbrella ear tips seal the ear canal without the probe tip going into the ear canal. Press the ear tip firmly into the ear canal in such a way that a seal remains during the complete test.



For more stable testing, we recommend using an extension cord with a mushroom shaped ear tip. Make sure that this ear tip inserts completely into the ear canal. Mushroom shaped ear tips allow you to test 'hands free' from the AT235. This reduces the chance of contact noise disturbing the measurement.

Refer to the "Selecting the Correct Ear Tip" Quick Guide included in the AT235 Additional Information document for an overview of ear tip sizes and selection.

3.2 Switching the AT235 on and off

Switch the AT235 on or off by pressing the ON (1).

NOTICE

The AT235 takes approximately 35 seconds to boot up. Allow the unit to warm up for 1 minute before use.

3.3 Probe status

The probe status is indicated by the color of the light on the control panel, standard probe system and the clinical probe system. Below, the colors and their meanings are explained:



No light

AT235 is not monitoring the probe status.

3.4 Use of standard and clinical probe system

For establishing most stable measurements, it is recommended not to hold the probe between fingers during the measurements. Particularly acoustic reflex measurements could be affected by probe movements.

3.5 AT235 stand-alone operation

3.5.1 AT235 stand-alone operation panel



	Name	Description
1	ON	Turns the AT235 ON and OFF.
2	Shift	Shift is used to access secondary functions of the other keys.
3	Setup	Hold down Setup and use the wheel (19) to select the desired Setup menu then let go of the Setup button to open it.
4-13	Function keys	The 10 function keys hold functions of which labels are displayed in the screen.
14	Tests	Hold down Test and use the wheel (19) to select the desired protocol or audiometry or impedance module. Let go of the Test button to make your selection.
15	New Session	Clears data and starts a new session in the current module.
16	Clients	Press the Clients button to open a window in which a client can be selected, edited, or created. Also, its historic sessions can be viewed.
17	Save	Saves the current session for the current module.
18	Print	Prints the session that is currently on screen.
19	Wheel	Used for manual pump control as well as scrolling through menus and selection possibilities. In the audiometry module the wheel controls the stimulus intensity.
20	Tymp	Selects or deselects a tympanogram test from the protocol.

21	Reflex	Selects or deselects a reflex test from the protocol. If necessary, a test with ipsilateral or contralateral reflexes is automatically added to the protocol.
22	Tone Switch, Enter, Start/stop	In audiometry it is the tone switch. In tympanometry it interrupts or starts the auto-start function, and it operates as a stop and start button while the probe is in an ear. In menus that require textual input the tone switch is used for making selections.
23	Right	Selects right ear for testing.
24	Left	Selects left ear for testing.

3.5.2 Startup

The AT235 will always load the last used tympanometry protocol as a starting point.

3.5.3 Instrument settings – language, printer, date & time, etc.

While holding down the "Setup" button (3), use the wheel (19) for selecting Instrument settings and release the "Setup" button (3) to open it.

Setup
Instrument settings
Common Settings - IMP
Instrument protocol settings
Protocol settings
Manage protocols

For changing the operation language of the system hold the Language button (6) while using the wheel (19) to selecting the language of your choice. The AT235 needs to be restarted for the change to be effectuated.

Use the wheel (19) to preselect Display light (A), LED light (B), Date and time (C) and Printer type (D). To make changes at Display light, LED light and the Printer type, hold the Change button (7) while rotating the wheel (19).

Lineseer 1922 (1920/0000 NUC keys CENETION/TAXOSELYROSYNOS Printed To byte: To by	Instrument settings				
ALD NY DIADRALEMPERATURAL/DEDIX Non- C 27-01-2014 22:5410 PHY MAX C PHY MAX PHY MAX PHY MAX C PHY MAX PHY MAX PHY MAX PHY MAX PHY MAX PHY MAX PHY MAX PHY MAX PHY MAX PHY MAX PHY MAX PHY MAX	License: Mil 2426/000		Delu / fime		
Control Control Minimitian Control Control Control Control Control Control		OTBUNELOMPHYPHYPHYPHYPHYPHYPHYPHYPHYPHYPHYPHYPHYP	line	C	27-03-2014 12:54:10
Dense broke D Hill KG 3 State B G G G G G G G G G G G G G G G G G G	DHP Kess	CUNSTNMVT4XCP9LY9R3YVW5	Privier.		
	Light		watter type: -	D	HP PCL3
	Distant Mile A	0	Premerg Lister model		3. Color CMY
	LEU Name B	0			
E					
E					
E					
E					
E					
E					
		2			

In case the AT235 is connected to the Diagnostic Suite, your PC will automatically update date and time.

Manually updating date and time is done by pressing the Change button (7) when Date and time (C) is preselected. This gives access to the screen below. Use the wheel (19) to select day, month, year, hour, or minutes. Use the Change - and Change + buttons (9 and 10) to adjust the number. Press the Set button (13) to keep changes and set date and time or press the Back button (12) to reject any change made.

Converte Sale (Converte Converte Conver	obramment settings			
	COMPACE BALL SHOULD FROM		Dets / Time	
		BURUN EHMINIPHVELTL2TVV	Time.	27401-2814 17:32:31
And	(P hay:	CONSTRUCTION OF A CONSTRUCTURA OF	Printer	
new later ands.	uper .		Parties have:	W.PC.T
	aprine legitic	-0	Participation model	1.0000.007
Set Clock	ti keht	-0	8	
			1	
		Stool		
		and the second se		
		22 1 2014	13 .37	

3.5.4 Test and module selection

While holding the "Tests" button (14), use the wheel (19) for selecting either one of the protocols or a different module. Release the wheel (19) for making your selection.

3.5.5 Tympanometry test screens

After startup, the AT235 will have selected the last used impedance protocol and will be ready to start a test. The screen now shown we refer to as the test screen. The following paragraphs describe which information and functionalities are found on the tympanogram, reflex, and audiometry test screens.





- Guen
- A Probe status showing the color corresponding to the probe light as described in paragraph 3.3. It shows the labels: in ear, out of ear, leaking or blocked.



Probe tone frequency.

В

С

- The current pressure is indicated in daPa.
- D The open triangle shows the current pressure. The solid triangle (in manual mode (O) only) shows the target pressure.
- E The name of the current protocol.
- F Protocol list showing which test is currently viewed and, in the check, boxes which tests will be tested after starting a test.
- G Press Prev. Test to select the previous test of the protocol list.
- H Press Next Test to select the next test of the protocol list.
- I Press Include to select or Exclude to deselect the checkbox of the currently viewed test (F) and thereby include or exclude it from testing.
- J When several measurement attempts were done, pressing Data allows choosing which data set is being viewed. Only the viewed data can be saved to a client.



- K Pressing Scale allows changing the scale of the compliance axis in the tympanogram.
- L Pressing Compensated allows activating or deactivating the compensation of the tympanogram according to the estimated ear canal volume.
- M Pressing Y allows toggling between viewing the so called Y, B or G tympanogram. The one shown currently shown is recognized by the capital in the button label.
- N Pressing Child activates a train that will move across on the lower part of the screen to help distract the child while obtaining the measure.

Pressing 0 daPa results in quickly setting ambient pressure as target pressure and quickly pumping back to 0 daPa. The function is only available in manual mode (O).

O Activating manual mode in the tympanogram test allows setting the pressure manually with the wheel (19). Press the attenuator (22) to start and stop recording in manual mode. Switching manual mode off and returning to automatic testing is done by pressing Auto.



3.5.5.2 Reflex test screen

The upper bar of the soft keys indicates the function in auto mode, while the lower bar shows the function for the soft keys in manual mode.



•	V	Pressing the arrow down button moves the reflex selection to the next reflex row. Moving the selection sideways is done with the wheel (19).
Change Status	W	Pressing Change Status toggles the status of the currently selected reflex (Q). Green indicates that a reflex is present while red/blue indicates that the reflex is not present.
Enlarge	х	Holding the Enlarge button show the currently selected reflex (Q) in highest available detail.
Child	Y	Pressing Child activates a train that will move across on the lower part of the screen to help distract the child while obtaining the measure.
Add Stimulus		In manual mode (O) the Add Stimulus button is available and allows adding new reflex rows.
Add Level	Z	In manual mode (O) the Add Level button is available and allows including additional test intensities.

Mmm

3.5.6 Audiometry test screen





3.5.7 Start and stop of a tympanometric test

After startup, the AT235 is ready to automatically start a measurement as soon as it detects that the probe is in the ear. When the probe is in the ear the test can be manually stopped (or paused) and again started by pressing the "Start/stop" button (22) or by pressing the probe button. When the probe is out of the ear the test can be stopped (as if it is paused before inserting the probe) or started by pressing the "Start/Stop" button (22). Using the probe button while the probe is out of ear will result in changing the selected ear side and at the same time restoring the automatic start function if necessary.
3.5.8 Save

Press "Save" (17) to enter the save screen.

Clients	
ID: 333333 Name: Carrie Harris	
ID: 111111 Name: Paul Smith	
ID: 22222 Name: Pam Mitchell	
1D: Name: NoName	

Use the wheel (19) to select a client from the list and press "Enter" (22) or press "Save" (13) to confirm that data must be saved for the selected client. Before saving the session, you may edit an existing client or create a new client by pressing the Edit button (5) or the New button (6). The process of entering client details is as follows:



Use the wheel (19) to scroll and use "Enter" (22) to select numbers to be inserted for the client ID. Press the "Next" button (13) to proceed.



Use the wheel (19) to scroll and use "Enter" (22) to select letter to be inserted for the client's first name. A clear, backspace, shift, caps lock and spacebar function are found under the soft key buttons (4 to 8). Press the "Next" button (13) to proceed.



Use the wheel (19) to scroll and use "Enter" (22) to select letter to be inserted for the client's last name. A clear, backspace, shift, caps lock and spacebar function are found under the soft key buttons (4 to 8). Press the "Done" button (13) to proceed.

3.5.9 View historical sessions

Press the "Clients" button (16) and use the wheel (19) to scroll between clients. Select the client by pressing the "Select" button (13) and a list of available sessions will appear. Use again the wheel (19) to highlight the session that needs to be selected. Press the "View" button (13) to show the historic session in a separate window.



Use the "Next" button (13) to browse through the tests in within the session. Return to the test screen by pressing "Back" three times.

3.6 Operating in sync mode (only with Diagnostic Suite)

NOTICE

3.6.1 PC power configuration

Allowing the PC to go into sleep mode or hibernation may cause the Suite to crash when the PC wakes up again. From the Start menu of your operating system, go to the **Control Panel** | **Power Options** to change these settings.

3.6.2 Starting from OtoAccess®

For instructions about working with the OtoAccess® database, please see the operation manual for OtoAccess®.

3.6.3 Starting from Noah 4

To start the Diagnostic Suite from Noah 4:

- 1. Open Noah 4.
- 2. Search for and select the patient you want to work with.
- 3. If the patient is not yet listed:
 - Click on the Add a New Patient icon
 - Fill in the required fields and click **OK**
- 4. Click on the **Diagnostic Suite module** icon at the top of the screen.

For further instructions about working with the database, please see the operation manual for Noah 4.

3.6.4 Crash report

If the Diagnostic Suite crashes and the details can be logged by the system, the Crash Report window will appear on the test screen (as shown below). The crash report provides information to Interacoustics about the error message and extra information can be added by the user outlining what they were doing before the crash occurred to assist in fixing the problem. A screen shot of the software can also be sent.

The "I agree to the Exclusion of Liability" check box must be checked before the crash report can be sent via the internet. For those users without an internet connection, the crash report can be saved to an external drive so it can be sent from another computer with an internet connection.

Cash separt		- 11
Alexand (Ecopie	ene Greenenet	-12
	(4. Common/Standard Communication Clement From Fromp Inter Defense The composition entry	
-	Degradu Sale 1008	
Hans Mr. a. I	ere for application conclusion on two tests	
8	And and an other	
	allanda 🔂 tana 🖉 😋 tanak	

3.6.5 Instrument setup

Select Menu | Setup | Suite setup... to open general suite settings.



Important: Both at the AUD module and the IMP module, please be sure to select the "AT235 (version 3)" (and not "AT235", which refers to the old version).

3.7 Using sync mode

Sync mode allows for a one click data transfer. When pressing *Save Session* on the instrument, the session will automatically be transferred to the Diagnostic Suite. Start the suite with device connected.

3.7.1 Using IMP sync

The following operations are available on the IMP tab of the Diagnostic Suite:













Menu provides access to Setup, Print, Edit and Help (refer to the Additional Information document for more details about the menu items).

Change of language:

Menu | Setup | Suite Setup takes you to a window from where you can change the language.

Print allows for printing the onscreen results directly to your default printer or to a pdf file. You will be prompted to select a print template if the protocol does not have one linked to it (refer to the Additional Information document for more details about the print wizard).

Save & New Session saves the current session in Noah or OtoAccess® (or to a commonly used XML file when running in standalone mode) and opens a new session.

Save & Exit saves the current session in Noah or OtoAccess® (or to a commonly used XML file when running in standalone mode) and exits the Suite.

Toggle Ear changes from right to left ear and vice versa.



List of Defined Protocols allows viewing which protocol was used for historic sessions.

Temporary setup allows viewing the used settings for historic sessions.

List of historical sessions accesses historical sessions for review or the Current Session.

Go to current session takes you back to the current session.

Report editor button opens a separate window for adding and saving notes to the current session.

The hardware indication picture indicates whether the hardware is connected. Simulation mode is indicated when operating the software without hardware.

The **protocol listing** shows all tests that are part of the used protocol. The test that is displayed in the test screen area is highlighted blue or red, depending on the chosen ear.

If more tests than can fit in the window are included in the protocol, a scrollbar will be visible.

A **white checkmark** indicates that (at least some) data for this test was saved.

3.7.2 Using AUD sync

The following operations are available on the AUD tab of the Diagnostic Suite:













Menu provides access to Print, Edit, View, Tests, Setup and Help (refer to the Additional Information document for more details about the menu items).

Change of language:

Menu | Setup | Language takes you to a window from where you can change the language.

Print allows for printing the onscreen results directly to your default printer or to a pdf file. You will be prompted to select a print template if the protocol does not have one linked to it (refer to the Additional Information document for more details about the print wizard).

Save & New Session saves the current session in Noah or OtoAccess® (or to a commonly used XML file when running in standalone mode) and opens a new session.

Save & Exit saves the current session in Noah or OtoAccess® (or to a commonly used XML file when running in standalone mode) and exits the Suite.

Tone test shows the tone audiogram.





Speech test shows the speech graph or speech table.

Extended range allows opening the highest intensities of the currently selected transducers.

List of Defined Protocols allows viewing which protocol was used for historic sessions.

Temporary setup allows viewing the used settings for historic sessions.

List of historical sessions accesses historical sessions for review or the Current Session.

Go to current session takes you back to the current session.

Single audiogram showing both right and left data in a single audiogram.

Synchronize channels locking channel 2 to channel 1 so that the intensity difference between the channels remains constant.

Edit mode allowing entering an audiogram by clicking with the mouse.

Mouse controlled audiometry allowing stimulus presentation and storage by mouse control in the audiogram.

dB step size allowing to toggle between 1, 2 and 5 dB step size.

Hide unmasked threshold allowing showing or hiding unmasked thresholds for which a masked threshold exists.

Transfer allowing updating the PC screen with data currently available in the audiometry module of the AT235.

The **counseling overlays** can be activated on a separate **patient monitor**. Phonemes, sound examples, speech banana, a severity indication and maximum testable values are available as overlay.

Report editor button opens a separate window for adding and saving notes to the current session. These notes can also be read or typed in the white space.

The hardware indication picture indicates whether the hardware is connected. Simulation mode is indicated when operating the software without hardware.

3.7.3 SYNC mode

If there are several sessions stored on the AT235 (under one or more patients) then the Sync tab is supposed to be used. The screen shot below shows the Diagnostic Suite with the SYNC tab open (underneath the AUD and IMP tabs in the upper right corner).



The SYNC tab provides the following possibilities:



Client upload is used for uploading clients from the database (Noah or OtoAccess®) to the AT235. The internal AT235 memory can hold up to 500 clients and 50.000 sessions.

Session download is used to download (audiogram and/or tympanometry) sessions from the AT235 memory to Noah, OtoAccess® or XML (the latter when running Diagnostic suite without a database).

3.7.4 Client upload

The following screen shot shows the client upload screen:

New Contraction	Client upload							
۰					10.5 mm		Lakrave	Sig cane Notare
	Pairo	Ju.	12.09.2011	a.	Atlas			
	+	.*		_	,	2	a (

- On the left side it is possible to search for the client in the database to transfer to the database using different search criteria. Use the "Add" button to transfer (upload) the client from the database to the internal AT235 memory. The internal AT235 memory can hold up to 500 clients and 50.000 sessions.
- On the right side the clients currently stored on the internal AT235 memory (hardware) is down. It is possible to remove all clients for individual clients using the "Remove all" or "Remove" buttons.

3.7.5 Session download

The following screen shot shows the session download screen:

🚱 Derande	Session	download				
-	34	Pest same	Last surse	Nession(s)	Status	Active
		Reliante		10000000000000000000000000000000000000	MaangDant	Ford chart?
	ati.	44	Najner	12-02-2514 (HP)	Courtined complete	First (Fast)

When pressing the "Find client" button a window as per below pops up from which the corresponding client can be found. Press the "Save" button to start downloading the sessions of this client to the database.

I want the dat	a stored.		artirlan de	territe de la constana	
Unknown die	ent				
14-00-2014 (AU					
10-12-2014 (191)					
In the same law					
18-40-2014 CHI					
select client	target in data	Nation			
select client	target in data	herie:			
ielect client	target in data	hese		Tiels Mry	
Select client Innote J Last nave	target in data	herie: Bittidate	¥.	Tiels Any Address	- Ze
Sedect client Inset: 4 Last nave Dens	Find name Denie	Betholate 31-05-1970	M. 0101013.	Trets Broy Address Drejervænget B	Zo DK-5
Select client Second J Last have Dens Jones	Finit fame Dene Joan	Betholate 31-05-1970 05-05-1962	M 0101013 -1	Tress Roy Address Drejervænget 8 Drejervænget 8	20 DK-5
Select climat Second J Last name Dense Jones Huipes	Fiel rane Dene Joan Joe	Bethdale 31-06-1970 05-05-1962 12-06-1975	M 6101013 -1 007	Addrese Drejervænget 8 Drejervænget 1	- 20 DK-51
Select climat Tanan J Last name Dens Jones Huines Doe	Fiel name Fiel name Dene Joan Joan John	Bethdale 31-06-1970 05-05-1962 12-06-1975 05-03-1964	M 6101013 -1 007 2	Address Drejervænget 8 Drejervænget 9	- 20 DK-51
Select climat Innes J Last name Dens Jones Huines Doe	Fiel rame Dene Joan Joke Johe	Settedate 31-06-1970 05-05-1962 12-06-1975 05-03-1964 41	M 6101013., -1 007 2	Addrese Drejssvænget 8 Drejsvænget 8 Drejsvænget 1	- 20 DK-51

4 Maintenance

4.1 General maintenance procedures

Routine checking (subjective tests)

It is recommended that routine check procedures are conducted weekly in full on all equipment in use. Check 1-9 outlined below should be followed on the equipment on each day of use.

General

The purpose of routine checking is to ensure that the equipment is working properly, that its calibration has not noticeably changed, and that its transducers and connections are free from any defect that might adversely affect the test result. The checking procedures should be conducted with the audiometer set up in its usual working situation. The most important elements in daily performance checks are the subjective tests and these tests can only be successfully conducted by an operator with unimpaired and preferably known good hearing. If a booth or separate test room is used, the equipment should be checked as installed; an assistant may be required to conduct the procedures. The checks will then cover the inter-connections between the audiometer and the equipment in the booth, and all connecting leads, plugs, and socket connections at the junction box (sound room wall) should be examined as potential sources of intermittency or incorrect connection. The ambient noise conditions during the tests should not be worse than those encountered when the equipment is in use.

- 1) Clean and examine the audiometer and all accessories.
- 2) Check earphone cushions, plugs, main leads, and accessory leads for signs of wear or damage. Damaged or badly worn parts should be replaced.
- 3) Switch on equipment and leave for the recommended warm-up time. Conduct any set-up adjustments as specified. On battery-powered equipment, check battery state using the manufacturer's specified method. Switch on equipment and leave for the recommended warm-up time. If no warm-up period is quoted, allow 5 min for circuits to stabilize. Conduct any setting-up adjustments as specified. On battery-powered equipment, check battery state.
- 4) Check that earphone and bone vibrator serial numbers are correct for use with the audiometer.
- 5) Check that audiometer output is correct on both air and bone conduction by conducting a simplified audiogram on a known test subject with known hearing check for any change.
- 6) Check at high level (for example hearing levels of 60 dB on air conduction and 40 dB on bone conduction) on all appropriate functions (and on both earphones) at all frequencies used; listen for proper functioning, absence of distortion, freedom from clicks, etc.
- 7) Check all earphones (including masking transducer) and the bone vibrator for absence of distortion and intermittency; check plugs and leads for intermittency.
- 8) Check that all switch knobs are secure and that indicators work correctly.
- 9) Check that the subject's signal system operates correctly.
- 10) Listen at low levels for any sign of noise, hum, or unwanted sounds (break-through arising when a signal is introduced in another channel) or for any change in tone quality as masking is introduced.

- 11) Check that attenuators do attenuate the signals over their full range and that attenuators which are intended to be operated while a tone is being delivered are free from electrical or mechanical noise
- 12) Check that controls operate silently and that no noise radiated from the audiometer is audible at the subject's position.
- 13) Check subject communication speech circuits, if appropriate, applying procedures like those used for pure-tone function.
- 14) Check tension of headset headband. Ensure that swivel joints are free to return without being excessively slack.
- 15) Check headbands and swivel joints on noise-excluding headsets for signs of wear strain or metal fatigue.

4.2 General maintenance procedures



- Before cleaning always switch off and disconnect from the power supply
- Follow local best practice and safety guidelines if available
- Use a soft cloth lightly dampened with cleaning solution to clean all exposed surfaces
- Do not allow liquid to meet the metal parts inside the earphones / headphones
- Do not autoclave, sterilize, or immerse the instrument or accessory in any fluid
- Do not use hard or pointed objects to clean any part of the instrument or accessory
- Do not let parts that have been in contact with fluids dry before cleaning
- Rubber ear-tips or foam ear-tips are single use components
- Ensure isopropyl alcohol does not come into contact with any screens on the AT235

Recommended cleaning and disinfection solutions:

- Warm water with mild, nonabrasive cleaning solution (soap)
- 70% isopropyl alcohol

Procedure

- Clean the instrument by wiping outer case with a lint free cloth lightly dampened in cleaning solution
- Clean cushions and patient hand switch and other parts with a lint free cloth lightly dampened in cleaning solution
- Make sure not to get moisture in the speaker portion of the earphones and similar parts

4.3 Cleaning the probe tip



Step 1: Unscrew the probe cap and remove the probe tip.



Step 2: Thread the stiff end of the cleaning brush into one of the tubes from inside. Pull the cleaning floss completely through the probe tip tube. Clean each of the three tubes. Discard floss after use.



Step 3: Replace the cleaned tip.



Step 4: Assemble the probe again.



4.4 Concerning repair

Interacoustics is only considered to be responsible for the validity of the CE marking, effects on safety, reliability, and performance of the equipment if:

- 1. assembly operations, extensions, readjustments, modifications, or repairs are conducted by authorized persons
- 2. a 1 year service interval is maintained
- 3. the electrical installation of the relevant room complies with the appropriate requirements, and
- 4. the equipment is used by authorized personnel in accordance with the documentation supplied by Interacoustics

The customer shall reach out to the local distributor to determine the service/repair possibilities including onsite service/repair. It is important that the customer (through local distributor) fills out the **RETURN REPORT** every time when the component/product is sent for service/repair to Interacoustics.

4.5 Warranty

INTERACOUSTICS guarantees that:

- The AT235 is free from defects in material and workmanship under normal use and service for a period of 24 months from the date of delivery by Interacoustics to the first purchaser
- Accessories are free from defects in material and workmanship under normal use and service for a period of ninety (90) days from the date of delivery by Interacoustics to the first purchaser

If any product requires service during the applicable warranty period, the purchaser should communicate directly with the local Interacoustics service center to determine the appropriate repair facility. Repair or replacement will be conducted at Interacoustics' expense, subject to the terms of this warranty. The product requiring service should be returned promptly, properly packed, and postage prepaid. Loss or damage in return shipment to Interacoustics shall be at purchaser's risk.

In no event shall Interacoustics be liable for any incidental, indirect or consequential damages in connection with the purchase or use of any Interacoustics product.

This shall apply solely to the original purchaser. This warranty shall not apply to any subsequent owner or holder of the product. Furthermore, this warranty shall not apply to, and Interacoustics shall not be responsible for, any loss arising in connection with the purchase or use of any Interacoustics product that has been:

- repaired by anyone other than an authorized Interacoustics service representative;
- altered in any way so as, in Interacoustics opinion, to affect its stability or reliability;
- subject to misuse or negligence or accident, or that has had the serial or lot number altered, defaced, or removed; or
- improperly maintained or used in any manner other than in accordance with the instructions provided by Interacoustics.

This warranty is in lieu of all other warranties, express or implied, and of all other obligations or liabilities of Interacoustics. Interacoustics does not give or grant, directly or indirectly, the authority to any representative or other person to assume on behalf of Interacoustics any other liability in connection with the sale of Interacoustics products.

INTERACOUSTICS DISCLAIMS ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FOR FUNCTION OF FITNESS FOR A PARTICULAR PURPOSE OR APPLICATION.

4.6 Periodic calibration

Minimum periodic calibration requirements:

Minimum calibration interval of once (annually) per 12-month period.

Records of all calibrations should be kept on file.

Recalibration should be performed after:

- 1) A specified time has elapsed (12-month period maximum, annually).
- 2) When a specified usage (operating hours) has elapsed. This is based on usage and environment, requested by the audiometer's owner. Typically, this is an interval of a 3- or 6-month period, based on instrument usage.
- 3) When an audiometer or transducer has had a shock, vibration, malfunction, or a repair or part replacement has been performed which potentially may have put the audiometer out of calibration.
- 4) Whenever user observations or patient results are the result of questionable operation of an audiometer.

Annual calibration:

It is recommended that an annual calibration be performed by a trained technician/ a competent laboratory, knowledgeable and up to date in the relevant requirements of ANSI/ASA and/or IEC and the device specifications. The calibration procedure will validate all relevant performance requirements given in ANSI/ASA and/or IEC.

5 Technical specifications

5.1 AT235 Technical specifications

General						
Medical CE-mark:	The CE-mark in combination with MD symbol indicates that Interacoustics A/S					
	meets the requirements of t	he Medical Device Regulation (EU) 2017/745. Approval				
	of the quality system is mad	le by TÜV – identification no. 0123.				
Standards:	Safety:	IEC 60601-1, Class I, Type B applied parts.				
	EMC:	IEC 60601-1-2.				
	Impedance:	IEC 60645-5 (2004)/ANSI S3.39 (2012). Type 1.				
	Audiometer:	IEC60645-1 (2012)/ANSI S3 6 (2010) Type 4				
Operation	Temperature:	$15 - 35 ^{\circ}\text{C}$				
environment:	Relative Humidity:	30 - 90%.				
	Ambient Pressure:	98kPa - 104kPa				
	Warm-up Time:	1 minute				
Display	10 inch high resolution color	r display 1024x600				
Transport & Storage:	Storage Temperature:					
Transport & Otorage.	Transport Temperature					
	Rel Humidity:	$-20 - 50^{\circ}$				
Internal storage	FOO alights and FO 000 accord	10 – 95%				
Internal Storage	500 clients and 50.000 sess	CR2022 2V 220mAb Li Not conviscable by year				
		CR2032 3V, 230MAN, LI. Not serviceable by user.				
PC control:	058:	Input/output for computer communication.				
		Data can be sent to, saved on the PC, and stored in				
Thormal printor		Thermal MDT III/HM E200 printer with recording paper				
(Optional):	Type. MPT-III	in rolls. Print on command via USB				
(Optional).		Lies only apositied never supply unit model LIES65				
	LIES65-240250SPA3	2402505PA5.				
Power supply	02003-24020001 A0	Input: 100-240VAC 50/60HZ, 2.0 A.				
		οιιμαι. 24.0 VDO, 2.3Α.				
Dimensions	HxWxI	29 x 38 x 7 5 cm				
AT235 weight		2.5 kg				
Impedance measurin	a system	2.0 (g.				
Probe tone:	Frequency:	226 Hz 678 Hz 800 Hz 1000 Hz; pure tones; +1%				
	Level:	85 dB SPL (≈ 69 dB HL) ±1.5 dB.				
Air pressure:	Control					
, procedie:	Indicator	Measured value is displayed on the graphical display				
	Range:	-600 to +400 daPa. ±5%.				
	Pressure limitation:	-750 daPa and +550 daPa.				
	Pump Speed:	Automatic, Fast 300 daPa/s, Medium 200 daPa/s,				
		Slow 100 daPa/s, Very slow 50 daPa/s.				
Compliance:	Range:	0.1 to 8.0 ml at 226 Hz probe tone (Ear volume: 0.1 to				
		8.0 ml) and 0.1 to 15 mmho at 678, 800 and 1000 Hz				
		probe tone. All ±5%.				
Test types:	Tympanometry	Automatic, where the start and stop pressure can be				
51		user-programmed in the setup function.				
		Manual control of all functions.				
	Eustachian tube function 1	Williams test.				
	- Non perforated eardrum					
	Eustachain tube function 2	Toynbee test.				
	- Perforated eardrum					
	Eustachian tube function 3	Continuous sensitive impedance measurement.				
	- Patulous Eustachian tube	·				

Reflex functions						
Signal sources:	Tone - Contra, Reflex:	250, 500, 1000, 2000, 3000, 4000, 6000, 8000 Hz,				
-		Wide Band, High and Low pass.				
Tone - Ipsi, Reflex:		500, 1000, 2000, 3000, 4000 Hz wide band, high and low pass.				
	NB noise – Ipsi, Reflex	1000, 2000, 3000, 4000 Hz.				
	Stimulus duration:	750 ms.				
	Reflex Acceptance	Adjustable between 2% and 6%, or 0.05 – 0.15 ml				
		change of ear canal volume.				
	Intervals	Down to 1 dB step size.				
Intensity max		90, 100, 120 dBHL.				
Outputs:	Contra Earphone:	TDH39 earphone, DD45 earphone, IP30 single contra				
		insert and/or IP30insert for Reflex measurements.				
	Ipsi Earphone:	Probe earphone incorporated in the probe system for				
		Reflex measurements.				
	Probe connection	Connection of the electrical and air system to the				
		probe.				
Test types:	Manual Reflex	Manual control of all functions.				
	Automated Reflex	Single intensities.				
		Reflex growth.				
	Reflex Decay	Automatic, 10 dB above threshold and manually				
		controlled with stimulus durations of 10.				
	Reflex latency	Automated, first 300 ms from stimulus start.				

Audiometer functions	5	
Signals:	Frequencies Hz:	Intensities dB HL:
_	125	-10 to 70
	250	-10 to 90
	500	-10 to 100
	1000	-10 to 100
	2000	-10 to 100
	3000	-10 to 100
	4000	-10 to 100
	6000	-10 to 100
	8000	-10 to 90
Test types	Auto Threshold De	termination (Modified Hughson Westlake).
	Auto testing: durati	on 1-2 s adjusted in 0.1 s intervals.

5.2 Calibration properties

•	•				
Calibrated transducers:	Contralateral earphone:	Telephonic TDH39/DD45 with a static force of 4.5N ±0.5N.			
	Probe system:	Ipsilateral Earphone: is integrated in the probe system.			
		Probe frequency transmitter and receiver and			
		pressure transducer is integrated in the probe system.			
Accuracy:	General	The instrument is made and calibrated to be within			
		and better than the tolerances required in the			
		specified standards:			
	Reflex frequencies:	±1%.			
	Contralateral reflex and	3 dB for 250 to 4000Hz and 5 dB for 6000 to 8000Hz.			
	Audiometer tone levels:				
	Ipsilateral reflex tone	5 dB for 500 to 2000Hz and +5/-10 dB for 3000 to			
	levels:	4000Hz.			
	Pressure measurement:	5% or 10 daPa, whichever is greater.			
	Compliance				
	measurement:	5% or 0.1 ml, whichever is greater.			
Stimulus presentation	Reflexes:	ON-OFF ratio ≥ 70 dB			
control:		Rise time = 20 ms			
		Fall time = 20 ms			
		A weighted SPL in Off = 31 dB			
Impedance calibration	properties				
Probe tone	Frequencies:	226 Hz 1%, 678 Hz 1%, 800 Hz 1%, 1000 Hz 1%.			
	Level:	85 dB SPL 1.5 dB measured in an IEC 60318-5			
		acoustic coupler. The level is constant for all volumes			
		in the measurement range.			
	Distortion:	Max 1% THD.			
Compliance	Range:	0.1 to 8.0 ml.			
	Temperature dependence:	-0.003 ml/C .			
	Pressure dependence:	-0.00020 ml/daPa.			
	Reflex sensitivity:	0.001 ml is the lowest detectable volume change			
	Reflex artifact level:	≥95 dB SPL (measured in the 711 coupler, 0.2 ml, 0.5			
		ml, 2.0 ml & 5.0 ml hard walled cavities).			
	Temporal reflex	Initial latency = 35 ms (5 ms).			
	characteristics:	Rise time = 42 ms (5 ms).			
	(IEC60645-5 clause 5.1.6)	Terminal latency = 23 ms (5 ms).			
		Fall time = $44 \text{ ms} (5 \text{ ms})$.			
		Overshoot = max. 1%.			
		Undershoot = max. 1%.			
Pressure	Range:	Values between -600 to +400 daPa can be selected in			
		the setup.			
	Safety limits:	-750 daPa and +550 daPa, 50 daPa.			
Barometric pressure	The barometer pressure	Admittance can vary inside: ± 4%.			
	chances influence on the	The pressure accuracy is: +10 deDe or 10%			
	impedance measurement	whichever is greater			
	in the specified range				
	(97300 – 105300 Pascal).				
1					

Height above sea level	The pressure s	sensor used,	is a different	tial/gauge type, which means, it measures			
	Probe tones	0 meters	500 meters	1000 meters	2000 meters	e sea level. 4000 meters	
	226 Hz	1.0 mmho	1.06 mmho	1.13 mmho	1.28 mmho	1.65 mmho	
	678 Hz	3.0 mmho	3.19 mmho	3.40 mmho	3.85 mmho	4.95 mmho	
	800 Hz	3.54 mmho	3.77 mmho	4.01 mmho	4.55 mmho	5.84 mmho	
	1000 Hz	4.42 mmho	4.71 mmho	5.01 mmho	5.68 mmho	7.30 mmho	
	The pressure accuracy is: ±10 daPa or 10%, whichever is greater. To minimize the influence of temperature, barometer pressure, humidity, and height above sea level, it always recommended to calibrate the unit in the local positions						
Temperature	The temperature has no theoretic impact on the impedance calculation, but the temperature has influence on the electronic circuits. This temperature influence for the standard specified temperature range (15-35 °C) is inside: Admittance can vary inside: $\pm 5\%$, ± 0.1 cm ³ , $\pm 10^{-9}$ m ³ /Pa·s, whichever is greater.						
Reflex calibration star	idards and spe	ectral prope	rties:				
General	Specifications	for stimulus	and audiometer signals are made to follow IEC 60645-5				
Contralateral earphone	Pure tone:		ISO 389-1 for TDH39 and ISO 389-9 for IP30.				
	Wide Band noise (WB): Spectral properties:		Interacoustics Standard. As "Broad band noise" specified in IEC 60645-5, but with 500 Hz as lower cut-off frequency.				
	Low Pass nois Spectral prope	se (LP): erties:	Interacoustics Standard. Uniform from 500 Hz to 1600 Hz, 5 dB re. 1000 Hz level.				
	High Pass nois Spectral prope	se (HP): erties:	Interacoustics Standard. Uniform from 1600 Hz to 10KHz, 5 dB re. 1000 Hz level.				
Ipsilateral Earphone	Pure tone:		Interacoustics Standard.				
	Wide Band no Spectral prope	ise (WB): erties:	Interacoustics Standard. As "Broad band noise" specified in IEC 60645-5, but with 500 Hz as lower cut-off frequency.				
	Low Pass nois Spectral prope	se (LP): erties:	Interacoustics Standard. Uniform from 500 Hz to 1600 Hz, 10 dB re. 1000 Hz level.				
	High Pass nois Spectral prope	se (HP): erties:	Interacoustics Standard. Uniform from 1600 Hz to 4000 Hz, 10 dB re. 1000 Hz				
	General about	levels:	The actual depend on	sound pressur the volume of	e level at the ε the ear.	eardrum will	
The risk of artifacts at h reflex detection system.	igher stimulus I	evels in refle	x measureme	ents are minor	and will not ac	tivate the	

Reference values for stimulus calibration

[dB re. 20 µPa] [dB re. 20 µPa] [dB re. 20 µPa] [dB re. 20 µPa] [dB re. 20 µPa] [calibration control of the sear canal [calibration control of the search of	atton for 9/DD45 ones MX41/AR 51 in
Iso 389-1 (Interacoustics Standard) Iso 389-9 (Interacoustics Standard) Iso 389-9 (Interacoustics Standard) Interacoustics Standard Interacoustics Standard Interacoustics Standard Interacoustics Standard Interacoustics Standard Interacoustics Standard Interacoustics Standard Interacoustics Standard Interacoustics Standard Interacoustics Standard Interacoustics Standard Interacoustics Standard Interacoustics Standard Interacoustics Standard Interacoustics Standard Interacoustics Standard Interacoustics Standard Iso 389-9 (Interacoustics Standard Interacoustics Standard Iso 389-9 (Interacoustics Standard Iso 389-4 (ISO 8798)	
[Hz] TDH39 IP30 DD65 v2 DD45 Probe NB Stimulus Correction Values	
125 45 26 30,5 47.5 41 4 3	
250 25.5 14 17 27 24.5 4 5	
<u>500</u> 11.5 5.5 8 13 9.5 4 9.7 5.3 7	
1000 7 0 4,5 6 6.5 6 9.7 5.3 15	
1500 6.5 2 2,5 8 5 6 21 (16	00 Hz)
2000 9 3 2,5 8 12 6 11.7 3.9 26	
	50 Hz)
	0011-)
	UU HZ)
$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	

*All figures in bold are Interacoustics Standard values.

Coupler types used for calibration

IMP:

TDH39 and DD45 is calibrated using a 6cc acoustic coupler made in accordance with IEC 60318-3, Ipsilateral earphone and probe tone are calibrated using a 2cc acoustic coupler made in accordance with IEC 60318-5.

General Information about specifications

Interacoustics continuously strives to improve its products and their performance. Therefore, the specifications can be subject to change without notice.

The performance and specifications of the instrument can only be guaranteed if it is subject to technical maintenance at least once per year. This should be conducted by a workshop authorized by Interacoustics.

Interacoustics puts diagrams and service manuals at the disposal of authorized service companies.

Enquiries about representatives and products may be sent to:

Interacoustics A/S	Phone:	+45 63713555
Audiometer Allé 1	Fax:	+45 63713522
5500 Middelfart	E-mail:	info@interacoustics.com
Denmark	http:	www.interacoustics.com

AT235 Maximums IMP										
	TDH39		DD65 v2		IP30		IPSI		DD45	
Center	Reading									
Freq.	Tone	NB								
[Hz]	[dB HL]									
125	80	65	85	70	100	85	70	60	75	60
250	100	85	100	85	110	100	85	75	100	85
500	120	100	110	95	115	105	100	85	120	100
750	120	105	115	100	120	110	100	85	120	105
1000	120	105	115	100	120	110	105	90	120	105
1500	120	105	115	100	120	110	110	90	120	100
2000	120	105	115	95	120	110	105	90	120	100
3000	120	105	115	100	120	110	95	90	120	105
4000	120	105	110	95	120	105	100	85	120	105
6000	120	100	100	85	105	100	85	80	110	90
8000	105	95	95	80	90	85	80	75	105	95
10000										
WB	-	115	-	115	-	115	-	95	-	120
LP	-	120	-	115	-	120	-	100	-	120
HP	-	115	-	115	-	120	-	95	-	120

5.3 Reference equivalent threshold values for transducers

5.4 Pin assignments

Inputs	Connector type	Electrical	properties	
Patient response	Jack6.3mm	Handheld Pin 1: GN Pin 2: Sig	l switch: ID jnal	3V through 10K is forced to ground when activated
Outputs:				
Phones, Left	Jack, 6.3mm	Voltage: Min. load Pin 1: CH Pin 2: CH	impedance: I1 GND I1 OUT	Up to 3V rms. by 10 ohm load 8 Pin 2:
Phones, Right	Jack 6.3mm	Pin 1: CH Pin 2: CH	I1 GND I1 OUT	Up to 3V rms. by 10 ohm load 8 Pin 2:
Phones, Contralateral	Jack 6.3mm	Voltage: Min. load Pin 1: CH Pin 2: CH	impedance: I1 GND I1 OUT	Up to 3V rms. by 10 ohm load 8
Probe system	15-pin D-sub	Pin 1	DSP 12C INTERRUPT	
	high density with air connection	Pin 2	GND	
		Pin 3	IPSI_OUT	
		Pin 4	GND CONTRA	_
		Pin 5	GND_Probe-mic	
		Pin 6	DSP_12C_SCLK	_
		Pin 7	GND	
		Pin 8	GND IPSI	_
		Pin 9	PROBETONE_OUT	
		Pin 10	MIC IN	_
		Pin 11	DSP_I2C_DATA	
		Pin 12	+5 Vprobe	
		Pin 13	CONTRA_OUT	
		Pin 14	GND PROB LONE	_
		Pin 15	MIC-(IN	
Data I/O:				
USB	USB type"B"	IOSB port	for communication	

5.5 Electromagnetic compatibility (EMC)

Portable and mobile RF communications equipment can affect the AT235. Install and operate the AT235 according to the EMC information presented in this chapter.

The AT235 has been tested for EMC emissions and immunity as a standalone AT235. Do not use the AT235 adjacent to or stacked with other electronic equipment. If adjacent or stacked use is necessary, the user should verify normal operation in the configuration.

The use of accessories, transducers, and cables other than those specified, except for servicing parts sold by Interacoustics as replacement parts for internal components, may result in increased EMISSIONS or decreased IMMUNITY of the device.

Anyone connecting additional equipment is responsible for making sure the system complies with the IEC 60601-1-2 standard.

Guidance and manufacturer's declaration - electromagnetic emissions					
The AT235 is intended for use in the electromagnetic environment specified below. The customer or					
the user of the AT235 s	the user of the AT235 should assure that it is used in such an environment.				
Emissions Test	Compliance	Electromagnetic environment - guidance			
RF emissions	Group 1	The AT235 uses RF energy only for its internal function.			
CISPR 11		Therefore, its RF emissions are very low and are not			
		likely to cause any interference in nearby electronic			
		equipment.			
RF emissions	Class B	The AT235 is suitable for use in all commercial, industrial,			
CISPR 11		business, and residential environments.			
Harmonic emissions	Complies				
IEC 61000-3-2	Class A Category				
Voltage fluctuations /	Complies				
flicker emissions					
IEC 61000-3-3					

Recommended separation distances between portable and mobile RF communications equipment and the AT235.

The AT235 is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the AT235 can help prevent electromagnetic interferences by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the AT235 as recommended below, according to the maximum output power of the communications equipment.

Rated Maximum output power of	Separation distance according to frequency of transmitter [m]				
transmitter	150 kHz to 80 MHz	80 MHz to 800 MHz	800 MHz to 2.5 GHz		
[W]	$d = 1.17\sqrt{P}$	$d = 1.17\sqrt{P}$	$d = 2.23\sqrt{P}$		
0.01	0.12	0.12	0.23		
0.1	0.37	0.37	0.74		
1	1.17	1.17	2.33		
10	3.70	3.70	7.37		
100	11.70	11.70	23.30		

For transmitters rated at a maximum output power not listed above, the recommended separation distance *d* in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where *P* is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer. **Note 1** At 80 MHz and 800 MHZ, the higher frequency range applies.

Note 2 These guidelines may not apply to all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects, and people.

Guidance and manu	Guidance and manufacturer's declaration - electromagnetic immunity					
The AT235 is intended	d for use in the electromagn	etic environment specified	below. The customer or the user			
of the AT235 should a	of the AT235 should assure that it is used in such an environment.					
Immunity Test	IEC 60601 Test	Compliance	Electromagnetic			
	Level		Environment-Guidance			
Electrostatic	+6 kV contact	+6 kV contact	Floors should be wood,			
Discharge (ESD)			concrete, or ceramic tile. If floors			
	+8 kV air	+8 kV air	are covered with synthetic			
IEC 61000-4-2			material, the relative humidity			
			should be greater than 30%.			
Electrical fast	+2 kV for power supply	+2 kV for power supply	Mains power quality should be			
transient/burst	lines	lines	that of a typical commercial or residential environment.			
IEC61000-4-4	+1 kV for input/output	+1 kV for input/output				
	lines	lines				
Surge	+1 kV differential mode	+1 kV differential mode	Mains power quality should be			
			that of a typical commercial or			
IEC 61000-4-5	+2 kV common mode	+2 kV common mode	residential environment.			
Voltage dips, short	< 5% <i>U</i> T	< 5% <i>U</i> T (>95% dip in	Mains power quality should be			
interruptions, and	(>95% dip in <i>U</i> T) for 0.5	UT)	that of a typical commercial or			
voltage variations on	cycle	for 0.5 cycle	residential environment. If the			
power supply lines			user of the AT235 requires			
	40% UT	40% UT (60% dip in	continued operation during			
IEC 61000-4-11	(60% dip in UT) for 5	UT) for	power mains interruptions, it is			
	cycles	5 cycles	recommended that the A1235 be			
	700/ / F	700/ / (T / 200/ din in	powered from an uninterruptable			
	70% 01 (20% din in / T) for 25		power supply of its ballery.			
	cycles	25 cycles				
	<5% IT	<5% IT				
	$(>95\% \text{ din in } / \pi)$ for 5					
	sec					
Power frequency	3 A/m	3 A/m	Power frequency magnetic fields			
(50/60 Hz)			should be at levels characteristic			
()			of a typical location in a typical			
IEC 61000-4-8			commercial or residential			
			environment.			
Notes IT is the A.O.		ation of the stant laws				

Note: *U*T is the A.C. mains voltage prior to application of the test level.

Guidance and manufacturer's declaration — electromagnetic immunity					
The AT235 is intended	The AT235 is intended for use in the electromagnetic environment specified below. The customer or the user				
of the AT235 should a	ssure that it is used in such	an environment,	1		
Immunity test	IEC / EN 60601	Compliance level	Electromagnetic environment –		
	test level		guidance		
			Portable and mobile RF		
			communications equipment		
			should be used no closer to any		
			cables, than the recommended		
			separation distance calculated		
			from the equation applicable to		
			the frequency of the transmitter.		
			Recommended separation		
			distance.		
Conducted RF	3 Vrms 150kHz to 80 MHz	3 Vrms	$d = 1, 2\sqrt{P}$		
			$d = 1, 2\sqrt{P}$ 80 MHz to 800 MHz		
Radiated RF	3 V/m	3 V/m	$d = 2, 3\sqrt{P}$ 800 MHz to 2,5 GHz		
IEC / EN 61000-4-3	80 MHz to 2,5 GHz		Where <i>P</i> is the maximum output		
			power rating of the transmitter in		
			watts (W) according to the		
			transmitter manufacturer and <i>d</i> is		
			distance in motors (m)		
			Field strengths from fixed RF		
			transmitters, as determined by an		
			electromagnetic site survey, (a)		
			should be less than the		
			compliance level in each		
			frequency range (b)		
			Interference may occur in the		
			the following symbol:		
			(2))		
NOTE1 At 80 MHz and	d 800 MHz, the higher frequ	uency range applies.			
NOTE 2 These guideli	nes may not apply in all sit	uations. Electromagnetic	propagation is affected by		
absorption and reflecti	on from structures, objects	, and people.			
(a) Field strengths from	Tixed transmitters, such as	base stations for radio (c	eliular/cordiess) telephones and		
theoretically with accu	racy. To assess the electro	magnetic environment du	le to fixed RE transmitters an		
electromagnetic site si	ineoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the				
AT235 is used exceeds the applicable RF compliance level above, the AT235 should be observed to verify					

AT235 is used exceeds the applicable RF compliance level above, the AT235 should be observed to verify normal operation, If abnormal performance is observed, additional measures may be necessary, such as re-orienting or relocating the AT235. (b) Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3 V/m.

To ensure compliance with the EMC requirements as specified in IEC 60601-1-2, it is essential to use only the following accessories:

ITEM	MANUFACTURER	MODEL
Power supply unit UES65-	Interacoustics	UES65-240250SPA3-
240250SPA3		
Clinical Probe	Interacoustics	Clinical probe system 1077
Diagnostic prob	Interacoustics	Diagnostic probe system 1077
DD45C Contra Headset DD45C	Interacoustics	DD45C
contra headset P3045		
DD65 v2 Passive attenuation	Interacoustics	DD65 v2
audiometric headset		
IP30 Insert Phone 10ohm single	Interacoustics	IP30C
DD45 Audiometric Headset P3045	Interacoustics	DD45
IP30 Insert Phone 10ohm set	Interacoustics	IP30

Conformance to the EMC requirements as specified in IEC 60601-1-2 is ensured if the cable types and cable lengths are as specified below:

Description	Length	Screened?
Mains Cable	2.0m	Unscreened
USB Cable	2.0m	Screened
Clinical Probe	2.0m	Unscreened
Diagnostic probe	2.0m	Unscreened
DD45C contra headset P3045	0.4m	Screened
DD65 v2 Passive attenuation	2.0m	Screened
audiometric headset		
IP30 Insert Phone 10ohm single	0.5m	Screened
contra		
DD45 Audiometric Headset P3045	0.5m	Screened
IP30 Insert Phone 10ohm set	0.5m	Screened

Procedura de achiziție nr. ocds-b3wdp1-MD-1680177467862 din 30.03.2023.

Către CENTRUL PENTRU ACHIZITII PUBLICE CENTRALIZATE IN SANATATE, mun.Chișinău, Republica Moldova, Chișinău bl. Grigore Vieru 22/2

Lista accesoriilor echipamentul oferit de la producator.

- Diagnostic Probe System
- Power supply unit UES65-240250SPA3
- Daily check cavity.
- DD65v2 Audiometric headset
- Cleaning cloth
- Assortment bag BET55

Data completării 09.06.2023

Cu stimă, administratorul SC Medica SRL,

Serghei Casminin.



Instrucțiuni de utilizare - RO







D-0133849-A - 2022/09

Cuprins

1		INTR	ODUCERE	1
	1.1	Despi	e acest manual	1
	1.2	Destir	nația de utilizare	1
	1.3	Contr	aindicații la efectuarea audiometriei de impedanță	1
	1.4	Descr	ierea produsului	2
	1.5	Despi	e avertismente și atenționări	3
2			MRALAREA SUNSTALAREA	1
~	2.1	Deza	mbalarea si inspectarea	4
	2.1	Marca		
	23	Instru	ctiuni importante privind siguranta	6
	24	Defec	tarea	
	2.5	Cone	viuni	، ع
	2.6	Cavita	átile de calibrare	8
	27	Schim	ibarea sistemului sondei	9
	2.8	Măsu	ri de precautie pentru sigurantă care trebuie luate când conectati instrumentul AT235	10
	2.9	Licent	a	13
	2.10	Despi	e Diagnostic Suite	13
3		INST	RUCȚIUNI DE OPERARE	14
	3.1	Manip	oularea și selectarea adaptoarelor auriculare	15
	3.2	Pornii	ea și oprirea instrumentului AT235	15
	3.3	Stare	a sondei	16
	3.4	Utiliza	area sistemului sondei standard și clinice	17
	3.5	Funcț	ionarea independenta a A1235	17
	3.5	5.1	Panoul de funcționarea independenta a A1235	17
	3.5	5.Z	Pornire	18
	3.5	5.3	Setarea instrumentului – limba, imprimanta, data și ora, etc	18
	3.5	5.4	Selectarea testului și a modulului	20
	3.5		Ecranele de test de timpanometrie	20
		3.5.5.1	Ecranul de test l'Imp	20
	200	3.3.3.Z	Ecranul de test de Rellex	22
	3.5	D.0 E 7	Ecrariul de lest de Audiometrie	24
	3.5	D./ E O	Sovo (Solvoro)	20
	0.0	5.0 E 0	Vizualizarea interioului acciunilar	20
	2.5	Eupot	Vizualizarea istoricului sesiurillor	21
	3.0	Funcț R 1	Configurarea alimentării PC ului	20
	3.0	8.7	Pornind de la OtoAccess®	20
	31	6.3	Pornind de la Noah 4	20
	31	6.3 6.4	Ranortarea defectiunilor	20
	21	8.5	Configurarea instrumentului	20
	37	uuu Itiliza	ornigararea instrumentata	∠9 ∢∆
	201 12 1	7 1	Folosirea IMP Svnc	30 מח
		7.2	Folosirea AUD Sync	30 32
	3.7	7.3	Sectiunea Sincronizare	34
	3.7	74	Încărcare client	04
	3.7	7.5	Descărcarea sesiunii	35
	500 A 10	- 617607		00

4	ÎNTREȚINEREA	
4.1	Proceduri generale de întreținere	
4.2	Proceduri generale de întreținere	
4.3	Curătarea vârfului sondei	
4.4	Referitor la reparare	
4.5	Garantie	
4.6	, Calibrarea periodică	

55
57
•••

1 Introducere

1.1 Despre acest manual

Acest manual este valabil pentru AT235 firmware 1.42. Produsul este fabricat de:

Interacoustics A/S Audiometer Allé 1 5500 Middelfart Danemarca

Tel.: +45 6371 3555 Fax: +45 6371 3522 E-mail: info@interacoustics.com Web: www.interacoustics.com

1.2 Destinația de utilizare

AT235 este un audiometru de impedanță automat cu audiometrie de screening inclusă adecvată pentru screening, precum și pentru diagnosticare. Programele de screening neonatal vor aprecia în mod special prezența timpanometriei cu ton de testare ridicat, ceea ce permite obținerea unor rezultate mai fidele ale timpanometriei la nou-născuți.

Timpanometrul AT235 este conceput pentru a fi utilizat de către un audiolog, un membru al personalului medical de la audiologie sau de către un tehnician instruit, într-un mediu lipsit de zgomote.

1.3 Contraindicații la efectuarea audiometriei de impedanță

- Stapedectomie recentă sau orice altă operație la urechea medie
- Secreții auriculare
- Traumă acută a canalului auditiv extern
- Disconfort (de ex. otită externă severă)
- Blocarea canalului auditiv extern
- Prezența acufenelor, hiperacuzia sau alt tip de sensibilitate la zgomotele puternice ar putea contraindica testarea în cazul utilizării unor stimuli de intensitate mare

Testarea nu trebuie efectuată la pacienții cu astfel de simptome fără aprobarea unui medic.

Inspecția vizuală pentru anomalii structurale evidente ale structurii și poziționării urechii externe, precum și a canalului urechii externe trebuie făcută înaintea testării.

1.4 Descrierea produsului

AT235 este alcătuit din următoarele piese:

Piese incluse



Instrumentul AT235

Sistem sondă clinică^{1,}

Sistem sondă diagnostic1,



Unitate de alimentare UES65

Căști contralaterale1

Verificați zilnic cavitatea CAT50 (Opțiuni) Cască audiometrică DD65v2 Răspuns pacient (Opțiuni) Set imprimantă (Opțiuni) Set de montare pe perete (Opțiuni)

Lavetă de curățare

Geantă trusă BET55

¹ Element aplicat în conformitate cu IEC60601-1

1.5 Despre avertismente și atenționări

În acest manual se vor folosi următoarele semnificații pentru avertizări, atenționări și observații:



AVERTIZARE indică o situație periculoasă care, dacă nu este evitată, poate cauza decesul sau accidentări grave.

ATENȚIE, utilizat împreună cu simbolul de alertă de siguranță, indică o situație periculoasă care, dacă nu este evitată, poate genera accidentarea minoră sau moderată.

OBSERVAȚIE se utilizează pentru a indica practici care nu au legătură cu vătămarea corporală.

MIMMI

2 Dezambalarea și instalarea

2.1 Dezambalarea și inspectarea

Verificați cutia și conținutul dacă nu prezintă deteriorări

La recepția instrumentului, verificați dacă pachetul nu prezintă urme de lovituri sau nu este deteriorat. În cazul în care cutia este deteriorată, aceasta trebuie păstrată până când conținutul pachetului a fost verificat din punct de vedere mecanic și electric. Dacă instrumentul este defect, contactati distribuitorul local. Păstrati materialele de transport pentru a fi inspectate de transportator si pentru reclamatia la asigurări.

Păstrați cutia pentru a o utiliza la un transport ulterior

AT235 este livrat în propria cutie de transport, care este concepută special pentru AT235. Vă rugăm să păstrați această cutie. Va fi necesară în cazul în care instrumentul trebuie trimis înapoi pentru lucrări de service.

Dacă sunt necesare lucrări de service, contactați distribuitorul local.

Raportarea imperfectiunilor

Inspectați înainte de conectare Înainte de a conecta produsul, acesta trebuie verificat încă o dată pentru depistarea eventualelor deteriorări. Tot corpul acestuia și accesoriile trebuie verificate vizual pentru a descoperi dacă există zgârieturi și piese lipsă.

Raportați imediat orice defecte

Orice piesă lipsă sau funcționare necorespunzătoare trebuie raportată imediat la furnizorul instrumentului împreună cu factura, numărul serial și un raport detaliat al problemei. La sfârsitul acestui manual veți găsi un

"Raport de retur" unde puteți descrie problema.

Vă rugăm să utilizati "Raportul de retur"

Utilizarea raportului de retur îi oferă tehnicianului de service informatiile necesare pentru investigarea problemei raportate. Fără aceste informații, ar putea fi dificil să se identifice defectiunea si să se efectueze reparatia dispozitivului. Vă rugăm să returnati întotdeauna aparatul cu un raport de retur completat, pentru a fi siguri că problema este remediată astfel încât să fiți satisfăcut.



Folosiți doar unitatea de alimentare specificată de tip UES65-240250SPA3
2.2 Marcaje

Pe instrument se găsesc următoarele marcaje:

Simbol	Explicație
★	Elemente aplicate de tip B. Elemente aplicate pe pacient care nu sunt conductoare și pot fi înlăturate imediat de pe pacient.
8	Consultați manualul cu instrucțiuni.
\mathbf{i}	WEEE (Directiva UE)
X	Acest simbol indică faptul că, atunci când utilizatorul final dorește să arunce acest produs, acesta trebuie trimis la unități de colectare separată pentru recuperare și reciclare.
CE	Marcajul CE în combinație cu simbolul MD indică faptul că Interacoustics A/S îndeplinește cerințele Reglementării privind Dispozitivele medicale (UE) 2017/745 Anexa I
0123	Aprobarea sistemului de calitate este dată de către TÜV – Număr de identificare 0123.
	Aparat medical
$\sim \sim$	Anul de fabricație
8	Nu refolosiți Piesele cum sunt adaptoarele auriculare și cele similare sunt pentru o singură utilizare
	Conexiune port de afișare – tip HDMI
	"PORNIT" / "OPRIT" (apăsat-apăsat)

2.3 Instrucțiuni importante privind siguranța

Citiți cu atenție și în totalitate acest manual cu instrucțiuni înainte de a folosi produsul





- Echipamentul extern conceput pentru conectare la intrarea de semnal, ieșirea de semnal sau alți conectori trebuie să respecte standardul IEC corespunzător (de exemplu IEC 60950 pentru echipamente IT). În aceste situații, se recomandă o unitate de izolare optică pentru îndeplinirea cerințelor. Echipamentele care nu respectă IEC 60601-1 nu trebuie păstrate în mediul în care se află pacientul, conform celor definite în standard (de obicei 1,5 m). Dacă aveți întrebări, contactați tehnicianul medical calificat sau reprezentantul local.
- 2. Acest instrument nu include niciun dispozitiv de separare la conexiunile cu PC-uri, imprimante, difuzoare active (Sistem electric medical). Se recomandă un izolator galvanic I pentru a îndeplini cerințele. Pentru configurarea în siguranță, consultați secțiunea 2.3.
- 3. Dacă instrumentul este conectat la un computer şi la alte echipamente ale unui sistem electric medical, asigurați-vă că curentul total de scurgere nu depăşeşte limitele de siguranța şi separațiile au putere dielectrică, spațiile de conturnare şi spațiile de aer necesare să îndeplinească cerințele conform IEC/ES 60601-1. Atunci când instrumentul este conectat la un PC sau un alt element similar, aveți grijă să nu atingeți PC-ul şi pacientul în acelaşi timp.
- 4. Pentru a evita riscul de electrocutare, acest echipament trebuie conectat numai la o sursă de alimentare cu împământare.
- 5. Nu utilizați o priză multiplă suplimentară și nici prelungitor. Pentru configurarea în siguranță, consultați secțiunea 2.3
- 6. Acest instrument conține o baterie cu litiu de dimensiunea unei monezi. Celula poate fi încărcată doar de către personalul de service. Bateriile pot să explodeze sau să cauzeze arsuri dacă sunt demontate, strivite sau expuse la foc sau temperaturi ridicate. Nu realizați un scurt-circuit.
- 7. Nu este permisă nicio modificare a acestui echipament fără autorizarea Interacoustics.
- 8. Interacoustics va oferi la cerere diagramele circuitelor, lista cu piesele componente, descrieri, instrucțiuni de calibrare sau orice alte informații care ajută personalul de service să repare acele piese ale acestui audiometru care sunt realizate de Interacoustics ca fiind reparabile de către personalul de service.
- 9. Pentru siguranță electrică maximă, opriți alimentarea cu curent a instrumentului atunci când nu îl utilizați.
- 10. Instrumentul nu este protejat de infiltrările dăunătoare de apă sau alte lichide. Dacă apar scurgeri de lichide, verificați instrumentul cu atenție înainte de utilizare sau trimiteți-l la service.
- 11. Nicio piesă a echipamentului nu poate fi reparată sau întreținută în timp ce este folosită pe pacient.



- 1. întotdeauna că spuma sau adaptorul auricular este montat corect. Adaptoarele auriculare și spuma sunt de unică folosință.
- 2. Instrumentul nu este conceput pentru a fi utilizat în medii expuse la scurgerile de lichide.
- 3. Instrumentul nu este conceput pentru a fi utilizat în medii bogate în oxigen sau împreună cu materiale inflamabile.
- 4. Verificați calibrarea dacă orice piesă a echipamentului este supusă la șocuri sau manipulare brutală.

NOTICE

- 1. Pentru a preveni defectarea sistemului, luați măsuri adecvate pentru a evita virușii de PC sau alte probleme similare.
- 2. Utilizați doar transductoare calibrate cu respectivul instrument. Pentru a identifica o calibrare validă, numărul de serie al instrumentului va fi marcat pe transductor.
- Deşi instrumentul îndeplineşte cerinţele CEM, se vor lua precauţii pentru evitarea expunerii inutile la câmpurile electromagnetice, ex. de la telefoanele mobile etc. Dacă dispozitivul se utilizează împreună cu un alt echipament, se va evita apariţia oricărei perturbări reciproce. Consultaţi şi menţiunile CEM din secţiunea 0
- 4. Utilizarea accesoriilor, traductoarelor și cablurilor diferite de cele specificate, cu excepția traductoarelor și cablurilor vândute de Interacoustics sau reprezentații săi poate rezulta în creșterea emisiilor sau reducerea imunității echipamentului. Pentru o listă a accesoriilor, traductoarelor și cablurilor care respectă cerințele, consultați secțiunea 0
- 5. În cadrul Uniunii Europene, este ilegal să aruncați deșeurile electrice și electronice ca resturi menajere



nesortate. Deșeurile electrice și electronice pot conține substanțe periculoase și, de aceea, trebuie colectate separat. Aceste produse vor fi marcate cu o pubelă tăiată, după cum se arată mai jos. Cooperarea utilizatorului este importantă, în scopul asigurării unui nivel ridicat de reutilizare și reciclare a deșeurilor electrice și electronice. Nereciclarea acestor deșeuri în mod adecvat poate pune în pericol mediul și, în consecință, sănătatea oamenilor.

6. În afara Uniunii Europene trebuie respectate reglementările locale atunci când aruncați produsul după durata sa de exploatare.

2.4 Defectarea



În cazul defectării produsului, protejarea pacienților, utilizatorilor și a celorlalte persoane de vătămări este importantă. Prin urmare, dacă produsul a cauzat sau ar putea cauza o astfel de vătămare, acesta trebuie izolat imediat.

Atât defectările periculoase, cât și cele inofensive, care se referă la produsul în sine sau la utilizarea acestuia, trebuie anunțate imediat la distribuitorul de unde a fost cumpărat produsul. Rețineți să includeți cât mai multe detalii posibile, de ex. tipul de vătămare, numărul de serie al produsului, versiunea software, accesoriile conectate și orice alte informații relevante.

În caz de deces sau incident grav legat de utilizarea dispozitivului, incidentul trebuie raportat imediat la Interacoustics și la autoritatea națională competentă.

Munul

2.5 Conexiuni

A second second						
1	Sondă	Conexiune dedicată pentru sondă				
2	LAN	LAN (Nu este folosit)				
3	USB B	Pentru imprimantă, mouse, tastatură, stick de memorie				
4	USB A	Pentru conexiunea la PC				
5	HDMI	Pentru monitor sau proiector extern				
6	8					
		Folosiți doar unitatea de alimentare specificată de tip UES65- 240250SPA3				
7	Intrare/ieșire declanșare	Opțiunea de declanșarea a implantului cohlear				
8	Pat. Resp. (Răspuns pacient)	Buton pentru răspuns pacient				
9	Right (Dreapta)	leșire audiometrie dreapta				
10	Left (Stânga)	leșire audiometrie stânga				
11	Contra	leșire traductor contra				

2.6 Cavitățile de calibrare

Puteți utiliza cavitățile cilindrice de 0,2 ml, 0,5 ml, 2,0 ml și 5 ml pentru verificarea validității calibrării sondei.

Pentru a efectua o verificare a calibrării, selectați un protocol care măsoară o timpanogramă.

Nu utilizați un adaptor auricular! Introduceți vârful sondei complet în cavitate. Efectuați măsurarea. Verificați volumul măsurat.

Toleranța permisă la valoarea volumului măsurat este de $\pm 0,1$ ml pentru cavități de până la 2 ml și $\pm 5\%$ cavități mai mari. Aceste toleranțe sunt valabile pentru toate frecvențele de ton ale sondelor.

Vă recomandăm insistent să calibrați sonda și contra casca cel puțin o dată pe an.

2.7 Schimbarea sistemului sondei

Schimbarea între sonda standard și cea clinică se face astfel:



1. Localizați conexiunea sondei din spatele unității.



2. Deschideți cele 2 încuietori împingându-le în lateral.



- 3. Schimbați cu celălalt sistem sondă.
- 4. Închideți cele 2 încuietori împingându-le spre centru.

2.8 Măsuri de precauție pentru siguranță care trebuie luate când conectați instrumentul AT235.

NOTICE

Vă rugăm să rețineți că, dacă se face conectarea la echipamente standard, cum ar fi imprimante și rețele, trebuie luate măsuri speciale de precauție pentru menținerea siguranței medicale.

OBSERVAȚIE: În cadrul măsurilor de protecție a datelor, asigurați-vă de conformarea cu următoarele puncte:

- 1. Utilizați sisteme de operare care beneficiază de suportul Microsoft
- 2. Asigurați-vă că sistemele de operare au aplicate remediile de securitate
- 3. Activați criptarea bazei de date
- 4. Folosiți conturi de utilizator și parole individuale
- 5. Securizați accesul fizic și la rețea pentru calculatoarele cu stocarea locală a datelor
- 6. Folosiți software actualizat pentru antivirus, firewall și anti-malware
- 7. Implementați o politică corespunzătoare de backup
- 8. Implementați o politică corespunzătoare de păstrare a jurnalelor

Respectați instrucțiunile de mai jos.

Fig 1. AT235 folosit cu sursă de alimentare UES65-240250SPA3 aprobată pentru uz medical.

Medical power supply AT235 alone

Fig. 2. AT235 utilizat cu transformatorul de siguranță aprobat medical și cu o conexiune cu fir la un computer.





Fig. 3. AT235 folosit cu sursă de alimentare UES65-240250SPA3 aprobată pentru uz medical și imprimare cu o imprimantă HM-E300/MPT-III.





Fișa de curent separabilă este folosită pentru deconectarea în siguranță a alimentării dispozitivului. Nu poziționați sursa de alimentare într-o poziție care să facă dificilă deconectarea dispozitivului.

2.9 Licența

Când primiți AT 235, acesta conține deja licența pe care ați comandat-o. Dacă doriți să adăugați alte licențe care sunt disponibile pentru AT235, contactați distribuitorul pentru o licență.

2.10 Despre Diagnostic Suite

La accesarea Meniu > Ajutor > Despre veți observa fereastra de mai jos. În această parte a software-ului puteți gestiona cheile de licențiere și puteți afla versiunile pentru Suite, Firmware și Compilare.

C as have been as a second	and a second		
Interacoustics	A/9		
Intera	coust	ICS	
Committe (La Selan	ncianțius 2009		
eternellens trett	na Uradiation in pr	checks by copyright see en modultion er Betricketion of	
and will be proved	artists of A, may result static under the mass	of it preserves the control of the c	
STRATEGICS.	1125		
tionine :			
License			
tikense :			
ticense Diagontic Sal			
License Diagonetic Sui Suite terrate			
Genne Diagonatic Sal Sala accon Bali accon			
Genne Disgonetic Sul Suite terme Reid terme			
Cleanise Diagnestic Sul Sufa accon Nationaccon Checkson			
ticense Okaginetik Sol Sulte terzze Tarij terzze Chechane	te 2.4.5 2.4.5525.5+69		

De asemenea, în această fereastră găsi secțiunea Sumă de verificare care este o caracteristică care vă ajută să identificați integritatea software-ului. Funcționează prin verificarea conținutului fișierului și folderului pentru versiunea dvs. de software. Aceasta folosește un algoritm SHA-256.

La deschiderea sumei de verificare veți găsi un șir de caractere și numere pe care îl puteți copia făcând clic dublu pe acesta.

3 Instrucțiuni de operare

Instrumentul se pornește prin apăsarea butonului ON (PORNIT) de pe unitate. Când utilizați instrumentul, respectați următoarele atenționări generale:



- 1. Utilizați aparatul numai conform instrucțiunilor din acest manual.
- 2. Utilizați numai adaptoare auriculare Sanibel de unică folosință, concepute entru a fi utilizate împreună cu acest instrument.
- 3. Utilizați întotdeauna un adaptor auricular nou pentru fiecare pacient, pentru a evita contaminarea încrucișată. Adaptorul auricular nu este conceput pentru a fi reutilizat.
- 4. Nu introduceți niciodată vârful sondei în conductul auditiv extern fără să atașați un adaptor auricular, deoarece puteți deteriora conductul auditiv extern al pacientului.
- 5. Țineți cutia cu adaptoare auriculare departe de pacient.
- 6. Asigurați-vă că introduceți vârful sondei astfel încât să fie fixat etanș, dar fără să vătămați pacientul. Este obligatorie utilizarea unui adaptor auricular adecvat și curat.
- 7. Asigurați-vă că utilizați numai intensități de stimulare acceptabile pentru pacient.
- Când aplicați stimuli contralaterali utilizând căștile cu fixare în ureche nu le introduceți și nu încercați în niciun fel să efectuați măsurători fără ca adaptorul auricular adecvat, cu fixare în ureche, să fie la locul său.
- 9. Curățați periodic pernița căștii utilizând un dezinfectant recunoscut.
- 10. Contraindicațiile la testare includ stapedectomie recentă sau operație la urechea medie, secreții auriculare, traumă acută a conductului auditiv extern, stare de disconfort (de exemplu otită externă severă) sau ocluzie a conductului auditiv extern. Testarea nu trebuie efectuată la pacienții cu astfel de simptome fără aprobarea unui medic.
- 11. Prezența acufenelor, hiperacuzia sau alt tip de sensibilitate la zgomotele puternice ar putea contraindica testarea în cazul utilizării unor stimuli de intensitate mare.

NOTICE

- Manipularea atentă a instrumentului, ori de câte ori este în contact cu un pacient, trebuie să aibă prioritate. În timpul testării este recomandată o poziționare stabilă, cu calm, pentru o acuratețe optimă.
- Instrumentul AT235 trebuie utilizat într-un mediu fără zgomot, astfel încât măsurătorile să nu fie influențate de zgomote acustice exterioare. Acest aspect poate fi stabilit de o persoană cu instruire adecvată în acustică. Standardul ISO 8253, Secțiunea 11, definește o încăpere fără zgomote pentru testarea audiometrică a auzului în acest îndrumar.
- 3. Se recomandă ca instrumentul să fie utilizat la o temperatură ambientală între 15°C / 59°F și 35°C / 95°F.
- 4. Căștile obișnuite și cele cu fixare în ureche sunt calibrate la AT235 folosirea traductorilor de la alt echipament necesită o nouă calibrare.
- 5. Nu curățați niciodată carcasa traductorului cu apă și nu introduceți instrumente nespecificate în traductor.
- 6. Nu lăsați aparatul să cadă pe jos și evitați orice impact. Dacă instrumentul cade pe jos sau este deteriorat în orice fel, returnați-l producătorului pentru a fi reparat și/sau calibrat. Nu utilizați instrumentul dacă suspectați că s-a deteriorat.
- 7. Deşi instrumentul îndeplineşte cerinţele CEM, se vor lua precauţii pentru evitarea expunerii inutile la câmpurile electromagnetice, de ex. de la telefoanele mobile etc. Dacă dispozitivul se utilizează împreună cu un alt echipament, se vor lua măsuri de precauţie pentru a evita apariţia oricărei perturbări reciproce.

3.1 Manipularea și selectarea adaptoarelor auriculare

Dacă utilizați sonda AT235 și contra casca CIR, trebuie să folosiți adaptoare auriculare Sanibel.



Adaptoarele auriculare Sanibel sunt pentru o singură utilizare și nu trebuie reutilizate. Reutilizarea adaptoarelor auriculare poate conduce la răspândirea infecției de la un pacient la altul.

Sonda și contra casca CIR trebuie prevăzută cu un adaptor auricular de tip și dimensiune adecvate, înainte de testare. Alegerea dvs. va depinde de dimensiunea și forma conductului auditiv extern și ale urechii. De asemenea, alegerea dvs. poate depinde de preferințele personale și de modul în care efectuați testul.



Când efectuați un test rapid de screening al impedanței, puteți alege un adaptor auricular cu vârful în formă de umbrelă. Adaptoarele auriculare cu vârful în formă de umbrelă sigilează conductul auditiv extern fără ca vârful sondei să pătrundă în conductul auditiv. Apăsați ferm adaptorul auricular pe conductul auditiv extern astfel încât pe tot parcursul testului să rămână etanșeizat.



Pentru o testare mai stabilă, recomandăm utilizarea unui cablu prelungitor cu un adaptor auricular în formă de ciupercă. Asigurați-vă că acest adaptor auricular este introdus complet în conductul auditiv extern. Adaptoarele auriculare în formă de ciupercă vă permit să efectuați testarea fără a atinge cu mâna instrumentul AT235. Astfel se reduce șansa apariției zgomotelor de contact care să perturbe măsurătoarea.

Consultați Ghidul rapid "Selectarea adaptorului auricular corect" inclus în documentul Informații suplimentare AT235 pentru o trecere în revistă a dimensiunilor și gamei de adaptoare auriculare.

3.2 Pornirea și oprirea instrumentului AT235

Porniți sau opriți AT235 apăsând pe ON (PORNIT) (1).

NOTICE

AT235 pornește în aproximativ 35 de secunde. Lăsați unitatea să se încălzească timp de 1 minut înainte de utilizare.

MMMM

3.3 Starea sondei

Starea sondei este indicată de culoarea luminii de pe panoul de comandă, sistemul sondei standard și sistemul sondei clinice. Mai jos sunt explicate culorile și semnificațiile acestora:



Niciun bec indicator



rezultând într-o clipire albastră sau

Instrumentul AT235 nu monitorizează starea sondei.

roșie.

3.4 Utilizarea sistemului sondei standard și clinice

Pentru a avea cele mai stabile măsurători, se recomandă să nu se țină sonda între degete în timpul măsurătorilor. În special măsurătorile de reflex acustic pot fi afectate de mișcările sondei.

3.5 Funcționarea independentă a AT235

3.5.1 Panoul de funcționarea independentă a AT235



	Nume	Descriere
1	ON (PORNIT)	PORNEȘTE și OPREȘTE instrumentul AT235
2	Shift	Shift este folosit pentru a accesa funcțiile secundare ale celorlalte taste.
3	Setup (Configurare)	Țineți apăsat Setup (Configurare) și folosiți rotița (19) pentru a selecta meniul Setup (Configurare) dorit, după care eliberați butonul Setup (Configurare) pentru a-l deschide.
4-13	Tastele pentru funcții	Cele 10 funcții pentru taste acționează funcțiile pentru care sunt afișate etichetele pe ecran.
14	Teste	Țineți apăsat Test și folosiți rotița (19) pentru a selecta protocolul dorit sau audiometrie sau modulul impedanță. Eliberați butonul Test pentru a face selecția.
15	Sesiune nouă	Șterge datele și începe o nouă sesiune în modulul curent.
16	Clienți	Apăsați butonul Clienți pentru a deschide o fereastră în care un client poate fi selectat, editat sau creat. De asemenea, pot fi vizualizate sesiunile din istoric.
17	Save (Salvare)	Salvează sesiunea curentă pentru modulul curent.
18	Imprimare	Imprimă sesiunea care se regăsește pe ecran.
19	Rotiță	Folosită pentru controlul manual al pompei, precum și pentru derularea prin meniuri și selectarea posibilităților. În modulul audiometrie, rotița controlează intensitatea stimulului.

20	Tymp (Timp)	Selectează sau de-selectează testul timpanogramă din protocol.
21	Reflex	Selectează sau de-selectează un test reflex din protocol. Dacă este necesar un test cu reflexele ipsilateral sau contralateral este adăugat automat la protocol.
22	Comutatorul de ton, Enter, Start/stop	În audiometrie este comutatorul de ton. La timpanometrie, acesta întrerupe sau pornește funcția de pornire automată și funcționează ca buton de oprire și pornire atunci când sonda este într-o ureche. La meniurile care necesită introducerea de text, comutatorul de ton este folosit pentru a realiza selecțiile.
23	Right (Dreapta)	Selectează urechea dreaptă pentru testare.
24	Left (Stânga)	Selectează urechea stângă pentru testare.

3.5.2 Pornire

AT235 va încărca întotdeauna ultimul protocol de timpanometrie folosit ca punct de start.

3.5.3 Setarea instrumentului – limbă, imprimantă, data și ora, etc.

În timp ce țineți apăsat butonul "Setup" (Configurare) (3), folosiți rotița (19) pentru a selecta setările Instrumentului și eliberați butonul "Setup" (Configurare) (3) pentru a le deschide.

Setup
Instrument settings
Common Settings - IMP
Instrument protocol settings
Protocol settings
Manage protocols

Pentru schimbarea limbii de utilizare a sistemului, țineți apăsat butonul Language (Limbă) (6) folosind rotița (19) pentru a selecta limba dorită. AT235 trebuie repornit pentru ca modificarea să fie făcută.

Folosiți rotița (19) pentru a pre-selecta Display light (Lumină afișaj) (A), LED light (Lumină LED) (B), Date and time (Data și ora) (C) și Printer type (Tipul imprimantei) (D). Pentru a face modificări la Display light (Lumină afișaj), LED light (Lumină LED) și Printer type(Tipul imprimantei), țineți apăsat butonul Change (Modificare) (7) în timp ce învârtiți rotița (19).

Instrument set	tinge							
License: SR: 3	4567290		Det	et / Tittee				
ALC NOT		018UNLESPIPEPPINEL/L21	W. Title			C	27-01-201	12:54:10
THE PART.		ILMSTMMVTAXDPSLYSR3YW	(S Prin	tter				
1104			Parte	Am		D	101	PGL 3
Chickey Julie A	1 10 1000	0	- Printe				- 3 Cal	DE CHY
LED Agre 📙	U U							
	100							
	E				_		-	
Client	Install Language	Chang					Back	

În cazul în care AT235 este conectat la Diagnostic Suite, computerul dvs. va actualiza automat data și ora. Actualizarea automată a datei și orei este făcut prin apăsarea butonului Change (Modificare) (7) în timp ce pre-selectați Date and time (Data și ora) (C). Astfel obțineți acces la ecranul de mai jos. Folosiți rotița (19) pentru a selecta ziua, luna, anul, ora sau minutele. Folosiți butoanele Change - (Modificare -) și Change + (Modificare +) (9 și 10) pentru a modifica numărul. Apăsați butonul Set (Setare) (13) pentru a păstra modificările și a seta data și ora sau apăsați butonul Back (Înapoi) (12) pentru a respinge orice modificare făcută.

CONTRACT SPIC 34567200		Date / Three	
	S18JRLESHPUWHVEL7L2TYV	Time	27-01-2014 12:32:31
	ELMOTIMAVTAXEP9LY9R3YVW5	Printer	CTrees Condition and Color Man
44		Provide Super-	I HEALT
nelav lyte:		Printing strike model	3.Gatar OPE
	Set Clock		
	M 1 2014	11 8	

3.5.4 Selectarea testului și a modulului

În timp ce apăsați butonul "Tests" (Teste) (14), folosiți rotița (19) pentru a selecta oricare dintre protocoale sau un modul diferit. Eliberați rotița (19) pentru a face selecția.

3.5.5 Ecranele de test de timpanometrie

După pornirea instrumentului AT235 aveți deja selectat ultimul protocol impedanță folosit și gata pregătit pentru a începe testul. Ecranul afișat acum va fi numit ca ecranul de test. Următoarele paragrafe descriu ce informații și funcții se găsesc pe ecranele de test timpanogramă, reflex și audiometrie.



3.5.5.1 Ecranul de test Timp

Data
Scale
Compensated
¥
Child
8 daPa
Manual
Auto

- G Apăsați Prev. (Ant.) Test pentru a selecta testul anterior din lista protocolului.
- H Apăsați Next Test (Testul următor) pentru a selecta testul următor din lista protocolului.
- I Apăsați Include pentru a selecta sau Exclude pentru a de-selecta caseta de bifare de la testul vizualizat în acel moment (F) și astfel îl puteți include sau exclude de la testare.
- J Atunci când se fac mai multe încercări de măsurătoare, apăsând Data puteți alege ce set de date să fie vizualizat. Doar datele vizualizate pot fi salvate într-un client.
- K Dacă apăsați Scale (Scală) puteți modifica scala axei de conformitate din timpanogramă.
- S Dacă apăsați Compensated (Compensat) puteți activa sau dezactiva compensarea timpanogramei conform cu volumul estimat al canalului urechii.
- M Dacă apăsați Y puteți comuta între vizualizarea timpanogramelor denumite Y, B sau G. Cea afișată în respectivul moment se recunoaște după litera mare din eticheta butonului.
- N Dacă apăsați Child (Copil) se activează un tren care se mișcă în partea de jos a ecranului pentru a ajuta la distragerea atenției copilului în timp ce se face măsurătoarea.
- N Dacă apăsați 0 daPa are ca rezultat setarea rapidă a presiunii ambientale ca presiune țintă și pomparea rapidă înapoi la 0 daPa. Funcția este disponibilă doar în modul manual (O).
- O Activarea modului manual la testul timpanogramă permite setarea manuală a presiunii cu rotița (19). Apăsați atenuatorul (22) pentru a începe și opri înregistrarea în modul manual. Oprirea modului manual și revenirea la testarea automată se face apăsând pe Auto

Munul



3.5.5.2 Ecranul de test de Reflex

Bara superioară a tastelor software indică funcția în modul auto, în timp ce bara inferioară indică funcția pentru tastele software în modul manual.





- U Dacă apăsați butonul săgeată sus se mută selecția reflexului la rândul de reflex anterior. Mutarea selecției în lateral se face cu rotița (19).
- V Dacă apăsați butonul săgeată jos se mută selecția reflexului la rândul de reflex următor. Mutarea selecției în lateral se face cu rotița (19).
- W Dacă apăsați Change Status (Modificare stare) se schimba starea reflexului selectat în acel moment (Q). Verde indică faptul că un reflex este prezent în timp ce roșu/albastru indică faptul că reflexul nu este prezent.
- X Dacă țineți apăsat butonul Enlarge (Mărire) se va afișa reflexul curent selectat (Q) în cel mai ridicat grad de detaliere posibil.
- Y Dacă apăsați Child (Copil) se activează un tren care se mișcă în partea de jos a ecranului pentru a ajuta la distragerea atenției copilului în timp ce se face măsurătoarea.

În modul manual (O), butonul Add Stimulus (Adăugare stimul) este disponibil și permite adăugarea rândurilor cu reflex nou.

Z În modul manual (O), butonul Add Level (Adăugare nivel) este disponibil și permite includerea intensităților suplimentare de testare.



3.5.6 Ecranul de test de Audiometrie



3.5.7 Pornirea și oprirea unui test timpanometric

După pornire, AT235 este pregătit pentru a începe automat o măsurătoare imediat ce detectează că sonda se află în ureche. Atunci când sona se află în ureche, testul poate fi oprit manual (sau pus pe pauză) și pornit din nou prin apăsarea butonului "Start/stop" (22) sau prin apăsarea butonului sondei. Atunci când sonda este scoasă din ureche, testul poate fi oprit (ca și cum ar fi fost pus pe pauză înaintea introducerii

sondei) sau pornit prin apăsarea butonului "Start/Stop" (22). Folosirea butonului sondei în timp ce sonda este în afara urechii va avea ca rezultat schimbarea urechii selectate și în același timp restabilirea funcției automat de start dacă este cazul.

3.5.8 Save (Salvare)

Apăsați "Save" (Salvare) (17) pentru a intra în ecranul de salvare.

Clients	
ID: 333333 Name: Carrie Harris	
ID: 111111 Name: Paul Smith	
ID: 22222 Name: Pam Mitchell	
ID: Name: NoName	

Folosiți rotița (19) pentru a selecta un client din listă și apăsați "Enter" (22) sau apăsați "Save" (Salvare) (13) pentru a confirma că datele trebuie salvate pentru clientul selectat. Înaintea salvării sesiunii, puteți edita un client existent sau puteți crea un client nou apăsând pe butonul Edit (Editare) (5) sau New (Nou) (6). Procesul de introducere a detaliilor clientului este descris mai jos:



Folosiți rotița (19) pentru a derula și folosiți "Enter" (22) pentru a selecta numerele care să fie introduse pentru ID-ul clientului. Apăsați butonul "Next" (Următor) (13) pentru a continua.



Folosiți rotița (19) pentru a derula și folosiți "Enter" (22) pentru a selecta litera care să fie introdusă la prenumele clientului. Funcțiile ștergere, înapoi, shift, litere mari și spațiu se găsesc pe butoanele tastaturii software (de la 4 la 8). Apăsați butonul "Next" (Următor) (13) pentru a continua.



Folosiți rotița (19) pentru a derula și folosiți "Enter" (22) pentru a selecta litera care să fie introdusă la numele de familie al clientului. Funcțiile ștergere, înapoi, shift, litere mari și spațiu se găsesc pe butoanele tastaturii software (de la 4 la 8). Apăsați butonul "Done" (Realizat) (13) pentru a continua.

3.5.9 Vizualizarea istoricului sesiunilor

Apăsați butonul "Clienți" (Clienți) (16) și folosiți rotița (19) pentru a derula printre clienți. Selectați clientul apăsând butonul "Select" (13) și apare o listă cu sesiunile disponibile. Folosiți din nou rotița (19) pentru a evidenția sesiunea care trebuie selectată. Apăsați butonul "View" (Vizualizare) (13) pentru a afișa sesiunea istorică într-o fereastră separată.

Clients	Clients - Select settings			
ID: 333333 Name: Carrie Harris	^{DMP} 12-09-2013 Start time: 12:32			
ID: 111111 Name: Paul Smith	^{DMP} 12-09-2013 Start time: 12:32			
ID: 22222 Name: Pam Mitchell	IMP 12-09-2013 Start time: 12:33			
ID: Name: NoName				

Folosiți butonul "Next" (Următor) (13) pentru a parcurge testele din cadrul sesiunii. Reveniți la ecranul de test apăsând "Back" (Înapoi) de trei ori.

3.6 Funcționarea în modul Sync (disponibil doar cu Diagnostic Suite)

NOTICE

3.6.1 Configurarea alimentării PC-ului

Dacă permiteți ca PC-ul să intre în modul repaus sau hibernare poate provoca defectarea programului Suite atunci când PC-ul pornește din nou. Din meniul Start al sistemului de operare, mergeți la **Control Panel | Power Options** (Panou de comandă | Opțiuni de alimentare) pentru a modifica aceste setări.

3.6.2 Pornind de la OtoAccess®

Pentru instrucțiuni privind lucrul cu baza de date OtoAccess®, consultați manualul de utilizare pentru OtoAccess®.

3.6.3 Pornind de la Noah 4

Pentru a porni Diagnostic Suite din Noah 4:

- 1. Deschideți Noah 4.
- 2. Căutați și selectați pacientul cu care doriți să lucrați.
- 3. Dacă pacientul nu se află încă în listă:
 - Faceți clic pe pictograma Add a New Patient (Adăugare pacient nou).
 - Completați câmpurile necesare și faceți clic pe **OK**
- 4. Faceți clic pe pictograma modulului **Diagnostic Suite** din partea de sus a ecranului.

Pentru mai multe instrucțiuni privind lucrul cu baza de date, consultați manualul de utilizare pentru Noah 4.

3.6.4 Raportarea defecțiunilor

În cazul în care Diagnostic Suite se defectează și detaliile pot fi înregistrate de sistem, fereastra Crash Report (Raportare defectare) apare pe ecranul de test (ca în imaginea de mai jos). Raportarea defecțiunilor oferă Interacoustics informații despre mesajul de eroare și informațiile suplimentare pot fi adăugate de utilizator care prezintă ce făcea înainte de a apărea defectarea pentru a ajuta la remedierea problemei.

Poate fi trimisă și o captură a ecranului software-ului.

Caseta "I agree to the Exclusion of Liability" (Sunt de acord cu excluderea răspunderii) trebuie bifată înainte ca raportul defectării să fie trimis prin Internet. Pentru utilizatorii fără o conexiune la Internet, raportul defectării poate fi salvat pe o unitate externă pentru a fi trimis de la un alt calculator cu o conexiune la Internet.



3.6.5 Configurarea instrumentului

Selectați Menu | Setup | Suite setup... (Meniu | Configurare | Configurare suită) pentru a deschide setările generale ale suitei.





Important: Atât la modulul AUD, cât și la modulul IMP, asigurați-vă că selectați "AT235 (versiunea 3)" (și nu "AT235", care se referă la versiunea veche).

3.7 Utilizarea modului SYNC

Modul de sincronizare permite un transfer de date cu un singur clic. Când apăsați Save sesiune pe instrument, sesiunea va fi transferat automat la Suite diagnostic. Începeți suita cu dispozitiv conectat.

3.7.1 Folosirea IMP Sync

Următoarele operațiuni sunt disponibile în secțiunea IMP a Diagnostic Suite:









11

Menu (Meniu) oferă acces la Setup (Configurare), Print (Tipărire), Edit (Editare) și Help (Ajutor) (consultați documentul Informații suplimentare pentru mai multe detalii privind elementele din meniu).

Modificarea limbii:

Menu | Setup | Suite Setup (Meniu | Configurare | Configurare suită) vă duce la o fereastră unde puteți modifica limba.

Print (Imprimare) permite tipărirea rezultatelor de pe ecran direct la imprimanta implicită sau într-un fișier pdf. Vi se va cere să selectați un model de tipărire dacă protocolul nu are unul asociat (consultați documentul Informații suplimentare pentru mai multe detalii privind expertul de tipărire).

Save & New Session (Salvare și sesiune nouă) salvează sesiunea curentă în baza de date Noah sau OtoAccess® (sau într-un fișier XML utilizat în mod obișnuit atunci când se lucrează în modul autonom) și deschide o sesiune nouă.

Save & Exit (Salvare și ieșire) salvează sesiunea curentă în baza de date Noah sau OtoAccess® (sau într-un fișier XML utilizat în mod obișnuit atunci când se lucrează în modul autonom) și iese din suită.

D-0133849-A – 2022/09 AT235 - Instrucțiuni de utilizare RO (**)** Interacoustics



Toggle Ear (Schimbă urechea) schimbă de la urechea dreaptă la cea stângă și invers.

List of Defined Protocols (Lista cu protocoale definite) permite vizualizarea protocolului folosit pentru sesiunile istorice.

Temporary setup (Configurare temporară) permite vizualizarea setărilor folosite pentru sesiunile istorice.

List of historical sessions (Lista istoricului sesiunilor) accesează istoricul sesiunilor pentru examinare sau Current Session (Sesiunea curentă).

Go to current session (Mergi la sesiunea curentă) vă aduce înapoi la sesiunea curentă.

Butonul **Report Editor** (Editor rapoarte) deschide o fereastră separată pentru adăugarea și salvarea notelor la sesiunea curentă.

Imaginea cu indicații hardware arată dacă a fost conectat hardware- ul. **Simulation mode** (Modul simulare) este indicat atunci când se utilizează software-ul fără hardware.

Lista protocoalelor arată toate testele care fac parte din protocolul folosit. Testul afișat în zona ecranului de test este evidențiat cu albastru sau roșu, în funcție de urechea aleasă.

Dacă în protocol sunt incluse mai multe teste decât intră în fereastră, va fi vizibilă o bară de defilare.

Un **semn de bifat de culoare albă** arată că datele (cel puțin unele) pentru acest test au fost salvate.

3.7.2 Folosirea AUD Sync

Următoarele operațiuni sunt disponibile în secțiunea AUD a Diagnostic Suite:







1

Menu (Meniu) oferă acces la Print (Tipărire), Edit (Editare), View (Vizualizare) Setup (Configurare) și Help (Ajutor) (consultați documentul Informații suplimentare pentru mai multe detalii privind elementele din meniu).

Modificarea limbii:

Menu | Setup | Language (Meniu | Configurare | Limbă) vă duce la o fereastră unde puteți modifica limba.

Print (Imprimare) permite tipărirea rezultatelor de pe ecran direct la imprimanta implicită sau într-un fișier pdf. Vi se va cere să selectați un model de tipărire dacă protocolul nu are unul asociat (consultați documentul Informații suplimentare pentru mai multe detalii privind expertul de tipărire).

Save & New Session (Salvare și sesiune nouă) salvează sesiunea curentă în baza de date Noah sau OtoAccess® (sau într-un fișier XML utilizat în mod obișnuit atunci când se lucrează în modul autonom) și deschide o sesiune nouă.

Save & Exit (Salvare și ieșire) salvează sesiunea curentă în baza de date Noah sau OtoAccess® (sau într-un fișier XML utilizat în mod obișnuit atunci când se lucrează în modul autonom) și iese din suită.

() Interacoustics

















8

••••



Speech test (Testul vocii) prezintă graficul sau tabelul vocii.

Extended range (Gamă extinsă) permite deschiderea celor mai ridicate intensități pentru traductorii selectați în acel moment.

List of Defined Protocols (Lista cu protocoale definite) permite vizualizarea protocolului folosit pentru sesiunile istorice.

Temporary setup (Configurare temporară) permite vizualizarea setărilor folosite pentru sesiunile istorice.

List of historical sessions (Lista istoricului sesiunilor) accesează istoricul sesiunilor pentru examinare sau Current Session (Sesiuneacurentă).

Go to current session (Mergi la sesiunea curentă) vă aduce înapoi la sesiunea curentă.

Single audiogram (Audiogramă unică) prezintă datele pentru dreapta și stânga într-o singură audiogramă

Synchronize channels (Sincronizare canale) blochează canalul 2 la canalul 1 astfel încât diferența de intensitate dintre canale să rămână constantă.

Edit mode (Modul editare) permite intrarea în audiogramă printr-un clic cu mouse-ul.

Mouse controlled audiometry (Audiometria controlată de mouse) permite prezentarea stimulului și salvarea în audiogramă cu ajutorul mouse-ului.

dB step size (Dimensiune pas dB) permite comutarea între dimensiunea pasului de 1, 2 și 5 dB.

Hide unmasked threshold (Ascunde limită nemascată) permite afișarea sau ascunderea limitelor nemascate pentru care există limite mascate.

Transfer permite actualizarea ecranului PC-ului cu date curente disponibile în modulul de audiometrie al AT235.



Counseling overlays (Suprapuneri de ghidare) pot fi activate pe un monitor separat al pacientului. Fonemele, exemplele de sunet, banana de voce, o indicație a gravității și valorile maxime testabile sunt disponibile ca suprapunere.



Butonul **Report Editor** (Editor rapoarte) deschide o fereastră separată pentru adăugarea și salvarea notelor la sesiunea curentă. Aceste note pot fi citite sau introduse în spațiul alb.

Imaginea cu indicații hardware arată dacă a fost conectat hardware- ul. **Simulation mode** (Modul simulare) este indicat atunci când se utilizează software-ul fără hardware.

3.7.3 Secțiunea Sincronizare

Dacă există mai multe sesiuni stocate în AT235 (la unul sau mai mulți pacienți), trebuie să utilizați secțiunea Sync (Sincronizare). Captura de ecran de mai jos arată Diagnostic Suite cu secțiunea SYNC deschisă (dedesubtul secțiunilor AUD și IMP, în colțul din dreapta sus).



Secțiunea SYNC oferă următoarele posibilități:



Client upload (Încărcare client) se utilizează pentru încărcarea clienților din baza de date (Noa sau OtoAccess) în AT235. Memoria internă a AT235 poate reține până la 500 de clienți și 50.000 de sesiuni.

Session download (Descărcare sesiune) se utilizează pentru descărcarea sesiunilor (audiogramă și/sau timpanometrie) stocate în memoria AT235 în Noah, OtoAccess sau XML (ultima variantă când Diagnostic Suite rulează fără o bază de date).

3.7.4 Încărcare client

Următoarea captură de ecran prezintă ecranul de încărcare a clienților:

·····	Ellert uptraf						
••••••••••••••••••••••••••••••••••••	Latrans	Field range	inters at Departu	Athe	Latrans	Dat name Rollane	
					-	3	
Syne							2 towarded

- În partea stângă este posibilă căutarea clientului în baza de date pentru transfer în baza de date utilizând diferite criterii de căutare. Utilizați butonul "Add" (Adăugare) pentru a transfera (încărca) clientul din baza de date în memoria internă a AT235. Memoria internă a AT235 poate reține până la 500 de clienți și 50.000 de sesiuni.
- În partea dreaptă sunt afişați clienții salvați în prezent în memoria internă a AT235 (hardware). Este posibilă ștergerea tuturor clienților sau clienți individuali utilizând butoanele "Șterge toți" sau "Ștergere".

3.7.5 Descărcarea sesiunii

Următoarea captură de ecran prezintă ecranul de descărcare a sesiunii:

Detailed	Session	download wt				
	н	First same	Last name	Seaster(1)	Status	Action
		liutiene		04-02-3014 (A)(C) 05-02-2014 (MP) 15-02-2014 (MP) 15-02-2014 (MP)	NassigClast	Paddant
	007	i=	Halper	10-02-2014 (MP)	Overhead complete	Patient
	-					8 mm and

Când apăsați butonul "Find client" (Căutare client) apare o fereastră ca cea de mai jos din care poate fi găsit clientul căutat. Apăsați butonul "Save" (Salvare) pentru a începe descărcarea sesiunilor acestui client în baza de date.

Munul

Unknown cli	ent				
14 ED 2014 (Au					
5-42-2014 DM					
18-10-2014 (DM					
18 42 2814 (IMP					
Select Client	target in data	baine :			
Select client	target in data	baixe		-	
ielect client	target in data	babe		Field Atty	
Select client Inne J Latines	target in data Antrane	bailer Bethdate	¥	Fredd Any Address	-
Scient client Last name Dania	target in data Antoane Dero	Derive Detrolate 21-05-1970	He 0101013.	Fredd Any Address Drejenvænget B	Zps DK-55
Select client Let new Denio Jones	target in data Fishane Deno Joan	Bethilds 31-05-1970 05-05-1962	H 0101013. -1	Freide Any Address Drejenvænget B Drejenvænget B	Zp DK St
Select client Last name Denio Jones Hugest	target in data Patnase Deno Joan Jaan	Datie Estimate 31-05-1970 05-05-1962 12-06-1975	le 0101013 -7 007	Freid Any Addres Drejensenget 8 Drejensenget 8	2a CK-56
Select client Let new Denio Jones Hugen	Fratnane Derro Joan Jaan Jaan	Derive Bethelate 31-05-1970 05-05-1952 12-06-1975 05-03-1954	la 0 f01013 -1 007 2	Freide Any Address Drejenvænget 8 Drejenvænget 8	26 06.55

4 Întreținerea

4.1 Proceduri generale de întreținere

Verificări de rutină (teste subiective)

Se recomandă efectuarea săptămânală a procedurilor complete de verificare de rutină pentru tot echipamentul utilizat. Aliniatele 1-9 trebuie respectate la utilizarea zilnică a echipamentului.

General

Scopul verificării de rutină este asigurarea funcționării corecte a echipamentului, verificarea stării calibrării și a funcționării corecte a traductoarelor și conexiunilor pentru a nu afecta negativ rezultatul testării. Procedurile de verificare trebuie efectuate cu audiometrul configurat într-o situație normală de lucru. Cele mai importante elemente ale verificărilor zilnice de performanță sunt testele subiective, iar aceste teste pot fi realizate cu succes doar de către un operator care nu are deloc probleme de auz. Dacă este folosită o cabină sau o cameră separată de testare, echipamentul trebuie verificat exact cum este instalat; poate fi necesar un asistent pentru realizarea procedurilor. Verificările vor acoperi conexiunile dintre audiometru și echipamentul din cabină, toate firele de conexiune, fișele și mufele din caseta de conectare (peretele camerei izolate fonic) trebuie examinate ca surse potențiale de intermitență sau conexiune incorectă. Condițiile de zgomot ambiental din timpul testelor nu trebuie să fie substanțial mai proaste decât cele din timpul utilizării normale a echipamentului.

- Curățați și examinați audiometrul și toate accesoriile.
- Verificați pernele căștii, fișele, cablul de alimentare și de accesorii dacă prezintă semne de uzură sau deteriorare. Piesele deteriorate sau foarte uzate trebuie înlocuite.
- Porniți echipamentul și lăsați-l să se încălzească pentru durata recomandată. Efectuați toate reglajele de configurare, conform cu specificațiile. La echipamentele alimentate de la baterie, verificați starea bateriei folosind metoda specificată de producător. Porniți echipamentul și lăsați-l să se încălzească pentru durata recomandată. Dacă nu este prevăzută nicio perioadă de încălzire, așteptați 5 minute să se stabilizeze circuitele. Efectuați toate reglajele de configurare, conform cu specificațiile. La echipamentele cu baterii, verificați starea bateriei.
- Verificați dacă numerele de serie al căștilor interne și vibratorului osos sunt corecte pentru utilizarea cu audiometrul.
- Verificați dacă ieșirea audiometrului este aproximativ corectă la conducția prin aer și os prin realizarea unei audiograme simplificate pe un subiect de test cu auzul bun; verificați dacă există schimbări.
- Verificați la nivel înaltă (de exemplu, nivelurile de auz de 60 dB la conducția prin aer și 40 dB pentru conducția osoasă) la toate funcțiile corespunzătoare (și la ambele căști interne) la toate frecvențele utilizate; ascultați dacă funcționează corect, nu există distorsiuni, clicuri, etc.
- Verificați dacă la toate căștile interne (inclusiv transductorul de mascare) și vibratorul osos există distorsiuni și intermitențe; verificați fișele și cablurile pentru intermitențe.
- Verificați dacă toate butoanele de comutare sunt fixate și dacă indicatoarele funcționează corect.
- Verificați dacă sistemul de semnal al subiectului funcționează correct
- Ascultați la nivel redus existența oricărui zgomot, murmur sau sunete nedorite (străpungerea apare atunci când un semnal intră pe alt canal) sau dacă există orice modificare a calității tonului pe măsura introducerii mascării.
- Verificați dacă atenuatorii atenuează semnalele peste toată gama lor completă și dacă atenuatorii care sunt concepuți pentru a funcționa în timp ce este transmis un ton nu prezintă zgomot electric sau mecanic
- Verificați dacă comenzile funcționează silențios și că niciun zgomot radiat de audiometru nu este auzit din poziția subiectului.
- Verificați circuitele de comunicație vocală cu subiectul, dacă există, aplicând proceduri similare cu



cele folosite la funcția tonală.

- Verificați tensionarea benzii căștilor și a benzii vibratorului osos. Asigurați-vă că îmbinările articulate revin liber fără o forță excesivă.
- Verificați benzile și îmbinările articulate ale căștilor cu atenuarea zgomotelor dacă prezintă semne de uzură sau de slăbire.

4.2 Proceduri generale de întreținere



- Întotdeauna opriți aparatul și deconectați-l de la sursa de alimentare înainte de a-l curăța
- Respectați cele mai bune practici locale și ghidurile de siguranță dacă sunt disponibile
- Folosiți o lavetă moale înmuiată puțin într-o soluție de curățat pentru a curăța toate suprafețele expuse
- Nu lăsați lichidele să vină în contact cu părțile metalice din interiorul căștilor
- Nu îl introduceți în autoclavă, nu îl sterilizați, nu introduceți instrumentul sau accesoriul în niciun lichid
- Nu utilizați obiecte dure sau ascuțite pentru a curăța nicio piesă a instrumentului sau un accesoriu
- Nu lăsați piesele care au intrat în contact cu lichide să se usuce înainte de a le curăța
- Adaptoarele auriculare din cauciuc sau spumă sunt piese pentru o singură utilizare
- Asigurați-vă că alcoolul izopropilic nu intră în contact cu niciun ecran al instrumentelor

Soluții recomandate pentru curățare și dezinfectare:

- Apă caldă cu soluție de curățare slabă, neabrazivă (săpun)
- Alcool izopropilic 70%

Procedura

- Curățați instrumentul ștergând carcasa cu o lavetă fără scame umezită cu soluția de curățare
- Curățați pernițele, comutatorul de ton al pacientului și alte piese cu o lavetă fără scame, ușor umezită cu soluție de curățare
- Asigurați-vă că umezeala nu ajunge în porțiunea difuzorului căștilor sau în zone similare

MMMM

4.3 Curățarea vârfului sondei

Sondă Diagnostic

Sondă Clinică

Pasul 1: Deșurubați capacul sondei și scoateți vârful sondei.



Pasul 2: Înșurubați capătul dur al periei de curățare în unul dintre tuburi din interior. Trageți ața de curățare complet prin tubul vârfului sondei. Curățați toate cele trei tuburi. Aruncați ața după utilizare.





Pasul 3: Înlocuiți vârful curățat.



Pasul 4: Montați sonda la loc.





(**()** Interacoustics

4.4 Referitor la reparare

Interacoustics se consideră responsabilă pentru valabilitatea marcajului CE, pentru efectele asupra siguranței, fiabilității și performanței echipamentului numai dacă:

- 1. operațiunile de montare, prelungirile, efectuarea unor noi reglaje, modificările și reparațiile sunt efectuate de către persoane autorizate
- 2. revizia aparatului se face la intervale de 1 an;
- 3. instalația electrică din încăperea respectivă respectă cerințele corespunzătoare; și
- 4. echipamentul este utilizat de către persoane autorizate, în conformitate cu documentația livrată de către Interacoustics

Clientul va contacta distribuitorul local pentru a stabili posibilitățile de service/reparații, inclusiv serviceul/reparația în locație. Clientul (prin intermediul distribuitorului local) trebuie să completeze **RAPORTUL DE RETUR** de fiecare dată când componenta/produsul este trimisă la service/reparații la Interacoustics.

4.5 Garanție

INTERACOUSTICS garantează că:

- AT235 nu conține niciun defect de material sau manoperă în cadrul utilizării normal și executării service-ului pentru o perioadă de 24 de luni de la data livrării de către Interacoustics către primul cumpărător.
- Accesoriile nu conțin niciun defect de material sau manoperă în cadrul utilizării normale și executării lucrărilor de service pentru o perioadă de nouăzeci (90) de zile de la data livrării de către Interacoustics către primul cumpărător.

Dacă orice produs necesită lucrări de service pe durata perioadei de garanție aplicabile, cumpărătorul va comunica direct cu centrul de service Interacoustics local pentru a stabili unitatea adecvată de reparație. Repararea sau înlocuirea va fi realizată pe cheltuiala Interacoustics, conform termenilor din această garanție. Produsul care necesită lucrări de service trebuie returnat prompt, ambalat adecvat și cu transportul plătit în avans. Pierderea sau deteriorarea la transportul de retur către Interacoustics va constitui riscul cumpărătorului.

În nicio situație Interacoustics nu va fi responsabilă pentru nicio daună accidentală, indirectă sau secundară în legătură cu achiziția sau utilizarea oricărui produs Interacoustics.

Acest lucru este valabil doar pentru cumpărătorul inițial. Această garanție nu este aplicabilă pentru niciun proprietar sau deținător ulterior al produsului. Suplimentar, această garanție nu este valabilă și Interacoustics nu va fi responsabilă pentru nicio pierdere rezultată din achiziționarea sau utilizarea oricărui produs Interacoustics care:

- a fost reparat de o persoană care nu este reprezentant autorizat de service Interacoustics;
- a fost modificat în orice mod, astfel încât, în opinia Interacoustics, s-au adus prejudicii stabilității sau fiabilității produsului;
- face obiectul utilizării abuzive, neglijenței sau unui accident sau numărul său serial sau de lot a fost modificat, șters sau îndepărtat; sau
- a fost întreținut sau utilizat incorect într-o modalitate care nu este conformă cu instrucțiunile furnizate de Interacoustics.

Această garanție înlocuiește orice altă garanție, explicită sau implicită, și orice altă obligație sau răspundere a Interacoustics. Interacoustics nu oferă și nu acordă, direct sau indirect, autoritate niciunui reprezentant sau altei persoane de a-și asuma în numele Interacoustics orice altă răspundere în legătură cu comercializarea produselor Interacoustics.
INTERACOUSTICS NU RECUNOAȘTE NICIO ALTĂ GARANȚIE, EXPLICITĂ SAU IMPLICITĂ, INCLUSIV NICIO GARANȚIE DE VANDABILITATE SAU DE FUNCȚIONARE ADECVATĂ PENTRU UN SCOP SAU APLICAȚIE ANUME.

4.6 Calibrarea periodică

Cerințele minime pentru calibrarea periodică:

Intervalul minim de calibrare de o dată (anual) la 12 luni.

Înregistrările tuturor calibrărilor trebuie păstrate într-un

fișier. Recalibrarea trebuie făcută după:

- 1) Trecerea unui anumit interval de timp (maxim 12 luni anual).
- La trecerea unei anumite durate de utilizare (ore de funcționare). Aceasta se bazează pe gradul de utilizare și mediu, la cererea proprietarului audiometrului. De obicei, acesta este un interval de 3 sau
 luni, în funcție de utilizarea instrumentului.
- 3) Atunci când audiometrul sau traductorul a suferit un șoc, vibrație, defectare sau s-a făcut o reparație sau înlocuire de piesă care ar fi putut decalibra audiometrul.
- 4) De fiecare dată când observațiile utilizatorului sau rezultatele pacientului par să ridice semne de întrebare privind funcționarea audiometrului.

Calibrarea anuală::

Se recomandă realizării calibrării anuale de către un tehnician instrui / personal de laborator competent, care deține cunoștințe la zi despre cerințele relevante ale ANSI/ASA și/sau IEC și specificațiile dispozitivului.

Procedura de calibrare va valida toate cerințele relevante de performanță oferite de ANSI/ASA și/sau IEC.

5 Specificații

5.1 Specificații tehnice AT235

General						
Marcajul medical CE:	Marcajul CE în combinație cu simbolul MD indică faptul că Interacoustics A/S îndeplinește cerințele Reglementării privind Dispozitivele medicale (UE) 2017/745 Anexa I. Aprobarea sistemului de calitate este dată de către TÜV – Număr de					
Standarde:	Sigurantă:	IEC 60601-1 Clasa I Tip B elemente aplicate				
	CEM:	IEC 60601-1-2				
	Impedantă:	IEC 60645-5 (2004)/ANSI S3.39 (2012). Tip 1				
	Audiometru:	IEC60645-1 (2012)/ANSI S3.6 (2010), Tip 4				
Mediul de operare:	Temperatură:	15 – 35 °C				
•	Umiditate relativă:	30 – 90%				
	Presiune ambientală:	98 kPa-104 kPa				
	Timp de încălzire:	1 minut				
Afişați afişajul	color de 10 inchi cu rezoluție mare de 1024x600					
Transport și	Temperatura de	0°C – 50°C				
depozitare:	depozitare:	-20 – 50 °C				
	Temperatura de transport: Umiditate relativă:	10 – 95%				
Depozit intern	500 de clienți și 50.000 de s	sesiuni				
Bateria internă		CR2032 3V, 230mAh, Li. Nu poate fi accesată de utilizator.				
Control PC:	USB:	Intrare/ieșire pentru comunicare cu computerul. Datele pot fi trimise și salvate în computer și stocate în OtoAccess™ (este necesar modulul de sincronizare Diagnostic Suite).				
Imprimanta termică (opțional):	Tip: MPT-III	Imprimantă termică MPT-III/HM-E300 cu role de hârtie pentru imprimare. Imprimare la comandă prin USB				
Sursa de alimentare	UES65-240250SPA3	Folosiți doar unitatea de alimentare specificată model UES65-240250SPA3 Intrare: 100-240VAC 50/60Hz, 2,0 A Ieșire: 24,0 VDC, 2,5 A				
Dimensiuni	ÎxIxL	29 x 38 x 7,5 cm				
Masa AT235		2,5 kg				

Sistemul de măsurar	Sistemul de măsurare a impedanței					
Ton sondă:	Frecvență:	226 Hz, 678 Hz, 800 Hz, 1000 Hz; tonuri pure; ±1%				
	Nivel:	85 dB SPL (≈ 69 dB HL) ±1,5 dB				
Presiunea aerului:	Control:	Automat.				
	Indicator:	Valoarea măsurată apare pe afișajul grafic.				
	Interval:	de la -600 la +400 daPa. 5%				
	Limită de presiune:	-750 daPa și +550 daPa.				
	Viteza pompei:	Automat, Rapid 300 daPa/s, Mediu 200 daPa/s, Încet				
		100 daPa/s, Foarte încet 50 daPa/s.				
Reactanță:	Interval:	De la 0,1 la 8,0 ml la un ton al sondei de 226 Hz				
		(volum auricular: de la 0,1 la 8,0 ml) și de la 0,1 la 15				
		mmho la 678, 800 și un ton al sondei de 1000 Hz.				
		Toate ±5%				
Tipuri de testare:	Timpanometrie	Automată, în care presiunea la pornire și la oprire				
		poate fi programată de utilizator cu ajutorul funcției de				
		configurare.				
		Control manual al tuturor funcțiilor.				

Munul

	Funcția 1 pentru trompa lui Eustachio - timpan	Testul Williams
	Funcția 2 pentru trompa lui Eustachio	Testul Toynbee
	Funcția 3 pentru trompa lui Eustachio - Trompa lui Eustachio este permeabilă	Măsurarea impedanței senzitive continue
Funcții de reflex		
Surse de semnal:	Ton – contra, reflex:	250, 500, 1000, 2000, 3000, 4000, 6000, 8000 Hz, Bandă largă, Trece sus și jos
	Ton – Ipsi, reflex:	500, 1000, 2000, 3000, 4000 Hz bandă largă, trece sus și jos.
	Zgomot NB – contra, reflex	250, 500, 1000, 2000, 3000, 4000, 6000, 8000 Hz
	Zgomot NB – ipsi, reflex	1000, 2000, 3000, 4000 Hz
	Durata stimulului:	750 ms
	Acceptarea reflexului	Reglabilă între 2% și 6%, sau schimbare de 0,05 – 0,15 ml în volumul canalului urechii.
	Intervale	Dimensiunea pasului redusă până la 1 dB.
	Intensitate max.	90, 100, 120 dBHL.
leşiri:	Căști Contra:	Căști TDH39, căști DD45, simple contra IP30 interne și/sau IP30 interne pentru măsurarea reflexului.
	Căști Ipsi:	Căști cu sondă încorporate în sistemul sondă pentru măsurarea reflexului.
	Conectarea sondei	Conectarea sistemului electric și de aer la sondă.
Tipuri de testare:	Reflex manual	Control manual al tuturor funcțiilor.
	Reflex automat	Intensități unice Creșterea reflexului
	Diminuarea reflexului	Automată, 10 dB peste prag și controlat manual cu durate ale stimulului de 10.
	Latența reflexului	Automată, primele 300 ms de la începerea stimulului.

Funcțiile audiometrului						
Semnale:	Frecvențe Hz:	Intensități dB HL:				
	125	De la -10 la 70				
	250	De la -10 la 90				
	500 De la -10 la 100					
	1000	De la -10 la 100				
	2000	De la -10 la 100				
	3000	De la -10 la 100				
	4000	De la -10 la 100				
	6000	De la -10 la 100				
	8000	De la -10 la 90				
Tipuri de testare	Determinarea limitei automate (Hughson Westlake modificat).					
-	Testare automat	Testare automată: durată de 1-2 s reglată în intervale de 0,1 s				

5.2 Proprietăți de calibrare

Traductori calibrați:	Căști contralaterale:	Telephonics TDH39/DD45 cu o forță statică de 4,5N ±0.5N			
	Sistem sondă:	Căsti ipsilaterale: integrate în sistemul cu sondă			
		Transmitătorul și receptorul de frecventă al sondei și			
		traductorul de presiune sunt integrate în sistemul sondă			
Acuratete:	General	În general instrumentul este produs și calibrat astfel încât			
3		să se afle în limitele de tolerantă cerute în standardele			
		specificate:			
	Frecvente reflex:	1%			
	Reflex contralateral si	3 dB pentru 250-4000 Hz si 5 dB pentru 6000-8000 Hz			
	niveluri de ton ale				
	audiometrului:				
	Niveluri de ton reflex	5 dB pentru 500-2000 Hz și +5/-10 dB pentru 3000-4000			
	Ipsilateral:	Hz			
		5% sau 10 daPa, oricare dintre acestea este mai mare			
	Masurarea presiunii:				
	Masurarea reactanței.	5% sau 0,1 ml, oricare dintre acestea este mai mare			
Controlul prezentării	Reflexe:	Raport ON-OFF ≥ 70 dB			
stimulului:		Timp de creștere = 20 ms			
		Timp de descrestere = 20 ms			
		SPL median în Oprit = 31 dB			
Proprietăți de calibra	re pentru impedanță				
Ton sondă	Frecvențe:	226 Hz 1%, 678 Hz 1%, 800 Hz 1%, 1000 Hz 1%			
	Nivel:	85 dB SPL 1,5 dB măsurat într-un cuplor acustic IEC			
		60318-5. Nivelul este constant pentru toate volumele din			
		intervalul de măsurare.			
	Distorsiune:	Max. 1% THD			
Reactanță	Interval:	De la 0,1 la 8,0 ml			
	Dependență	-0,003 ml/C			
	temperatură:				
	Dependență presiune:	-0,00020 ml/daPa			
	Sensibilitate reflex:	0,001 ml este cea mai mică modificare de volum			
	Nivelul de artefacte	detectabilă			
	reflex:	≥95 dB SPL (măsurat la cuplorul 711, 0,2 ml, 0,5 ml, 2,0			
		ml & 5,0 ml cavități cu pereți duri).			
	Caracteristici reflex	Latență inițială = 35 ms (5 ms)			
	temporal:	Timp de creștere = 42 ms (5 ms)			
	(IEC60645-5 articolul	Latență terminală = 23 ms (5 ms)			
	5.1.6)	Timp de cădere = 44 ms (5 ms)			
		Supramodulație = max. 1%			
		Submodulație = max. 1%			
Presiune	Interval:	În meniul de configurare pot fi selectate valori între -600			
		și +400 daPa.			
	Limite de siguranță:	-750 daPa și +550 daPa, 50 daPa			
Presiune barometrică	Schimbările de	Admitanța poate varia la interior: ±4%			
	presiune barometrică	Acuratețea presiunii este: ±10 daPa sau 10%, oricare			
	influențează	este mai mare.			
	măsurătoarea				
	impedanței în intervalul				
	specificat (97300 –				
	105300 Pascal).				

Înălțimea față de nivelul	Senzorul de presiune folosit este de tip diferential/manometru, ceea ce înseamnă							
mării	că măsoară diferența de presiune și de aceea nu este afectat de înălțimea față de							
	nivelul mării.	, .	,			, ,		
	Tonurile sondei	0 metri	500 metri	1000 metri	2000 metri	4000 metri		
	226 Hz	1,0 mmho	1,06 mmho	1,13 mmho	1,28 mmho	1,65 mmho		
	678 Hz	3,0 mmho	3,19 mmho	3,40 mmho	3,85 mmho	4,95 mmho		
	800 Hz	3,54 mmho	3,77 mmho	4,01 mmho	4,55 mmho	5,84 mmho		
	1000 Hz	4,42 mmho	4,71 mmho	5,01 mmho	5,68 mmho	7,30 mmho		
	Acuratețea presiu	nii este: ±1) daPa sau 10)%, oricare e	ste mai mare	9.		
	Pentru a reduce la	a minim infl	uența tempera	turii, presiun	ea barometri	ică, umiditatea		
	și înălțimea față d	e nivelul m	árii, se recoma	andă să calib	rați mereu ur	nitatea în		
	pozițiile locale.							
Temperatura	Teoretic, tempera	tura nu influ	iențează calci	ularea imped	anței, însă te	mperatura		
	influențează circu	itele electro	nice. Această	influență a te	emperaturii p	entru		
	intervalul de temp	eratură spe	cificat standa	rd (15-35 °C)	este admisil	oilă:		
	Admitanța poate v	aria la inte	ior: ± 5%, ± 0),1 cm³, ±10 ⁻	⁹ m³/Pa∙s, or	icare este mai		
	mare.							
Standarde de calibrare	e pentru reflex și _l	proprietăți	spectrale:					
General	Specificațiile pent	ru stimul și	semnalele au	diometrului re	espectă IEC	60645-5		
Căști contralaterale	Ton pur: ISO 389-1 pentru TDH39 si ISO 389-9 pentru IP30.					tru IP30.		
	Zgomot bandă largă Standard Interacoustics							
	(WB):	J.Zgo	omotul pentru	bandă largă"	' specificat în	IEC 60645-5,		
	Proprietăți spectra	ale: dar	cu o frecvență	i inferioară d	e tăiere de 5	00 Hz.		
	Zgomot trecere jo	asă Stai	ndard Interacc	oustics				
	(LP):	Unit	orm de la 500	Hz la 1600 l	Hz, 5 dB re. I	Nivel 1000 Hz		
	Proprietăți spectra	ale:						
	Zaomot trecere în	altă Sta	ndard Interacc	oustics				
	(HP):	Unit	orm de la 160	0 Hz la 10Kł	Hz, 5 dB re. N	vivel 1000 Hz		
	Proprietăti spectra	ale:			,			
Căsti Ipsilateral	Ton pur:	Sta	ndard Interacc	oustics.				
, ,	Zoomot bandă lar	dă Stai	ndard Interacc	oustics				
	(WB):	Za	omotul pentru	bandă lardă"	' specificat în	IEC 60645-5.		
	Proprietăti spectra	ale: dar	cu o frecventă	i inferioară d	e tăiere de 5	00 Hz.		
	Zaomot trecere io	asă Sta	, ndard Interacc	oustics				
	(LP):	Unit	orm de la 500	Hz la 1600 l	Hz. 10 dB re.	Nivel 1000		
	Proprietăti spectra	ale: Hz			, -			
	Zgomot trecere în	altă Stai	ndard Interacc	oustics				
	(HP) [.]	Unit	orm de la 160	0 Hz la 4000	Hz 10 dB re	e Nivel 1000		
	Proprietăti spectra	ale: Hz						
	Informatii general	e Nive	elul real al pre	siunii sunetu	lui la timpan	va depinde de		
	despre niveluri		mul auricular					
Riscul de artefacte la ni	veluri înalte ale stir	nulului în m	ăsurătorile de	reflex sunt r	ninore si nu v	vor activa		
sistemul de detectare a	reflexului				, , , , , , , , , , , , , , , , , , ,			

Valori de referință pentru calibrarea stimulului

	Frecv.	Valori de referință limită echivalentă pentru nivelul de sunet (RETSPL) [dB re. 20 μPa]						Variația nivelurilor stimulului pentru dife volume ale conductulu auditiv ext Relativ la calibrarea efectuată j cuplor IEC [dB]	ipsi erite e ui ern ce un ; 126	Valorile de atenuare a sunetului pentru căștile TDH39/DD45 utilizând pernița MX41/AR sau PN51 [dB]
	[Hz]	ISO 389-1 ISO 389-1 (Standard Interacoustics) Interacoustics) Interacoustics) Interacoustics) Interacoustics) Interacoustics) Puop Standard Provo Interacoustics Puop Standard Puop Standard Puop Standard Interacoustics Puop Standard Interacoustics Interacoustics </td <td>0,5 ml</td> <td>1 ml</td> <td></td>						0,5 ml	1 ml	
_	125	15	26	30.5	47 5	41	NB 4			3
	250	25.5	14	17	27	24.5	4			5
	500	11.5	5.5	8	13	9.5	4	97	53	7
	1000	7	0	4.5	6	6,5	6	9.7	5.3	15
	1500	6.5	2	2.5	8	5	6		-,-	21 (1600 Hz)
	2000	9	3	2,5	8	12	6	11,7	3.9	26
	3000	10	3,5	2	8	11	6	-0,8	-0,5	31 (3150 Hz)
	4000	9,5	5,5	9,5	9	3,5	5	-1,6	-0,8	32
	6000	15,5	2	21	20,5	3	5		,	26 (6300 Hz)
	8000	13	0	21	12	-5	5			24
d	WB	-8	-5	-8	-8	-5		7,5	3,2	
E S H	LP	-6	-7	-6	-6	-7		8,0	3,6	
RF	HP	-10	-8	-10	-10	-8		3,9	1,4	

*Toate cifrele scrise îngroșat sunt valori Standard Interacoustics.

Tipuri de cuploare folosite la calibrare

IMP:

TDH39 și DD45 este calibrat cu ajutorul unui cuplor acustic 6cc realizat în conformitate cu IEC 60318-3. Căștile Ipsilateral și tonul sondei sunt calibrate cu ajutorul unui cuplor acustic 2cc realizat în conformitate cu IEC 60318-5

Informații generale despre specificații

Interacoustics se străduiește în permanență să-și îmbunătățească produsele și performanțele acestora. De aceea, specificațiile pot fi modificate fără o notificare prealabilă.

Performanțele și specificațiile instrumentului pot fi garantate numai dacă acesta este supus unei proceduri de întreținere tehnică cel puțin o dată pe an. Aceasta trebuie efectuată de către un atelier autorizat de Interacoustics.

Interacoustics pune la dispoziția companiilor de service autorizate diagrame și manuale de service.

Întrebările privind reprezentanții și produsele pot fi adresate la:

Interacoustics A/S	Telefon:	+45 63713555
Audiometer Allé 1	Fax:	+45 63713522
5500	Middelfart	E-mail: info@interacoustics.com
Danemarca	http: www.in	teracoustics.com

5.3 Tabelul 1: Frecvențe și limite de intensitate

Valori maxime AT235 IMP										
	TDH39		DD65v2		IP30		IPSI		DD45	
Centru	Valoare									
Frecv.	Ton	NB								
[Hz]	[dB HL]									
125	80	65	85	70	100	85	70	60	75	60
250	100	85	100	85	110	100	85	75	100	85
500	120	100	110	95	115	105	100	85	120	100
750	120	105	115	100	120	110	100	85	120	105
1000	120	105	115	100	120	110	105	90	120	105
1500	120	105	115	100	120	110	110	90	120	100
2000	120	105	115	95	120	110	105	90	120	100
3000	120	105	115	100	120	110	95	90	120	105
4000	120	105	110	95	120	105	100	85	120	105
6000	120	100	100	85	105	100	85	80	110	90
8000	105	95	95	80	90	85	80	75	105	95
10000										
WB	-	115	-	115	-	115	-	95	-	120
LP	-	120	-	115	-	120	-	100	-	120
HP	-	115	-	115	-	120	-	95	-	120

5.4 Pin Assignments

Inputs	Connector type	Electrical	properties	
Patient response	Jack6.3mm	Handheld	switch:	3V through 10K is forced to ground
		Pin 1: GN Pin 2: Sig	ID Inal	when activated
Outputs:				
Phones, Left	Jack, 6.3mm	Voltage: I Min. load impedance: E		Up to 3V rms. by 10 ohm load
				8 Pin 2:
		Pin 1. CH Pin 2: CH	1 OUT	
	Jack 6.3mm			
Phones, Right		Pin 1: CH Pin 2: CH	1 GND 1 OUT	Up to 3V rms. by 10 ohm load 8 Pin 2:
Phones,	Jack 6.3mm	Voltage:		Up to 3V rms. by 10 ohm load
Contralateral		Min. load	impedance:	8
		Pin 2: CH	1 OUT	
Probe system	15-pin D-sub	Pin 1	DSP_I2C_INTERRUPT	
	high density with air	Pin 2	GND	
	connection	Pin 3	IPSI_OUT	
		Pin 4	GND CONTRA	
		Pin S	GND_Probe-mic	
		Pin 6	DSP 12C SCLK	_
		Pin 7	GND	
		Pin 8	GND IPSI	
		Pin 9	PROBETONE_OUT	
		Pin 10	MIC IN	
		Pin 11	DSP_I2C_DATA	
		Pin 12	+5 Vprobe	
		Pin 13	CONTRA_OUT	
		Pin 14	GND PROB LONE	
		Pin 15	MIC-(IN	
Data I/O:			· · · ·	
USB	USB type"B"	USB port	for communication	



5.5 Compatibilitatea electromagnetică (CEM)

Echipamentele de comunicații RF portabile și mobile pot afecta AT235 . Instalați și utilizați AT235 în conformitate cu informațiile EMC

prezentate în acest capitol.

AT235 a fost testat pentru emisii EMC și imunitate ca AT235 independent . Nu folosiți AT235 lângă sau pus peste alte echipamente electronice. Dacă este necesară utilizarea adiacentă sau suprapusă, utilizatorul trebuie să verifice funcționarea normală a configurației. Utilizarea accesoriilor, traductoarelor și cablurilor diferite de cele specificate, cu excepția pieselor de service vândute de Interacoustics ca piese de schimb pentru componente interne, poate conduce la creșterea EMISIILOR sau scăderea IMUNITĂȚII dispozitivului.

Toate persoanele care conectează un echipament suplimentar sunt responsabile de verificarea conformității sistemului cu standardul IEC 60601-1-2.

Îndrumări și declarația producătorului - emisii electromagnetice

AT235 este conceput pentru utilizarea în mediul electromagnetic specificat mai jos. Clientul sau utilizatorul AT235 trebuie să se asigure că este folosit într-un astfel de mediu.

Test de emisii	Reactanță	Mediu electromagnetic - îndrumări
Emisii F CISPR 11	Grupa 1	AT235 folosește energia RF doar pentru funcționarea sa internă. De aceea, emisiile sale RF sunt foarte scăzute și probabil nu cauzează nicio interferență cu
	Clasa B	echipamentele electronice din apropiere. AT235 este adecvat pentru a fi utilizat în toate mediile
Emisii RF CISPR 11	Clasa D	comerciale, industriale, de afaceri și rezidențiale.
Emisii armonice IEC	Respectă	
61000-3-2	Categoria Clasa A	
Fluctuații de tensiune /	Respectă	
Emisii de pâlpâire IEC	_	
61000-3-3		

Distanțele de separare recomandate dintre echipamentele de comunicații RF portabile și mobile și AT235.

AT235 este conceput pentru a fi utilizat într-un mediu electromagnetic în care tulburările în RF sunt controlate. Clientul sau utilizatorul AT235 poate ajuta la prevenirea interferențelor electromagnetice prin păstrarea unei distanțe minime între echipamentul de comunicații RF (transmițătoare) portabile și mobile și AT235 conform recomandărilor de mai jos, în conformitate cu puterea maximă de emisie a echipamentului de comunicații.

Puterea nominală	Distanța de separare în funcție de frecvența transmițătorului [m]								
maximă de emisie a transmițătorului	de la 150 kHz la 80 MHz	de la 80 MHz la 800 MHZ	de la 800 MHz la 2,5 GHz						
[w]	d = 1,17√PP	d = 1,17√ <i>PP</i>	d = 2,23√PP						
0,01	0,12	0,12	0,23						
0,1	0,37	0,37	0,74						
1	1,17	1,17	2,33						
10	3,70	3,70	7,37						
100	11,70	11,70	23,30						

Pentru transmițătoarele clasificate la o putere maximă de emisie care nu este menționată mai sus, distanța recomandată de separare d în metri (m) poate fi estimată folosind ecuația aplicabilă la frecvența transmițătorului, unde P este puterea nominală maximă de emisie exprimată în wați (W) în conformitate cu producătorul transmițătorului.

Nota 1 La 80 MHz și 800 MHZ, se aplică gama de frecvență mai înaltă.

Nota 2 Aceste îndrumări s-ar putea să nu se aplice în toate cazurile. Propagarea electromagnetică este afectată de absorbția și reflexia din structuri, obiecte și oameni.

Îndrumări și declarația producătorului - Imunitatea electromagnetică

AT235 este conceput pentru utilizarea în mediul electromagnetic specificat mai jos. Clientul sau utilizatorul AT235 trebuie să se asigure că este folosit într-un astfel de mediu.

Test de imunitate	Test IEC 60601 Nivel	Reactanță	Electromagnetică Mediu- Îndrumare
Descărcare electrostatică (ESD)	+6 kV contact	+6 kV contact	Podelele trebuie să fie din lemn, beton sau plăci ceramice. Dacă podelele sunt acoperite cu
IEC 61000-4-2	+8 kV aer	+8 kV aer	material sintetic, umiditatea relativă ar trebui să fie mai mare de 30%.

Tranziții electrice rapide/șocuri IEC61000-4-4	+2 kV pentru liniile de alimentare electrică +1 kV pentru liniile de intrare/ieșire	+2 kV pentru liniile de alimentare electrică +1 kV pentru liniile de intrare/iesire	Calitatea sursei de curent trebuie să fie cea obișnuită pentru un mediu comercial sau rezidențial normal.
Supratensiune tranzitorie IEC 61000-4-5	+1 kV mod diferențial +2 kV mod comun	+1 kV mod diferențial +2 kV mod comun	Calitatea sursei de curent trebuie să fie cea obișnuită pentru un mediu comercial sau rezidențial normal.
Căderile de tensiune, întreruperile scurte și variațiile de tensiune de la liniile de alimentare IEC 61000-4-11	< 5% UT (>95% cădere în UT) pentru 0,5 cicluri 40% UT (60% cădere în UT) pentru 5 cicluri 70% UT (30% cădere în UT) pentru 25 cicluri	< 5% UT (>95% cădere în UT) pentru 0,5 ciclu 40% UT (60% cădere în UT) 5 cicluri 70% UT (30% cădere în UT) 25 cicluri	Calitatea sursei de curent trebuie să fie cea obișnuită pentru un mediu comercial sau rezidențial normal. Dacă utilizatorul AT235 necesită funcționarea continuă în timpul penelor de curent de la rețea, se recomandă alimentarea AT235 de la o sursă de curent neîntreruptă sau de la bateria sa.
Frecvența de alimentare (50/60 Hz)	3 A/m	3 A/m	Câmpurile magnetice trebuie să fie la nivelele caracteristice unei locații tipice într-un mediu tipic comercial sau rezidențial.

ndrumări și declarația producătorului - imunitate electromagnetică							
AT235 este conceput utilizatorul AT235 treb	AT235 este conceput pentru utilizarea în mediul electromagnetic specificat mai jos. Clientul sau utilizatorul AT235 trebuie să se asigure că este folosit într-un astfel de mediu,						
Test de imunitate	IEC / EN 60601 nivel test	Nivel de conformitate	Mediu electromagnetic - îndrumări				
			Echipamentul de comunicații RF portabil și mobil nu trebuie folosit în apropierea oricăror piese ale AT235, inclusiv cabluri, la o distanță de separare mai mică decât cea calculată de ecuația aplicabilă pentru frecvența transmițătorului.				
			Distanța recomandată de separare <i>d</i> □ □1,2 <i>P</i>				
			d □□1,2 P de la/80 MHz la 800 MHz				
RF condus	3 Vrms	3 Vrms	d				
IEC / EN 61000-4-6	de la 150 kHz la 80 MHz		√ Unde P este puterea nominală maximă de emisie a transmițătorului în wați (W) în conformitate cu producătorul transmitătorului, iar d				
RF radiat	3 V/m	3 V/m	este distanța recomandată de separare în metri (m).				
IEC / EN 61000-4-3	de la 80 MHz la 2,5 GHz		Puterea câmpului de la transmițătoarele RF fixe, determinate de o evaluare electromagnetică a locației, (a) trebuie să fie mai mică decât nivelul de conformitate din fiecare interval de frecvență (b)				
			Pot apărea interferențe în vecinătatea echipamentelor marcate cu următorul simbol:				
			(((•)))				

Munul

NOTA 1 La 80 MHz și 800 MHz, se aplică gama de frecvență mai înaltă

NOTA 2 Aceste îndrumări s-ar putea să nu se aplice în toate cazurile. Propagarea electromagnetică este afectată de absorbția și reflexia din structuri, obiecte și oameni.

(a) Puterea câmpului de la transmiţătoare fixe, cum ar fi staţii de bază pentru telefoane radio (celulare/fără fir) și radiouri terestre mobile, radio amatori, transmiţătoare radio AM şi FM şi de TV nu pot fi prezise teoretic cu acurateţe. Pentru a evalua mediul electromagnetic de la transmiţătoarele RF fixe, trebuie avut în vedere o evaluare electromagnetică a locaţiei. Dacă puterea măsurată a câmpului din locaţia de utilizare a AT235 depăşeşte nivelul de conformitate RF aplicabil de mai sus, AT235 trebuie supravegheat pentru a verifica funcţionarea normală. Dacă se observă funcţionarea anormală, trebuie luate măsuri suplimentare, cu ar fi reorientarea sau repoziţionarea AT235 .În gama de frecvenţe de la 150 kHz la 80 MHz, puterea câmpului trebuie să fie mai mică de 3 V/m.

Pentru a asigura conformitatea cu cerințele CEM, conform celor specificate în IEC 60601-1-2, este esențial să se utilizeze numai următoarele accesorii:

ARTICOL	PRODUCĂTOR	MODEL
Unitate de alimentare UES65- 240250SPA3	Interacoustics	UES65-240250SPA3
Sondă clinică	Interacoustics	Sistem sondă clinică 1077
Sondă diagnostic	Interacoustics	Sistem sondă diagnostic 1077
DD45C Contra cască DD45C contra cască P3045	Interacoustics	DD45C
DD65 v2 Cască audiometrică cu atenuare pasivă	Interacoustics	DD65 v2
IP30 cască internă 10 ohm simplă	Interacoustics	IP30C
DD45 Cască audiometrică P3045	Interacoustics	DD45
IP30 cască internă 10 ohm set	Interacoustics	IP30

Conformitatea cu cerințele CEM, specificate în IEC 60601-1-2, este asigurată dacă tipurile și lungimile de cabluri sunt cele specificate mai jos:

Descriere	Lungime	Ecranat?
Cablu de alimentare	2,0 m	Neecranat
Cablu USB	2,0 m	Ecranat
Sondă clinică	2,0 m	Neecranat
Sondă diagnostic	2,0 m	Neecranat
DD45 Contra Cască P3045	0,4 m	Ecranat
DD65 v2 Cască audiometrică cu atenuare pasivă	2,0 m	Ecranat
IP30 cască internă 10 ohm simplă contra	0,5 m	Ecranat
DD45 Cască audiometrică P3045	0,5 m	Ecranat
IP30 cască internă 10 ohm set	0,5 m	Ecranat

Science made smarter

Technical Specifications







D-0105062-H - 2021/09

License overview

International configuration					
	Standard	Standard + H			
Licenses Tympanometry					
Test:					
Tymp 226 Hz	x	x			
Tymp 678, 800 & 1000 Hz		x			
Manual tympanometry		x			
Reflex Ipsilateral	x	x			
Reflex Contralateral	x	x			
ETF 1 test non-perforated tympanic membrane	x	x			
EFT 2 test perforated tympanic membrane	x	x			
EFT 3 patulous tympanic membrane		x			
Reflex Decay	x	x			
Reflex Latency		x			
Pure tone audiometry	x	x			
Modified Hughson Westlake audiometry test	x	x			
Tympanogram transfer	Optional	Optional			

Languages supported in IMP and AUD

	hinese	Szech	nglish	innish	rench	erman	Greek	talian	panese	orean	rwegian	olish	tuguese	ussian	panish	urkish
	C		Э	4	4	9			Ъ	×	oN		юд	Я	S	L
IMP																
MT10			Х		Х	Х										
Existing AT235			х			х										
New AT235	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х
Existing AA222			Х			Х										
New AA222	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х
Titan	Х	Х	Х		Х	Х		Х	Х	Х			Х	Х	Х	
AUD																
AS608			Х		Х	Х									Х	
AD226	Х		Х		Х	Х		Х				Х	Х	Х	Х	Х
AD629 / AD229	X *	X *	Х	X *	Х	Х	X *	Х	X*	X *	X *	Х	X *	X *	Х	Х
AC40	X *	X *	Х	X *	Х	Х	X *	Х	X*	X *	X *	Х	X *	X *	Х	Х
Suites																
Titan suite	Х	Х	Х		Х	Х		Х	Х			Х	Х	Х	Х	Х
DS	Х	Х	Х		Х	Х	Х	Х	Х	Х		Х	Х	Х	Х	Х

Included and optional parts

Included Parts:

AT235 instrument Clinical probe system^{1,} Diagnostic probe system^{1,2} Power supply unit UES65-240250SPA3 Contralateral headphone1 CAT50 (Option) DD65v2 Audiometric headset Patient response (Option) Printer kit (Option) Wall mounting kit (Option) Cleaning cloth

Assortment bag BET55

¹ Applied part as according to IEC60601-1

² One can be selected.

General technical specifications

General					
Medical CE-mark:	The CE-mark indicates that Interacoustics A/S meets the requirements of Annex II				
	of the Medical Device Direc	tive 93/42/EEC.			
	Approval of the quality syste	em is made by TÜV – identification no0123.			
Standards:	Safety:	IEC 60601-1, Class I, Type B applied parts			
	EMC:	IEC 60601-1-2			
	Impedance:	IEC 60645-5 (2004)/ANSI S3.39 (2012), Type 1			
	Audiometer:	IEC60645-1 (2017)/ANSI S3.6 (2018), Type 4			
Operation	Temperature:	15° – 35 °C			
environment:	Relative humidity:	30 – 90%			
	Ambient pressure:	98 kPa – 104 kPa			
	Warm-up time:	1 minute			
Display	10 inch high resolution colo	r display 1024x600			
Transport & storage:	Storage temperature:	0° – 50°C			
	Transport temperature:	-20° – 50 °C			
	Relative humidity:	10 – 95%			
Internal storage	500 clients and 50.000 sess	sions			
Internal battery		CR2032 3 V, 230 mAh, Li. Not serviceable by user			
PC control:	USB:	Input/output for computer communication			
		Data can be sent to and saved on the PC and stored			
		in OtoAccess® (Diagnostic Suite sync module is			
		required).			
Thermal printer	Type: MPT-III	Thermal MPT-III printer with recording paper in rolls			
(Optional):		Print on command via USB			
		Use only specified power supply unit UES65-			
- · · · · · · · · · · · · · · · · · · ·	UES65-240250SPA3	240250SPA3 type			
Power supply		Input: 100-240 VAC 50-60 Hz, 2,0 A			
		Output: 24.0 VDC			
Dimensions	H x W x L:	29 x 38 x 7,5 cm			
AT235 weight		2.5 kg			

Impedance meas	suring system	
Probe tone:	Frequency:	226 Hz, 678 Hz, 800 Hz, 1000 Hz; pure tones; ±1%
	Level:	85 dB SPL (≈ 69 dB HL) ±1.5 dB
Air pressure:	Control:	Automatic.
	Indicator:	Measured value is displayed on the graphical display
	Range:	-600 to +400 daPa. ±5%
	Pressure limitation:	-750 daPa and +550 daPa
	Pump speed:	Automatic, Fast 300 daPa/s, Medium 200 daPa/s,
		Slow 100 daPa/s, Very slow 50 daPa/s.
Compliance:	Range:	0.1 to 8.0 ml at 226 Hz probe tone (Ear volume: 0.1 to
		8.0 ml) and 0.1 to 15 mmho at 678, 800 and 1000 Hz
		probe tone. All ±5%
Test types:	Tympanometry:	Automatic, where the start and stop pressure can be
		user-programmed in the setup function.
		Manual control of all functions
	Eustachian tube function 1	Williams test
	- Non perforated eardrum:	
	Eustachain tube function 2	Toynbee test
	- Perforated eardrum:	
	Eustachian tube function 3	Continuous sensitive impedance measurement
	- Patulous Eustachian	
	tube:	

Reflex functions							
Signal sources:	Tone - Contra, Reflex:	250, 500, 1000, 2000, 3000, 4000, 6000, 8000 Hz,					
		Wide Band, High and Low pass					
	Tone - Ipsi, Reflex:	500, 1000, 2000, 3000, 4000 Hz wide band, high and					
		low pass					
	NB noise – Contra, Reflex:	250, 500, 1000, 2000, 3000, 4000, 6000, 8000 Hz					
	NB noise – Ipsi, Reflex:	1000, 2000, 3000, 4000 Hz					
	Stimulus duration:	750 ms					
	Reflex acceptance:	Adjustable between 2% and 6%, or 0.05 – 0.15 ml					
		change of ear canal volume					
	Intervals:	Down to 1 dB step size.					
	Intensity max:	90, 100, 120 dBHL.					
Outputs:	Contra Earphone:	TDH39 earphone, DD45 earphone, CIR insert and/or					
		EARtone 3A insert for Reflex measurements.					
	Ipsi Earphone:	Probe earphone incorporated in the probe system for					
		Reflex measurements					
	Probe connection:	Connection of the electrical and air system to the					
		probe					
Test types:	Manual reflex:	Manual control of all functions.					
	Automated Reflex	Single intensities					
		Reflex growth					
	Reflex decay:	Automatic, 10 dB above threshold and manually					
	-	controlled with stimulus durations of 10					
	Reflex latency:	Automated, first 300 ms from stimulus start					

Audiometer functions	5		
Signals:	Frequencies Hz:	Intensities dB HL:	
_	125	-10 to 70	
	250	-10 to 90	
	500	-10 to 100	
	1000	-10 to 100	
	2000	-10 to 100	
	3000	-10 to 100	
	4000	-10 to 100	
	6000	-10 to 100	
	8000	-10 to 90	
Test types	Auto threshold determination (Modified Hughson Westlake)		
	Auto testing: durati	on 1-2 s adjusted in 0.1 s intervals	

Calibration properties

Colibrated transducara:	Controlatoral	Tolophonics TDH20/DD45 with a static force of 4 EN
	earphone:	0.5N. IP30 and/or IP30 single contra
	Probe system:	Insilateral Earphone: is integrated in the probe system
		Probe frequency transmitter and receiver and pressure
		transducer is integrated in the probe system
Accuracy:	General:	Generally the instrument is made and calibrated to be
		within and better than the tolerances required in the
		specified standards:
	Reflex Frequencies:	±1%
	Contralateral reflex and	3 dB for 250 to 4000 Hz and 5 dB for 6000 to 8000 Hz
	audiometer tone levels:	
	Ipsilateral reflex tone	5 dB for 500 to 2000 Hz and +5/-10 dB for 3000 to 4000
	levels:	Hz
	Pressure	5% or 10 daPa, whichever is greater
	measurement.	o to a lo a la a minoror lo greater
	Compliance	5% or 0.1 mL whichever is greater
	measurement.	
Stimulus presentation	Reflexes:	ON-OEE ratio > 70 dB
control:		Rise time = 20 ms
		Fall time = 20 ms
		A weighted SPL in Off = 31 dB
Impedance calibration	properties	
Probe tone:	Erequencies:	226 Hz 1% 678 Hz 1% 800 Hz 1% 1000 Hz 1%
Flobe tone.	Lovel:	220112 1/0, 070112 1/0, 000112 1/0, 1000112 1/0
	Level.	oo ub SFL 1.5 ub measured in an IEC 00510-5
		the measurement range
	Distantism	
	Distortion:	
Compliance:	Range:	0.1 to 8.0 ml
	Temperature	-0.003 mi/C
	dependence:	
	Pressure dependence:	-0.00020 ml/daPa
	Reflex sensitivity:	0.001 ml is the lowest detectable volume change
	Reflex artifact level:	≥95 dB SPL (measured in the 711 coupler, 0.2 ml, 0.5 ml,
		2.0 ml & 5.0 ml hard walled cavities)
	Temporal reflex	Initial latency = 35 ms (5 ms)
	characteristics:	Rise time = 42 ms (5 ms)
	(IEC60645-5 clause	Terminal latency = 23 ms (5 ms)
	5.1.6)	Fall time = 44 ms (5 ms)
		Overshoot = max. 1%
		Undershoot = max. 1%
Pressure:	Range:	Values between -600 to +400 daPa can be selected in
		the setup.
	Safety limits:	-750 daPa and +550 daPa, 50 daPa
Barometric pressure:	The barometer	Admittance can vary inside: ±4%
	pressure chances	The pressure accuracy is: ±10 daPa or 10%, whichever
	influence on the	is greater
	impedance	
	measurement in the	
	specified range (97300	
	– 105300 Pascal).	

Height above sea level:	The pressure sensor used, is a differential/gauge type, which means, it measure								
	the pressure difference and therefore not affected of the height above sea level.								
	Probe tones	0 meters	500 meters	1000 meters	2000 meters	4000 meters			
	226 Hz	1.0 mmho	1.06 mmho	1.13 mmho	1.28 mmho	1.65 mmho			
	678 Hz	3.0 mmho	3.19 mmho	3.40 mmho	3.85 mmho	4.95 mmho			
	800 Hz	3.54 mmho	3.77 mmho	4.01 mmho	4.55 mmho	5.84 mmho			
	1000 Hz	4.42 mmho	4.71 mmho	5.01 mmho	5.68 mmho	7.30 mmho			
	The pressure a	accuracy is:	10%, whicheve	er is greater.					
	To minimize the influence of temperature, barometer pressure, humidity and								
	height above sea level, it always recommended to calibrate the unit in the local								
	positions.								
Temperature	The temperature have no theoretic impact on the impedance calculation, but the								
	temperature h	as influence	on the electro	onic circuits. TI	his temperatur	e influence for			
	the standard s	pecified terr	perature rang	e (15-35 °C) is	s inside:				
	Admittance ca	n vary insid	e: ± 5%, ± 0.1	cm ³ , ±10 ⁻⁹ m ³	³ /Pa⋅s, whiche	ver is greater.			
Reflex calibration star	ndards and spe	ectral prope	erties:						
General:	Specifications	for stimulus	and audiome	ter signals are	made to follow	v IEC 60645-5			
Contralateral earphone:	Pure tone:		ISO 389-1 for TDH39 and ISO 389-9 for IP30						
•	Wide Band no	ise (WB): I	Interacoustics Standard						
	Spectral prope	erties: Á	As "Broad band noise" specified in IEC 60645-5, but with						
		5	500 Hz as lower cut-off frequency.						
	Low Pass nois	e (LP):	nteracoustics	Standard					
	Spectral prope	erties: l	Uniform from 500 Hz to 1600 Hz, 5 dB re. 1000 Hz level						
	High Pass nois	se (HP): 🛛 I	Interacoustics Standard						
	Spectral prope	erties: l	Uniform from 1600 Hz to 10KHz, 5 dB re. 1000 Hz level						
Ipsilateral Earphone:	Pure tone:		Interacoustics Standard						
	Wide Band no	ise (WB): I	Interacoustics Standard						
	Spectral prope	erties: A	As "Broad band noise" specified in IEC 60645-5, but with						
		5	500 Hz as lower cut-off frequency.						
	Low Pass noise (LP):		Interacoustics Standard						
	Spectral properties:		Uniform from 500 Hz to 1600 Hz. 10 dB re. 1000 Hz level						
	High Pass noise (HP):		Interacoustics Standard						
	Spectral properties:		Uniform from 1600 Hz to 4000 Hz, 10 dB re 1000 Hz						
level									
	General about	levels: 1	he actual sou	nd pressure le	vel at the earc	lrum will			
			lepend on the	volume of the	ear.				
The risk of artifacts at h	iaher stimulus l	evels in refle	ex measureme	ents are minor	and will not ac	tivate the			
reflex detection system	J								

Reference values for stimulus calibration

	Freq.	Re (R [dl	eference Eα ETSPL) B re. 20 μΡa	quivalent Ti a]	Variation of Ipsi stimulus levels for different volumes of the ear canal Relative to the calibration performed on an IEC 126 coupler [dB]		Sound attenuation values for TDH39/DD45 earphones using MX41/AR or PN51 cushion [dB]			
		ISO 389-1 (Interacoustics Standard)	ISO 389-9 (Interacoustics Standard)	Interacoustics Standard	Interacoustics Standard	Interacoustics Standard	ISO 389-4 (ISO 8798)	0.5 ml	1 ml	
	[Hz]	TDH39	IP30	DD65 v2	 DD45	Probe	NB Stimulus Correction Values			
	125	45	26	30,5	47.5	41	4			3
	250	25.5	14	17	27	24.5	4			5
	500	11.5	5.5	8	13	9.5	4	9.7	5.3	7
	1000	7	0	4,5	6	6.5	6	9.7	5.3	15
	1500	6.5	2	2,5	8	5	6			21 (1600 Hz)
	2000	9	3	2,5	8	12	6	11.7	3.9	26
	3000	10	3.5	2	8	11	6	-0.8	-0.5	31 (3150 Hz)
	4000	9.5	5.5	9,5	9 00 F	3.5 0	5	-1.6	-0.8	32
	0000	13.5	2	∠I 21	20.5 12	ა 5	ວ 5			20 (0300 HZ) 24
-	0000	0	5	2 I Q	1Z 0	-5	5	7.5	3.2	24
ц М		-0	-7	-0	-0 -6	-5 _7		8.0	3.∠ 3.6	
ШX	HP	-10 -8 -10 -10 -8						3.9	1.4	

*All figures in bold are Interacoustics Standard values.

Reference equivalent threshold values for transducers

Impedance - frequencies and intensity ranges
ΔT235 Maximums IMP

AT235 Maximums IMP										
	TDH39		DD65v2		IP30		IPSI		DD45	
Center	Reading									
Freq.	Tone	NB								
[Hz]	[dB HL]									
125	80	65	85	70	100	85	70	60	75	60
250	100	85	100	85	110	100	85	75	100	85
500	120	100	110	95	115	105	100	85	120	100
750	120	105	115	100	120	110	100	85	120	105
1000	120	105	115	100	120	110	105	90	120	105
1500	120	105	115	100	120	110	110	90	120	100
2000	120	105	115	95	120	110	105	90	120	100
3000	120	105	115	100	120	110	95	90	120	105
4000	120	105	110	95	120	105	100	85	120	105
6000	120	100	100	85	105	100	85	80	110	90
8000	105	95	95	70	90	85	80	75	105	95
10000										
WB	-	115	-	115	-	115	-	95	-	120
LP	-	120	-	115	-	120	-	100	-	120
HP	-	115	-	115	-	120	-	95	-	120