



7.3.4 Sound

This procedure sets the volume and type of sounds during equipment operation.

- 1 Press the key.

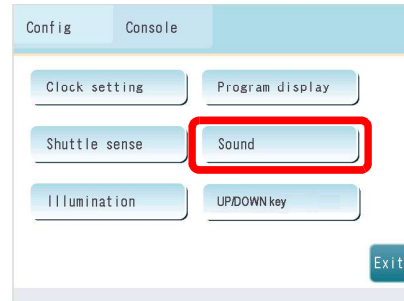


- 2 Press the sound type frame.
The setting keys are displayed.

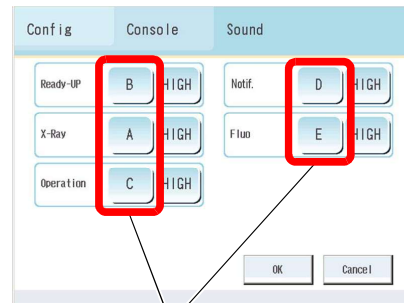

Sound type frames

- 3 Press the volume frame.
The setting keys are displayed.

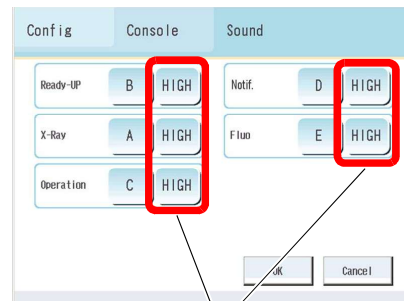

Volume frames

- 4 Press the key.
Press the key to proceed without saving the settings.