

OPERATING INSTRUCTIONS

LTFE 140 / 290 / 370 / 515

ARCTIKO

INDEX	PAGE
Low Temperature Freezing Box	3
Operating Instructions	4
Electrical Connection	4
The Cooling System	4
Installing The Freezer	5
Before Commissioning	5
Start Procedure	5
Caution!	5
Control Panel	6
Main Functions	7
Parameters	9
Alarms	10
Alarm Relay Management	10
Digital Input	10
Connections	13
Default Setting Values	14
Cleaning And Maintenance Of The Freezer	15
Relocating Or Moving The Freezer	16
Disposing Of The Freezer	16
Wiring Diagram	17

Low Temperature Freezing Box


For safety reasons, these operating instructions should be read before the freezer is commissioned. The operating instructions should always be available to and accessible for the personnel!


The drawings and symbols in these operating instructions are for safety purposes when commissioning and using the freezer.

Instruct the personnel in the use of the freezer (the temperature is -45°C). There is a risk of frost-bite if the contents or the sides of the inner container are touched!

In the event of breakdown or irregularities contact professional instructors or repair technicians immediately.


The meaning of the symbols:

1. A. Caution. B. Take care. 

2. Caution. Mains connection. 

3. Risk of explosion. 

4. Prohibited. 

5. Caution - do not touch. 

6. Repair work in the installation prohibited. 

7. Compliance required! 

8. Disconnect the freezer whilst repair work is being carried out! 

9. Earth the freezer! 

Operating Instructions

1. The freezer should be connected by an authorised electrician, or by the company which sold the freezer! Incorrect installation may damage the freezer.
2. Place the freezer on a flat floor which can take the weight of the freezer.
3. The electrical installation should be earthed.
4. Do not use extension cables, but connect the freezer directly to a fixed installation. If the freezer is connected to a long extension cable there is the risk that the cable will become hot.
5. The freezer should be placed in a dry location, and should not be subjected to water on the cabinet. If water gets into the electrical parts it may cause short-circuiting.
6. In the event of functional or electrical irregularities, please contact an authorised servicing engineer.
7. Do not put bottles containing carbonic acid or inflammable products in the freezer.

Disposal and scrapping of the freezer: Remove the lock, so that there is no risk of children getting locked in the freezer whilst playing.

Electrical Connection

The machine meets current EU directives. Low voltage 2006/95/E.E.C.

Electromagnetic compatibility 2004/108/E.E.C.

The machine should be given extra protection in accordance with the Electricity Supply Regulations in order to protect the user against dangerous electric shocks in the event of faults.

If the switch is for a three-pin plug, a three-pin plug should be used, and the conductor with yellow/green insulation should be connected to the Earth terminal.

The Cooling System

The vaporiser is built into the wall of the inner container. This will be - 50°C, so there is a risk of frost-bite if it is touched. Always use thermal gloves when touching the contents of the freezer.

The condenser is placed on the inside of the cabinet. This means that the outside of the cabinet gets hot when in operation. The advantage of a hot cabinet is that it will always be dry.

The advantage of freezing boxes is that only a minimum amount of heat gets in when they are opened and closed.

Thermostat with digital display. Once the freezer is cooled down, the set temperature and the temperature shown will be the same.

Installing the Freezer

1. Connect the plug from the unit to power. If the electrical connection (the plug) has to be changed, always let an authorised electrician install the freezer (read the operation instructions).
2. The freezer should be located in a dry, cool place, out of direct sunlight. The freezer gives off a great deal of heat when in operation. If the ambient temperature is too high, there is a risk that the freezer will not operate correctly. It is recommended that the room be ventilated, so that the room temperature does not exceed 30°Celsius at most. Class N.
3. Place the freezer on a solid and flat substrate. This will eliminate any vibration and irritating noise. The freezer should be placed with at least 10 cm free to the sides, at least 15 cm free at the back, and at least 100 cm free to the ceiling.

The installation should be fused with a 16 A fuse.

Before Commissioning

Clean the freezer both inside and out using a damp, wrung out cloth. Dry with a dry cloth.

The smell from the plastic parts in the freezer will disappear once the freezer has been cooled down.

Start Procedure

Put the plug in the socket. The freezer should run for at least 1 hours before the thermostat is changed. (Stabilisation of the cooling system).

Caution!

Do not place bottles or boxes containing carbonic acid or chemical agents in the freezer.

Do not place inflammable liquids such as ethane, petrol or alcohol in the freezer. Risk of explosion!

No bottles or tins should be placed in the freezer, as they could explode and cause injury to personnel.

Always use thermal gloves when operating the freezer, to reduce the risk of frost-bite.

In the event of repair work or corrective action in the installation in the machine room, the plug should always be removed! Repair work in the installation should be carried out by an authorised electrician!

CONTROL PANEL (Dixell XR30CX Controller)




- SET** To display target set point; in programming mode it selects a parameter or confirm an operation.
- (DEF)**  To start a manual defrost
- (UP)**  To see the max. stored temperature; in programming mode it browses the parameter codes or increases the displayed value.
- (DOWN)**  To see the min stored temperature; in programming mode it browses the parameter codes or decreases the displayed value.







Figure 1

 To switch the instrument off, if onF = oFF.







 **NOT USED**

KEY COMBINATIONS:


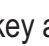
-  +  To lock & unlock the keyboard.
- SET +  To enter in programming mode.
- SET +  To return to the room temperature display.

USE OF LEDS


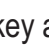
Each LED function is described in the following table

LED	MODE	FUNCTION
	ON	Compressor enabled
	Flashing	Anti-short cycle delay enabled
	ON	Defrost enabled
	ON	An alarm is occurring
	ON	Continuous cycle is running
	ON	Energy saving enabled
°C/°F	ON	Measurement unit
°C/°F	Flashing	Programming phase

HOW TO SEE THE MIN TEMPERATURE

1. Press and release the  key.
2. The “Lo” message will be displayed followed by the minimum temperature recorded.
3. By pressing the  key again or by waiting 5s the normal display will be restored.

HOW TO SEE THE MAX TEMPERATURE

1. Press and release the  key.
2. The “Hi” message will be displayed followed by the maximum temperature recorded.
3. By pressing the  key again or by waiting 5s the normal display will be restored.

HOW TO RESET THE MAX AND MIN TEMPERATURE RECORDED

1. Hold press the SET key for more than 3s, while the max. or min temperature is displayed. (rSt message will be displayed)
2. To confirm the operation the "rSt" message starts blinking and the normal temperature will be displayed.

MAIN FUNCTIONS

HOW TO SEE THE SETPOINT



1. Push and immediately release the SET key: the display will show the Set point value;
2. Push and immediately release the SET key or wait for 5 seconds to display the probe value again.

HOW TO CHANGE THE SETPOINT

1. Push the SET key for more than 2 seconds to change the Set point value;
2. The value of the set point will be displayed and the "°C" or "°F" LED starts blinking;
3. To change the Set value push the ▲ or ▼ arrows within 10s.
4. To memorise the new set point value push the SET key again or wait 10s.

HOW TO START A MANUAL DEFROST



Push the DEF key for more than 2 seconds and a manual defrost will start.

HOW TO CHANGE A PARAMETER VALUE

To change the parameter's value operate as follows:



1. Enter the Programming mode by pressing the Set and DOWN key for 3s (the "°C" or "°F" LED starts blinking).
2. Select the required parameter.
3. Press the "SET" key to display its value.
4. Use "UP" or "DOWN" to change its value.
5. Press "SET" to store the new value and move to the following parameter. To exit: Press SET + UP or wait 15s without pressing a key.

NOTE: the set value is stored even when the procedure is exited by waiting the time-out to expire.

THE HIDDEN MENU

The hidden menu Includes all the parameters of the instrument.

6.6.1 HOW TO ENTER THE HIDDEN MENU



1. Enter the Programming mode by pressing the Set+ ▼ key for 3s (the "°C" or "°F" LED starts blinking).
2. Released the keys, then push again the Set+ ▼ keys for more than 7s. The Pr2 label will be displayed immediately followed from the HY parameter.

NOW YOU ARE IN THE HIDDEN MENU.

3. Select the required parameter.
4. Press the "SET" key to display its value.
5. Use ▲ or ▼ to change its value.
6. Press "SET" to store the new value and move to the following parameter. To exit: Press SET + ▲ or wait 15s without pressing a key.

NOTE1: if none parameter is present in Pr1, after 3s the "noP" message is displayed. Keep the keys pushed till the Pr2 message is displayed.

NOTE2: the set value is stored even when the procedure is exited by waiting the time-out to expire.

6.6.2 HOW TO MOVE A PARAMETER FROM THE HIDDEN MENU TO THE FIRST LEVEL AND VICEVERSA.

Each parameter present in the HIDDEN MENU can be removed or put into "THE FIRST LEVEL" (user level) by pressing "SET" + ▼

In HIDDEN MENU when a parameter is present in First Level the decimal point is on.

HOW TO LOCK THE KEYBOARD



1. Keep pressed for more than 3 s the ▲ and ▼ keys.
2. The "POF" message will be displayed and the keyboard will be locked. At this point it will be possible only to see the set point or the MAX o Min temperature stored
3. If a key is pressed more than 3s the "POF" message will be displayed.

TO UNLOCK THE KEYBOARD

Keep pressed together for more than 3s the ▲ and ▼ keys, till the "Pon" message will be displayed.

THE CONTINUOUS CYCLE



When defrost is not in progress, it can be activated by holding the ▲ key pressed for about 3 seconds.

The compressor operates to maintain the "ccS" set point for the time set through the "CCt" parameter. The cycle can be terminated before the end of the set time using the same activation key "▲" for 3 seconds.

THE ON/OFF FUNCTION

With "onF = oFF", pushing the ON/OFFkey, the instrument is switched off. The "OFF" message is displayed. In this configuration, the regulation is disabled. To switch the instrument on, push again the ON/OFF key.

WARNING: Loads connected to the normally closed contacts of the relays are always supplied and under voltage, even if the instrument is in stand by mode.

PARAMETERS

REGULATION

- Hy** Differential: $(0,1 \div 25,5^{\circ}\text{C} / 1 \div 255^{\circ}\text{F})$ Intervention differential for set point. Compressor Cut IN is Set Point + differential (Hy). Compressor Cut OUT is when the temperature reaches the set point.
- LS** Minimum set point: $(-100^{\circ}\text{C} \div \text{SET}; [-148^{\circ}\text{F} \div \text{SET}])$: Sets the minimum value for the set point.
- US** Maximum set point: $(\text{SET} \div 150^{\circ}\text{C} / \text{SET} \div 302^{\circ}\text{F})$. Set the maximum value for set point.
- Ot** Thermostat probe calibration: $(-12,0 \div 12,0^{\circ}\text{C}; -120 \div 120^{\circ}\text{F})$ allows to adjust possible offset of the thermostat probe.
- Ods** Outputs activation delay at start up: $(0 \div 255\text{min})$ This function is enabled at the initial start up of the instrument and inhibits any output activation for the period of time set in the parameter.
- AC** Anti-short cycle delay: $(0 \div 50\text{ min})$ minimum interval between the compressor stop and the following restart.
- Cct** Compressor ON time during continuous cycle: $(0,0 \div 24,0\text{h}; \text{res. } 10\text{min})$ Allows to set the length of the continuous cycle: compressor stays on without interruption for the Cct time. Can be used, for instance, when the room is filled with new products.
- CCS** Set point for continuous cycle: $(-100 \div 150^{\circ}\text{C}; -148^{\circ}\text{F} \div 302^{\circ}\text{F})$ it sets the set point used during the continuous cycle.
- Con** Compressor ON time with faulty probe: $(0 \div 255\text{ min})$ time during which the compressor is active in case of faulty thermostat probe. With COn=0 compressor is always OFF.
- COF** Compressor OFF time with faulty probe: $(0 \div 255\text{ min})$ time during which the compressor is OFF in case of faulty thermostat probe. With COF=0 compressor is always active.
- CH** Type of action: CL = cooling; Ht = heating.

DISPLAY

- CF** Temperature measurement unit: $^{\circ}\text{C}$ =Celsius; $^{\circ}\text{F}$ =Fahrenheit. WARNING: When the measurement unit is changed the SET point and the values of the parameters Hy, LS, US, Ot, ALU and ALL have to be checked and modified if necessary).
- rES** Resolution (for $^{\circ}\text{C}$): (in = 1°C ; dE = $0,1^{\circ}\text{C}$) allows decimal point display.
- dLy** Display delay: $(0 \div 20,0\text{m}; \text{risul. } 10\text{s})$ when the temperature increases, the display is updated of $1^{\circ}\text{C}/1^{\circ}\text{F}$ after this time.

DEFROST

- IdF** Interval between defrost cycles: $(0 \div 120\text{h})$ Determines the time interval between the beginning of two defrost cycles.
- MdF** (Maximum) length for defrost: $(0 \div 255\text{min})$ When P2P = n, (not evaporator probe: timed defrost) it sets the defrost duration, when P2P = y (defrost end based on temperature) it sets the maximum length for defrost.
- dFd** Temperature displayed during defrost: (rt = real temperature; it = temperature at defrost start; SEt = set point; dEF = "dEF" label)
- dAd** MAX display delay after defrost: $(0 \div 255\text{min})$. Sets the maximum time between the end of defrost and the restarting of the real room temperature display.

ALARMS

ALC Temperature alarms configuration: (Ab; rE)

Ab= absolute temperature: alarm temperature is given by the ALL or ALU values. rE = temperature alarms are referred to the set point. Temperature alarm is enabled when the temperature exceeds the "SET+ALU" or "SET-ALL" values.

ALU MAXIMUM temperature alarm: (SET+150°C; SET+302°F) when this temperature is reached the alarm is enabled, after the "ALd" delay time.

ALL Minimum temperature alarm: (-100.0 ÷ SET°C; -148÷302°F) when this temperature is reached the alarm is enabled, after the "ALd" delay time.

AFH Differential for temperature alarm recovery: (0,1÷25,5°C; 1÷45°F) Intervention differential for recovery of temperature alarm.

Ald Temperature alarm delay: (0÷255 min) time interval between the detection of an alarm condition and alarm signalling.

dAo Exclusion of temperature alarm at startup: (from 0.0 min to 23.5h) time interval between the detection of the temperature alarm condition after instrument power on and alarm signalling.

ALARM RELAY MANAGEMENT

tbA Alarm relay silencing (with oA1=ALr): (n= silencing disabled: alarm relay stays on till alarm condition lasts, y=silencing enabled: alarm relay is switched OFF by pressing a key during an alarm).

Aro Alarm relay activation with power failure:

y = the alarm relay is activated if a temperature alarm happens during a power failure

n = the alarm relay is never activated during a power failure

ALF Alarm relay activation for all the alarms:

y = the alarm relay is activated for all the alarms

n = the alarm relay is activated only in case temperature alarms and regulation probe failure.

bon Time of buzzer restart after muting, in case of alarm duration: (0÷30min; with 0 the buzzer is always off after muting)

AoP Alarm relay polarity it set if the alarm relay is open or closed when an alarm happens.

CL= terminals 1-2 closed during an alarm; oP = terminals 1-2 open during an alarm

DIGITAL INPUT

i1P Digital input polarity: oP: the digital input is activated by opening the contact; CL: the digital input is activated by closing the contact.

i1F Digital input configuration: EAL = external alarm: "EA" message is displayed; bAL = serious alarm "CA" message is displayed. PAL = pressure switch alarm, "CA" message is displayed; dor = door switch function; dEF = activation of a defrost cycle; AUS =to switch on the second relay if oA1 = AUS; Htr = kind of action inversion (cooling – heating); FAn = not set it; ES = Energy saving.

did: (0÷255 min) with i1F= EAL or i1F = bAL digital input alarm delay: delay between the detection of the external alarm condition and its signalling.

with i1F= dor: door open signalling delay

with i1F = PAL: time for pressure switch function: time interval to calculate the number of the pressure switch activation.

- nPS** Pressure switch number(0 ÷15) Number of activation of the pressure switch, during the “did” interval, before signalling the alarm event (I2F= PAL). If the nPS activation in the did time is reached, switch off and on the instrument to restart normal regulation.
- odc** Compressor status with door open: no, Fan = normal; CPr; F_C = Compressor OFF
- rrd** Outputs restart after doA alarm: no = outputs not affected by the doA alarm; yES = outputs restart with the doA alarm;
- HES** Temperature increase during the Energy Saving cycle: (-30,0°C÷30,0°C/-22÷86°F) it sets the increasing value of the set point during the Energy Saving cycle.

OTHER

- Adr** Serial address(1÷244): Identifies the instrument address when connected to a ModBUS compatible monitoring system.
- PbC** Type of probe it allows to set the kind of probe used by the instrument: PtC = PTC probe, Pt1 = Pt1000 probe.
- onF** on/off key enabling: nu = disabled; oFF = enabled; ES = not set it.
- rSE** Real set point: (readable only), it shows the set point used during the energy saving cycle or during the continuous cycle.
- rEL** Software release for internal use.
- Ptb** Parameter table code: readable only

DIGITAL INPUT

The free voltage digital input is programmable in different configurations by the “i1F” parameter.

DOOR SWITCH INPUT (i1F = dor)

It signals the door status and the corresponding relay output status through the “odc” parameter: no, Fan = normal (any change); CPr, F_C = Compressor OFF.

Since the door is opened, after the delay time set through parameter “did”, the door alarm is enabled, the display shows the message “dA” and the regulation restarts is rtr = yES. The alarm stops as soon as the external digital input is disabled again. With the door open, the high and low temperature alarms are disabled.

GENERIC ALARM (i1F = EAL)

As soon as the digital input is activated the unit will wait for “did” time delay before signalling the “EAL” alarm message. The outputs status don’t change. The alarm stops just after the digital input is de-activated.

SERIOUS ALARM MODE (i1F = bAL)

When the digital input is activated, the unit will wait for “did” delay before signalling the “CA” alarm message. The relay outputs are switched OFF. The alarm will stop as soon as the digital input is de-activated.

PRESSURE SWITCH (i1F = PAL)

If during the interval time set by “did” parameter, the pressure switch has reached the number of activation of the “nPS” parameter, the “CA” pressure alarm message will be displayed. The compressor and the regulation are stopped. When the digital input is ON the compressor is always OFF.

If the nPS activation in the did time is reached, switch off and on the instrument to restart normal regulation.

START DEFROST (i1F = dFr)

It starts a defrost if there are the right conditions. After the defrost is finished, the normal regulation will restart only if the digital input is disabled otherwise the instrument will wait until the "MdF" safety time is expired.

INVERSION OF THE KIND OF ACTION: HEATINGCOOLING (i1F = Htr)

This function allows to invert the regulation of the controller: from cooling to heating and viceversa.

ENERGY SAVING (i1F = ES)

The Energy Saving function allows to change the set point value as the result of the SET+ HES (parameter) sum. This function is enabled until the digital input is activated.

DIGITAL INPUTS POLARITY

The digital input polarity depends on the "i1P" parameter.

i1P=CL: the input is activated by closing the contact.

i1P=OP: the input is activated by opening the contact

ALARM SIGNALS

Message	Cause	Outputs
"P1"	Room probe failure	Compressor output acc. to par. "Con" and "COF"
"HA"	Maximum temperature alarm	Outputs unchanged.
"LA"	Minimum temperature alarm	Outputs unchanged.
"dA"	Door open	Compressor according to rrd
"EA"	External alarm	Output unchanged.
"CA"	Serious external alarm (i1F=bAL)	All outputs OFF.
"CA"	Pressure switch alarm (i1F=PAL)	All outputs OFF

ALARM RECOVERY

Probe alarm "P1" starts some seconds after the fault in the related probe; it automatically stops some seconds after the probe restarts normal operation. Check connections before replacing the probe.

Temperature alarms "HA" and "LA" automatically stop as soon as the thermostat temperature returns to normal values.

Alarms "EA" and "CA" (with i1F=bAL) recover as soon as the digital input is disabled.


Alarm "CA" (with i1F=PAL) recovers only by switching off and on the instrument.

OTHER MESSAGES

Pon	Keyboard unlocked.
PoF	Keyboard locked
noP	In programming mode: none parameter is present in Pr1 On the display or in dP2, dP3, dP4: the selected probe is nor enabled
noA	None alarm is recorded.

CONNECTIONS

XR30CX: 20A COMPRESSOR

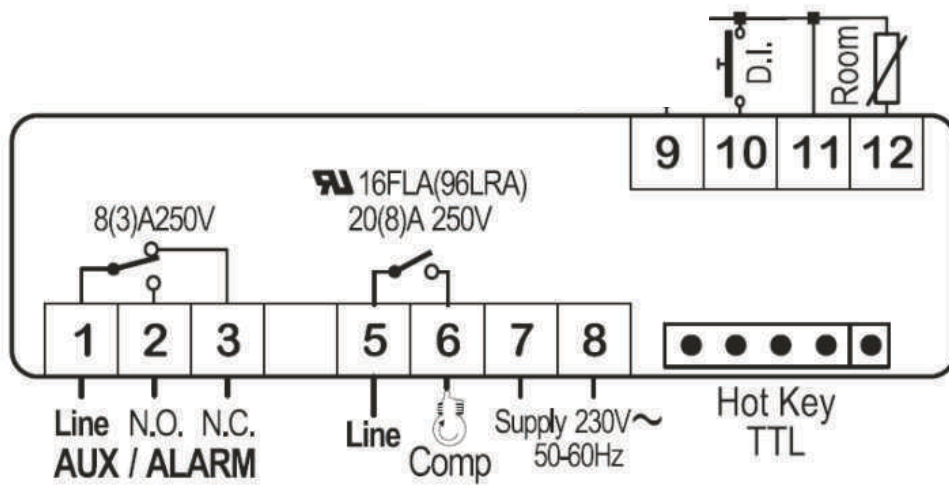

12Vac/dc supply: connect to the terminals 7 and 8.

24Vac/dc supply: connect to the terminals 7 and 8.


120Vac supply: connect to the terminals 7 and 8.

DEFAULT SETTING VALUES

Label	Name	Range	Set point	Pr 1/2
Set	Set point	LS÷US	-47	---
Hy	Differential	0,1÷25,5°C/1÷255°F	1	Pr1
LS	Minimum set point	[-100,0°C ÷ SET] [-148°F ÷ SET]	-47	Pr2
US	Maximum set point	[SET ÷ 150,0°C] [SET ÷ 302°F]	-20	Pr2
Ot	Thermostat probe calibration	-12÷12°C/-120÷120°F	0	Pr1
OdS	Outputs delay at start up	0÷255min	0	Pr2
AC	Anti-short cycle delay	0÷50min	5	Pr1
CCt	Continuous cycle duration	0.0÷24.0h	0,0	Pr2
CCS	Set point for continuous cycle	(-100÷150,0°C) (-148÷302°F)	-47	Pr2
CO_n	Compressor ON time with faulty probe	0÷255min	60	Pr2
CO_F	Compressor OFF time with faulty probe	÷255min	5	Pr2
CH	Kind of action	CL=cooling; Ht=heating	CL	Pr2
CF	Temperature measurement unit	°C÷°F	°C	Pr2
rES	Resolution	In=integer; dE=dec.point	in	Pr2
dLy	Display temperature delay	0÷20.0min (10sec.)	0	Pr2
IdF	Interval between defrost cycles	1÷120ore	0	Pr1
MdF	(Maximum) length for defrost	0÷255min	0	Pr1
dFd	Displaying during defrost	rt, it, Set, DEF	rt	Pr2
dAd	MAX display delay after defrost	0÷255min	0	Pr2
ALc	Temperature alarms configuration	rE=related to set; Ab=absolute	rE	Pr2
ALU	Maximum temperature alarm	Set÷110,0°C; Set÷230°F	15	Pr1
ALL	Minimum temperature alarm	-100°C÷Set/ -148°F÷Set	50	Pr1
AFH	Differential for temperature alarm recovery	(0,1°C÷25,5°C)(1°F÷45°F)	1	Pr2
ALd	Temperature alarm delay	0÷255min	0	Pr2
dAo	Delay of temperature alarm at start up	0÷23h e 50'	0	Pr2
tbA	Alarm relay disabling	n=no; y=yes	y	Pr2
Aro	Alarm relay activation with power failure	n(0) – y(1)	y	Pr2
ALF	Alarm relay activation for all the alarms	n(0) – y(1)	y	Pr2
bon	Time of buzzer restart after muting, in case of alarm duration	0 ÷ 30 (min)	0	Pr2
AoP	Alarm relay polarity (0A1=ALr)	oP; cL	cL	Pr2
i1P	Digital input polarity	oP=opening; cL=closing	cL	Pr1
i1F	Digital input configuration	EAL, bAL,PAL, dor; dEF; Htr, AUS	AUS	Pr1
did	Digital input alarm delay	0÷255min	15	Pr1
nPS	Number of activation of pressure switch	0÷15	15	Pr2
ode	Compress status when open door	No; Fan;CPr;F_C	no	Pr2
rrd	Regulation restart with door open alarm	n - y	y	Pr2
HES	Differential for Energy Saving	(-30°C÷30°C) (-54°F÷54°F)	1	Pr2
Adr	Serial address	0÷247	1	Pr2
PbC	Kind of probe	Ptc; ntc	Ptc	Pr2
onF	On/off key enabling	Nu, oFF; ES	oFF	Pr2
rSE	Real set point value	Actual set	---	Pr2
rEL	Software release	---	---	Pr2

Cleaning and Maintenance of the Freezer

1. Ice on the inside of the box should be removed as required, as it reduces the cooling capacity! Take the contents out of the freezer. Pull out the plug and leave the lid open until the ice can be removed. (Remember safety gloves).
2. Dry the inner container with a cloth until it is not damp any longer!
3. Clean the outside of the freezer with a damp cloth. Be careful not to get damp (water) on the electrical parts, or water into the vent holes, as water and damp may damage the electrical parts and cause the freezer to short-circuit!
4. The ice formed on the inside of the lid should be removed with a wooden/plastic scraper. This ice will build up because of the low temperatures inside the box, and if it is not removed it will cause the lid to open.
5. Use authorised cleaning products. The use of alcohol, dissolvents and alkaline cleaning agents is prohibited.
6. Clean the vent holes on the rear condenser with a vacuum cleaner at least once a year (see the sketches).

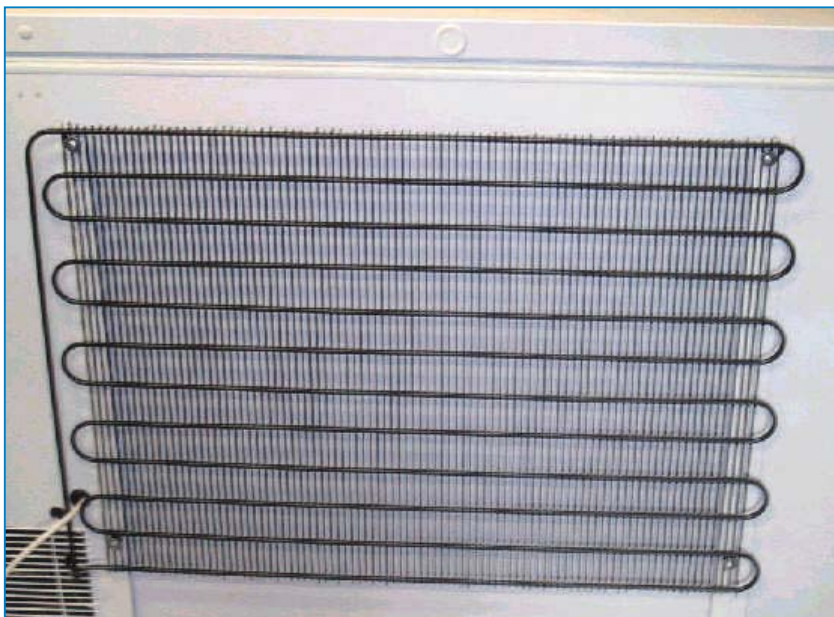

Relocating or Moving the Freezer

Never leave the freezer to others without instructing these people in its use and the safety regulations described in the operating instructions. Always let an authorised electrician install the freezer. (Remember to wait for one hour before restarting it).

If the freezer and its electrical parts are reconstructed, the guarantee and safety regulations shall cease to apply.

If the freezer does not work: call an authorised servicing engineer!


Contact the distributor or an authorised service repair shop!

Disposing of the Freezer

To prevent harmful environmental effects, contact the distributor and ask where the freezer should be delivered.


Remove the locking function so that children cannot be locked in the freezer whilst playing.

Wiring Diagram

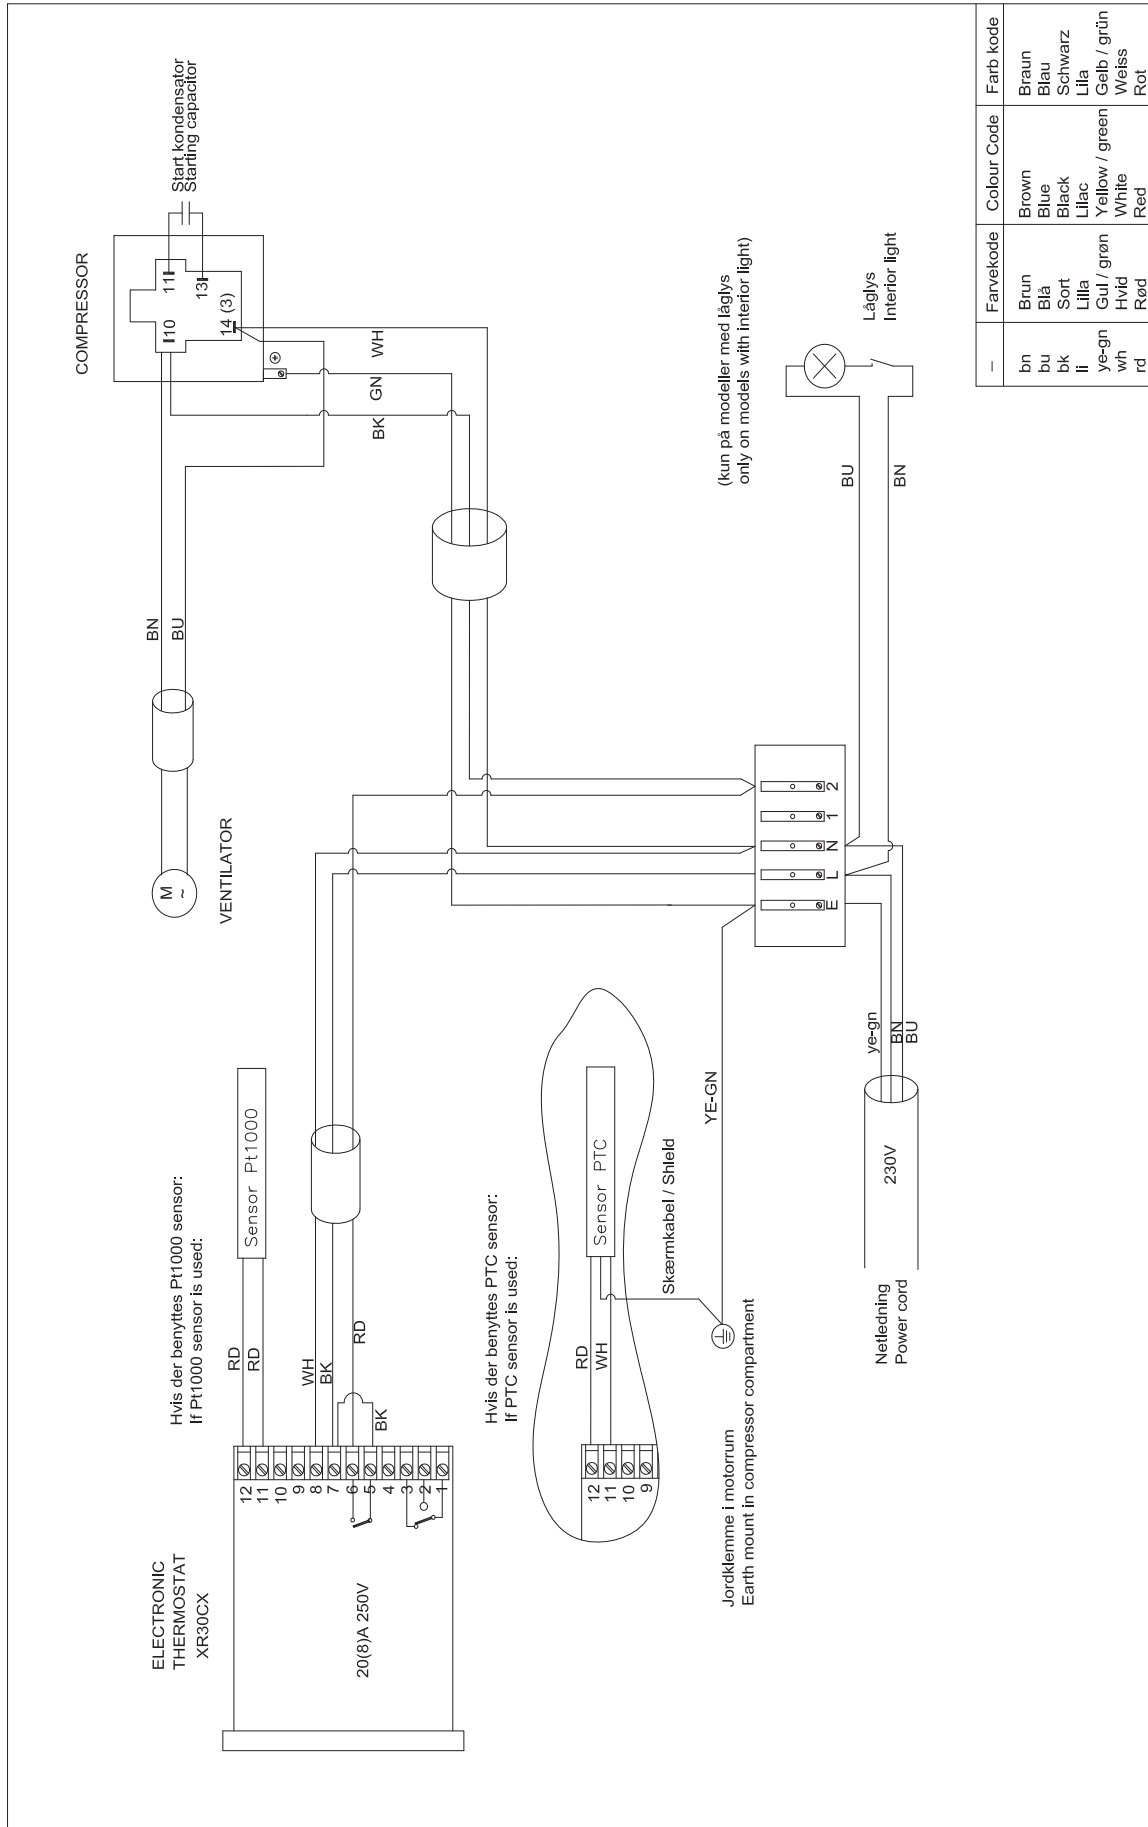


Wiring-diagram for LTFE 140

Wiring Diagram

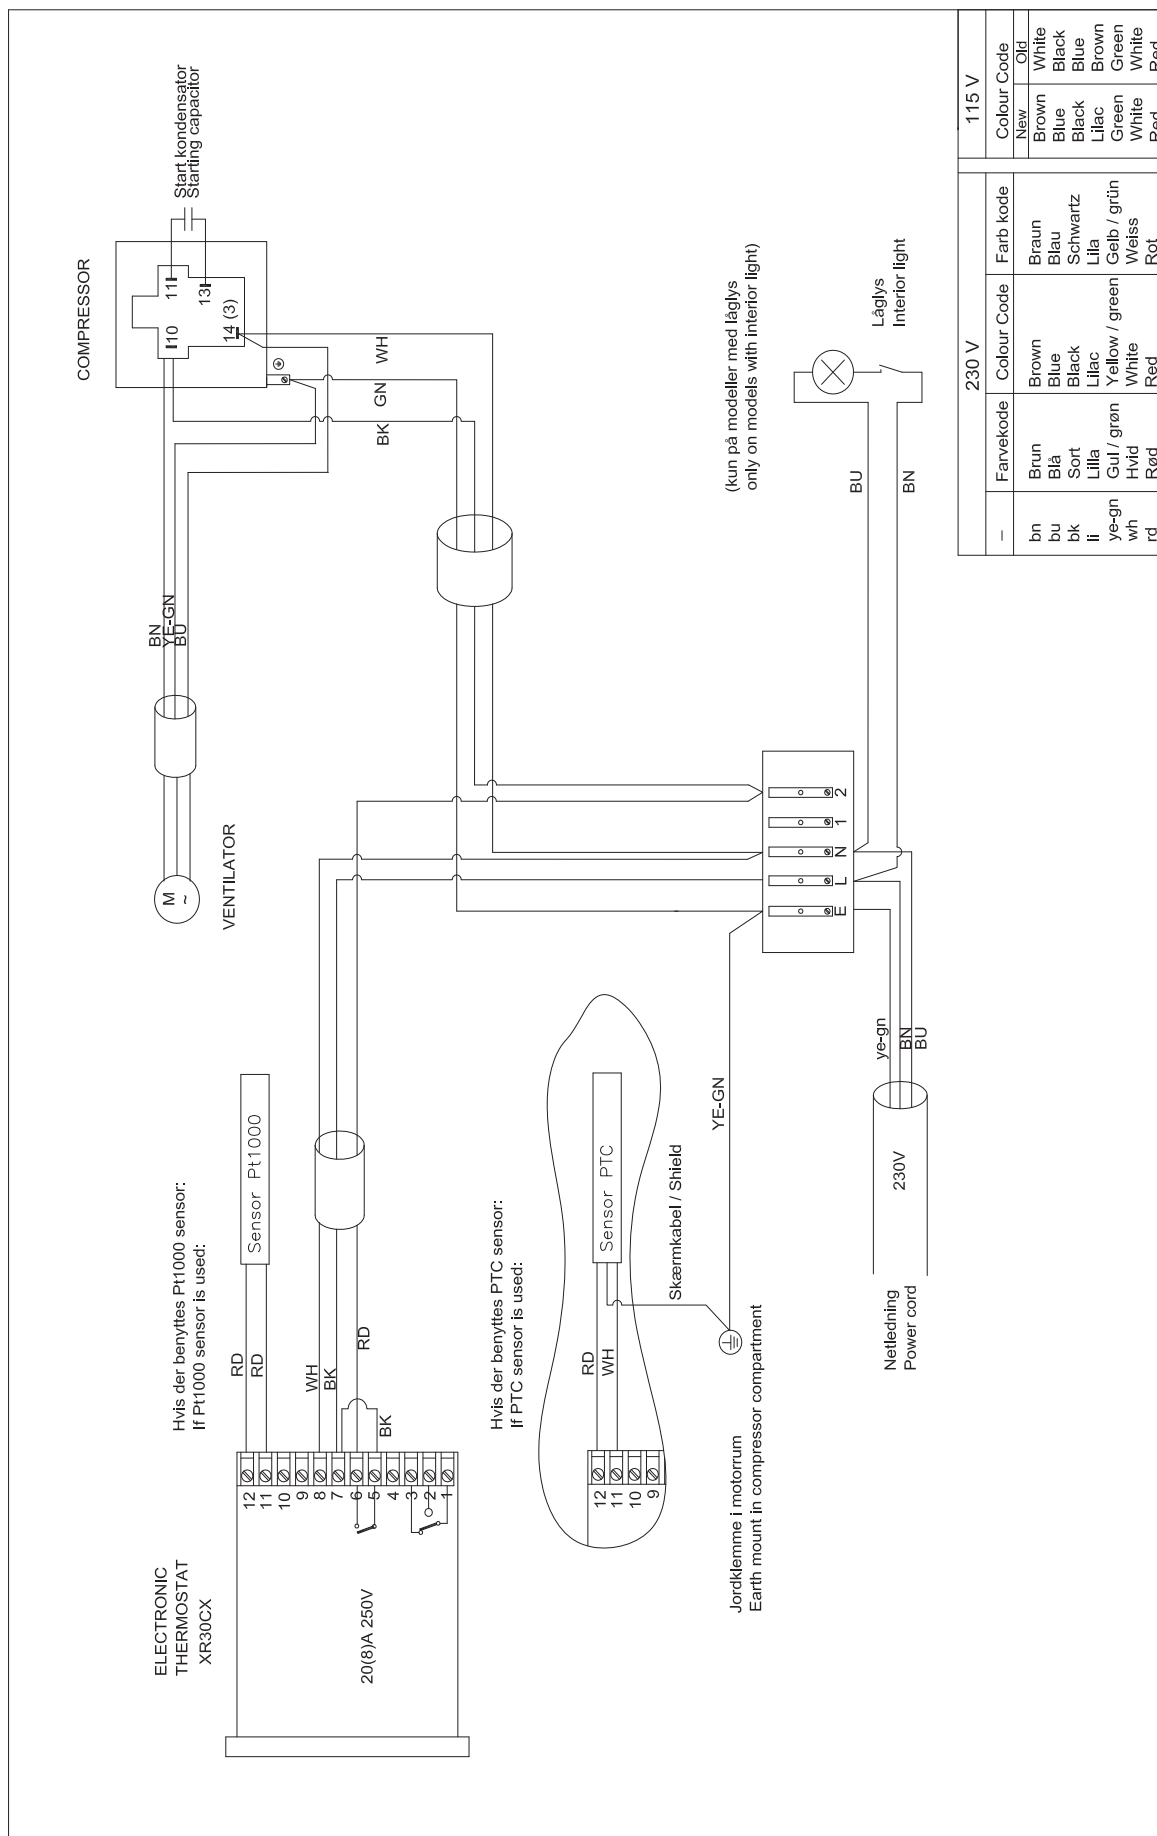

Wiring-diagram for LTFE 290

Wiring Diagram

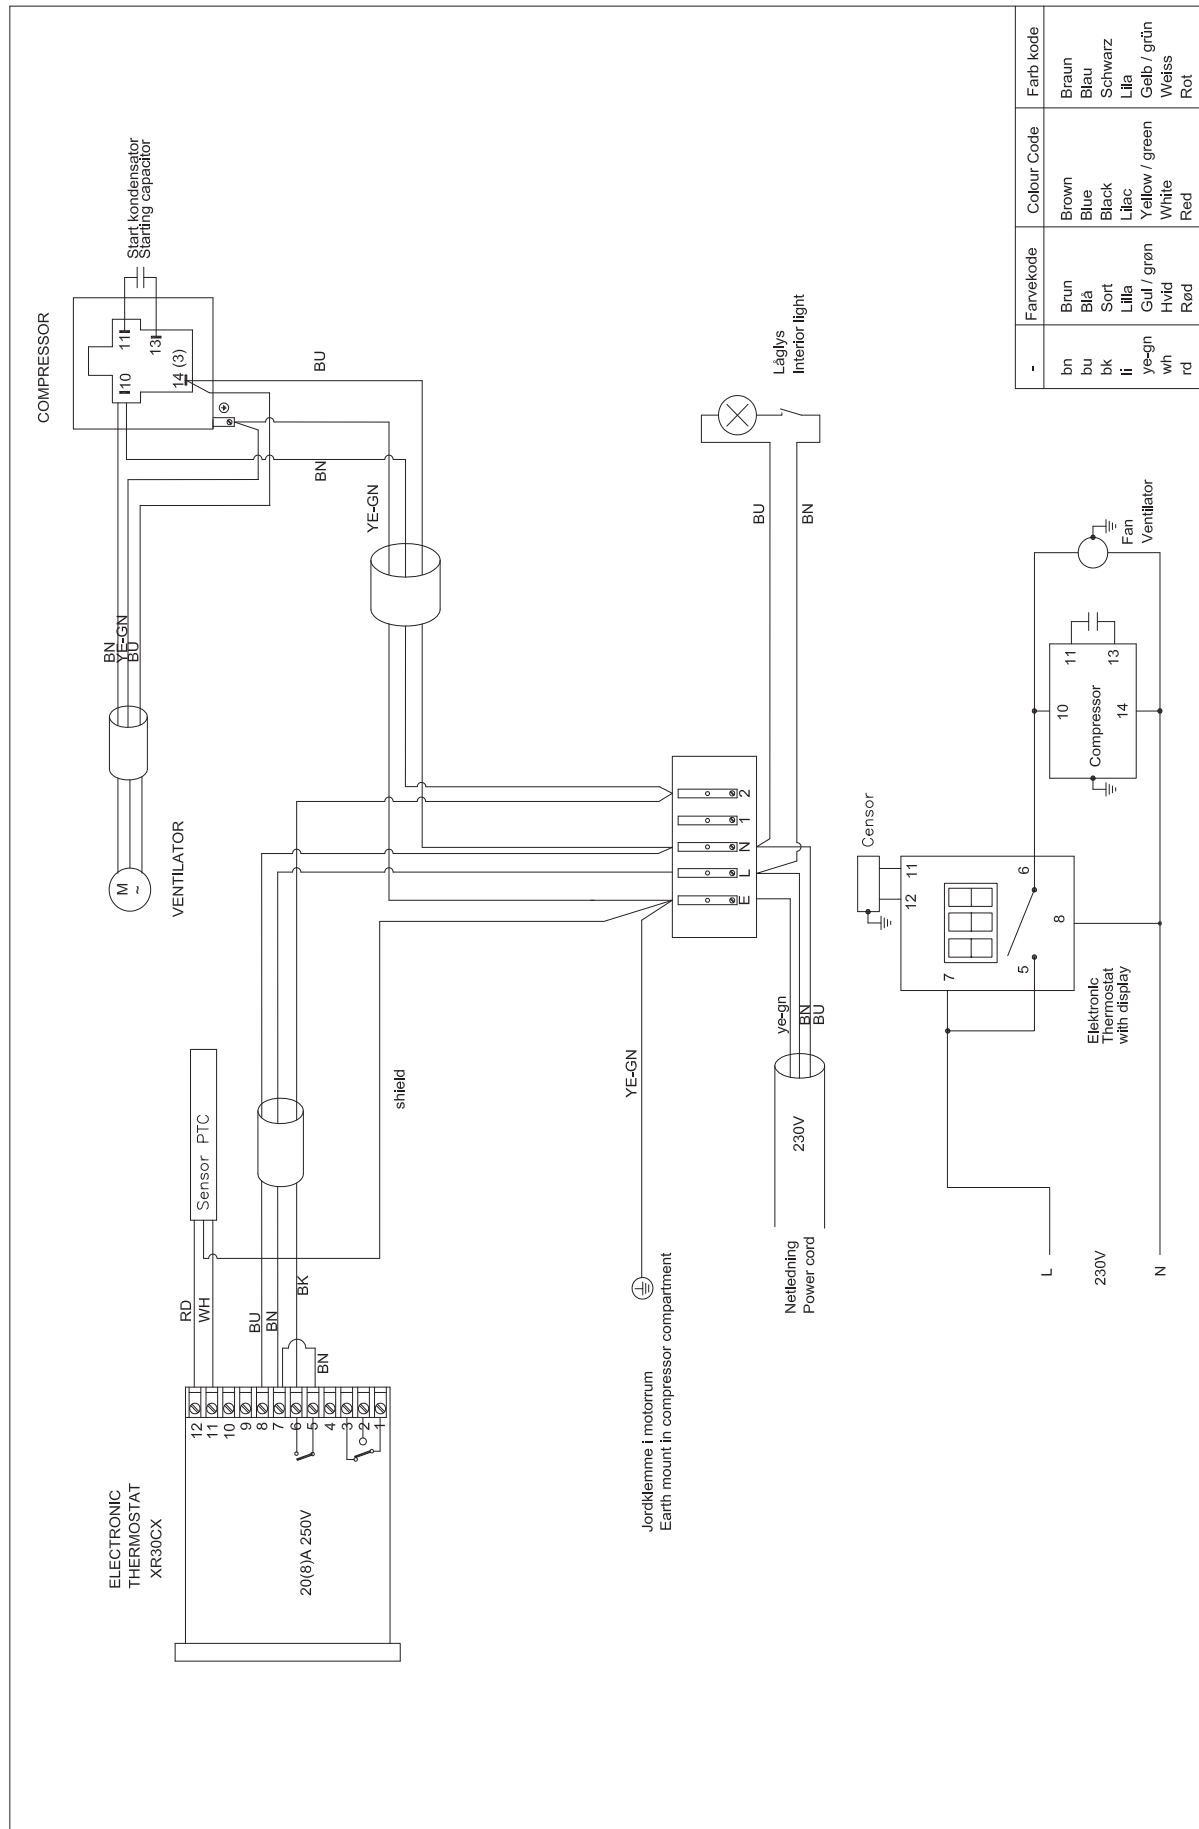

Wiring-diagram for LTFE 370 / 515



WWW.ARCTIKO.COM

LAMMEFJORDSVEJ 5
DK-6715 ESBJERG N
DENMARK
TEL. +45 70 20 03 28
FAX +45 70 20 03 29
INFO@ARCTIKO.COM
WWW. ARCTIKO.COM