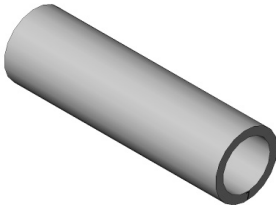
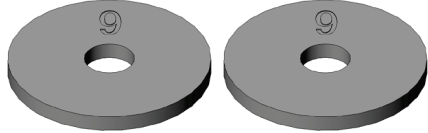
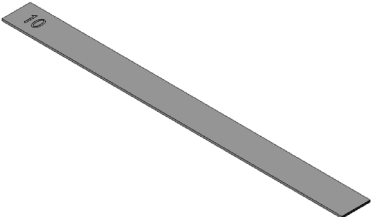
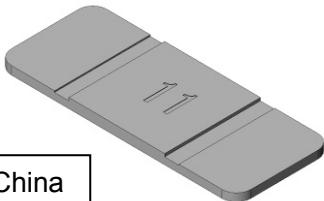
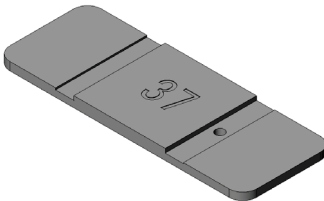
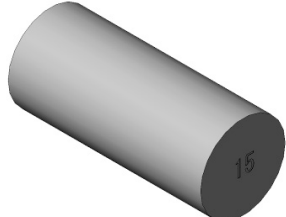
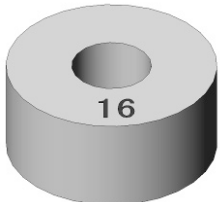
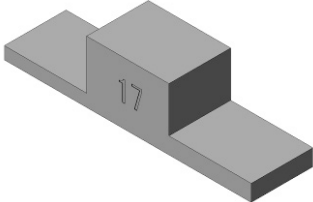
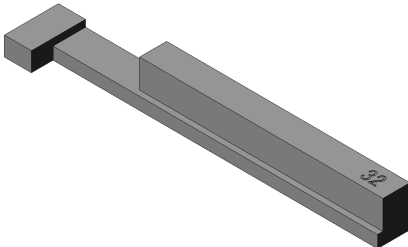
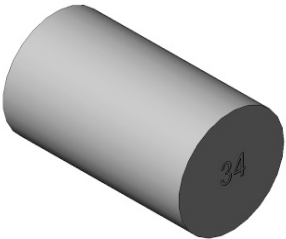
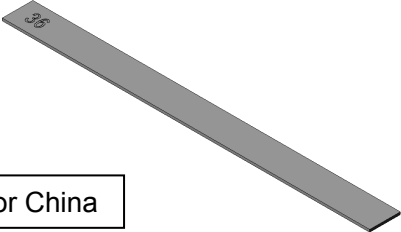


4-1. Mechanical Adjustment

Adjustment Gauges

Gauge 1 (1AG00J00100) 	Gauge 7 (1AG00J00700) 	Gauge 8 (1HA00J00800) 	Gauge 9 (1HA00J00900) 
Gauge 10 (1AG00J01000) 	Gauge 11 (1AG00J01100)  For China	Gauge 37 (1HA00J03700) 	Gauge 15 (1AG00J01500) 
Gauge 16 (1AG00J01600) 	Gauge 17 (1AG00J01700) 	Gauge 32 (1AG00J06100) 	Gauge 34 (1AG00J06300) 
Gauge 36 (1AG00J06600)  For China	Gauge $\phi 15$ (1AG00J03600) 