


# Magsense™ and alarm management

## Enabling safe, MRI-compatible infusion

The magnetic fields emitted by MR scanners can cause severe damage to infusion pumps. Ensuring a proper placement of the MRI infusion station is the key to a safe MRI infusion.

**Magsense™:**  
**An accurate magnetic density monitoring and alarm system**

- Continuous and real-time monitoring of the magnetic field strength
- Clear alarm indications through light and sound signals
- A built-in rechargeable battery for uninterrupted usage for over 30 days

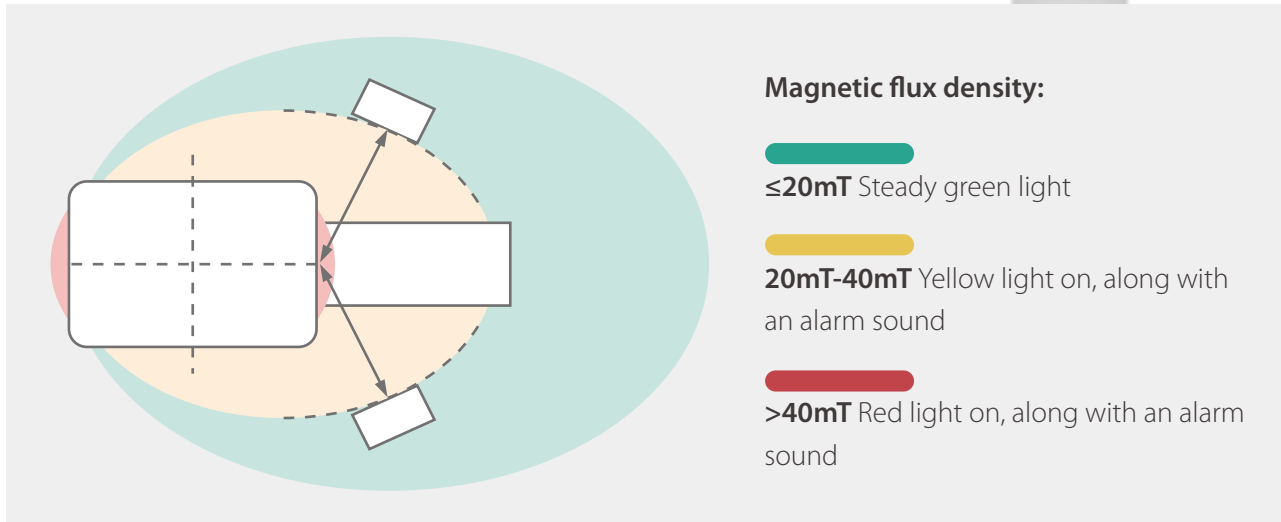

## Clear alarm with a quick glance

### Easily noticeable indications

- Clear alarm indications with a wide 270° visible angle
- Synchronized alarm between the pump and the station, enabling a quick and accurate location of emergencies



# BeneFusion MRI Station Secure the care, free the flow



[www.mindray.com](http://www.mindray.com)

P/N:ENG-BeneFusion MRI Station-210285X6P-20230804  
©2023 Shenzhen Mindray Bio-Medical Electronics Co.,Ltd. All rights reserved.



# BeneFusion MRI Station

High performance in extreme environments



1.5T/3.0T

Provides MRI-compatible infusion with both 1.5T and 3.0T MRI scanners



Protects infusion pumps from the magnetic field of the MRI scanner



Isolates electromagnetic interference from the infusion devices for high-quality MRI imaging



Monitors the magnetic flux density to ensure the safety of MRI procedures



Wireless remote control & monitoring

# Smart MRI IT Solution

Innovative wireless remote control function

Allows users to remotely control infusion pumps during MRI scanning without disrupting the operation of the MRI machine, thereby enhancing work efficiency and safety.

- Start/stop infusions
- Change infusion rate
- Pause/reset alarms



Enterprise-grade encryption technology ensures the security of the medical network



# Top-notch industrial design

Integrated IV pole

IV set management slots

Front and back handles

Storage table



Free combination of four channels



# Ergonomic and user-friendly details



- The display screen shows the total volume, WiFi status, patient info, and more
- A big and clear observation window allows users to view infusion details at a glance



**An innovative auto handle brake system is available to ensure safe and seamless transfers**

- The handle and brake are integrated to ensure the wheels are automatically locked when the handle is released
- Can be unlocked continuously as needed
- Provides both front and back handles to meet different transfer applications

# BeneFusion MRI Station

MRI compatible infusion system

Data Sheet



**Size**

Include trolley, exclude IV pole: ≤ 560 x 540 x 1540 mm

**Weight**

Include trolley and IV pole ≤ 50 kg (without pump)

**Display**

Screen ≥ 3 inches, OLED, 256x64 pixels  
Information bed number, patient name, battery status, network status, total volume of the 24h infusion of the pump

**Compatible pumps**

Maximum four BeneFusion n/e infusion/syringe pumps

**MRI Scanner**

Both 1.5T and 3.0T MRI scanner

**Power supply**

Battery type Lithium-ion, 3400mAh  
Operating time (dock) ≥10 hours  
Recharging time (dock) ≤ 6 hours  
Operating time (Magnet indicator) ≥720 hours  
Recharging time (Magnet indicator) ≤8 hours  
AC power 100-240V~, 50/60Hz, 2.47-1.56A

**Environment**

Temperature 5-40°C for operating, -30-70°C for storage  
Humidity 15-95% for operating, 10-95% for storage  
Air pressure 57.0-107.4kPa for operating, 16.0-107.4kPa for storage

**Alarms**

Type Audible and visual alarm  
Alarm centralization High: Battery Depleted/Magnet indicator battery depleted/System Error

Low: Low Battery/Magnet indicator battery low/ Battery Error/LAN IP Address Conflict/WLAN IP Address Conflict/Network Disconnected

**MagSense (Magnet indicator)**

Magnetic field <20mT Green; 20-40mT Yellow; > 40mT Red

**Magnetic field**

To be used in magnetic fields up to 20 mT

**Connectivity**

Communication Wireless  
USB Support drug library import, patient information loading, patient data export, history record export, system update  
Integration Synergy with patient monitor  
Connect with BeneFusion nCS infusion central station  
Connect with BeneVision Central Monitoring System (CMS)

**Other**


Material Shielded aluminum housing  
Ingress protection level IP33  
Safety Standards: EN 60601-1-2:2006/A1:2013  
EN 60601-1-2:2015  
EN60601-1-8:2007/A11 :2017  
F2052-15, F2182 – 19, F2213 – 17, F2503 - 20  
Classification: Type CF, class I

Mindray Building, Keji 12th Road South,  
High-tech Industrial Park, Nanshan, Shenzhen 518057, P.R. China  
Tel: +86 755 8188 8998 Fax: +86 755 26582680  
E-mail: intl-market@mindray.com www.mindray.com

**mindray** | Healthcare with intelligence registered trademarks or trademarks owned by Shenzhen Mindray Bio-medical Electronics Co., LTD  
© 2020 Shenzhen Mindray Bio-medical Electronics Co., Ltd. All rights reserved. Specifications subject to changes without prior notice.  
P/N: ENG- BeneFusion MRI Station Datasheet-210285x2P-20220906

**mindray**

# Dedicated pump for MRI station

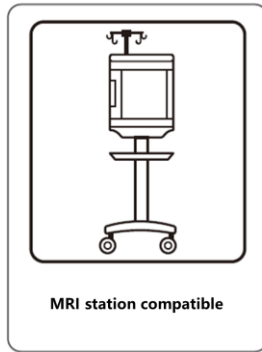


## Dedicated pump for MRI

- ◆ Silk label on the top of the pump
- ◆ When a non-dedicated pump is inserted into the MRI Station, and the pump pops up "Device cannot be used in MRI environment"

## Supported Models

- ◆ Special anti-magnetic design, available in nVP/nSP/eVP/eSP
- ◆ PCA mode is not supported when using in the MRI environment

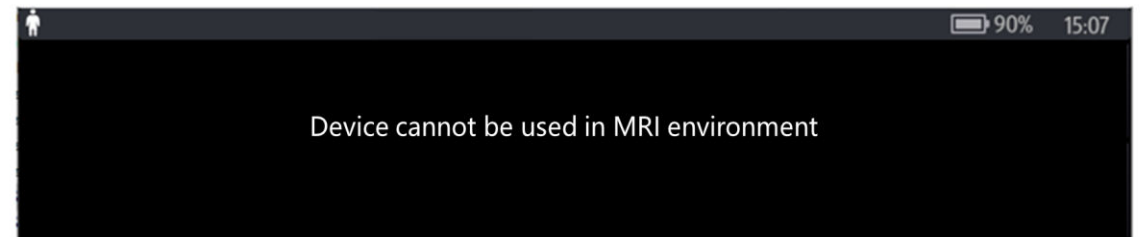

Smart touch  
Safe medication



# Differences between normal pump & MRI station compatible pump

## Differences

- ◆ Appearance difference: For MRI station compatible pump, there is a label “MRI station compatible” on the top of the pump to remind users that this pump could be inserted into MRI station.



- ◆ Hardware difference: For MRI station compatible pump, there is a special anti-magnetic shield cover the main board inside the pump.

For normal pump, it cannot be upgrade into MRI station compatible pump.



Smart touch  
Safe medication

**BeneFusion MRI Station**

**MRI Infusion Workstation**

**Operator's Manual**







© Copyright 2022-2024 Shenzhen Mindray Scientific Co., Ltd. All rights reserved.

Release date: January 2024

Revision: 4.0

# Intellectual Property Statement

SHENZHEN MINDRAY SCIENTIFIC CO., LTD. (hereinafter called Mindray Scientific) owns the intellectual property rights to this product and this manual. This manual may refer to information protected by copyrights or patents and does not convey any license under the patent rights of Mindray Scientific, nor the rights of others.

Mindray Scientific intends to maintain the contents of this manual as confidential information. Disclosure of the information in this manual in any manner whatsoever without the written permission of Mindray Scientific is strictly forbidden.

Release, amendment, reproduction, distribution, rental, adaptation, translation of this manual in any manner whatsoever without the written permission of Mindray Scientific is strictly forbidden.

**mindray**, , **MINDRAY**, and **BeneFusion** are the registered trademarks or trademarks owned by Mindray in China and other countries. Mindray Scientific is authorized by Mindray to use above registered trademarks or trademarks.

## Responsibility on the Manufacturer Party

Contents of this manual are subject to changes without prior notice.

All information contained in this manual is believed to be correct. Mindray Scientific shall not be liable for errors contained herein nor for incidental or consequential damages in connection with the furnishing, performance, or use of this manual.

Mindray Scientific is responsible for the effects on safety, reliability and performance of this product, only if:

- all installation operations, expansions, changes, modifications and repairs of this product are conducted by Mindray Scientific authorized personnel;
- the electrical installation of the relevant room complies with the applicable national and local requirements;
- the product is used in accordance with the instructions for use.

# Warranty

THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

## Exemptions

Mindray Scientific's obligation or liability under this warranty does not include any transportation or other charges or liability for direct, indirect or consequential damages or delay resulting from the improper use or application of the product or the use of parts or accessories not approved by Mindray Scientific or repairs by people other than Mindray Scientific authorized personnel.

This warranty shall not extend to

- Malfunction or damage caused by improper use or man-made failure.
- Malfunction or damage caused by unstable or out-of-range power input.
- Malfunction or damage caused by force majeure such as fire and earthquake.
- Malfunction or damage caused by improper operation or repair by unqualified or unauthorized service people.
- Malfunction of the instrument or part whose serial number is not legible enough.
- Others not caused by instrument or part itself.

## Company Contact



Manufacturer:	Shenzhen Mindray Scientific Co., Ltd.
Address:	6/F, Bldg 2, 1203 Nanhuan Avenue, Yutang Block, Guangming District, 518106 Shenzhen, P.R.China
Website:	<a href="http://www.mindray.com">www.mindray.com</a>
E-mail Address:	<a href="mailto:service@mindray.com">service@mindray.com</a>
Tel:	+86 755 81888998
Fax:	+86 755 26582680



EC-Representative:	Shanghai International Holding Corp. GmbH (Europe)
Address:	Eiffestraße 80, 20537 Hamburg, Germany
Tel:	0049-40-2513175
Fax:	0049-40-255726

# Notification of Adverse Events

As a health care provider, you may report the occurrence of certain events to SHENZHEN MINDRAY SCIENTIFIC CO., LTD., and possibly to the competent authority of the Member state in which the user and / or patient is established.

These events, include device-related death and serious injury or illness. In addition, as part of our Quality Assurance Program, SHENZHEN MINDRAY SCIENTIFIC CO., LTD. requests to be notified of device failures or malfunctions. This information is required to ensure that SHENZHEN MINDRAY SCIENTIFIC CO., LTD. provides only the highest quality products.

## Preface

### Manual Purpose

This manual contains the instructions necessary to operate the product safely and in accordance with its function and intended use. Observance of this manual is a prerequisite for proper product performance and correct operation and ensures patient and operator safety.

This manual is based on the maximum configuration and therefore some contents may not apply to your product. If you have any question, please contact us.

This manual is an integral part of the product. It should always be kept close to the equipment so that it can be obtained conveniently when needed.

### Intended Audience

This manual is geared for clinical professionals who are expected to have a working knowledge of medical procedures, practices and terminology as required for monitoring of critically ill patients.

### Illustrations

All illustrations in this manual serve as examples only. They may not necessarily reflect the setup or data displayed on your equipment.

### Conventions

- ***Italic text*** is used in this manual to quote the referenced chapters or sections.
- **Bold text** is used to indicate the screen texts.
- → is used to indicate operational procedures.



# Contents

<b>1 Safety</b>	<b>1 - 1</b>
1.1 Safety Information	1 - 1
1.1.1 Warnings	1 - 1
1.1.2 Cautions	1 - 2
1.1.3 Notes	1 - 3
1.2 Equipment Symbols	1 - 3
<b>2 Equipment Introduction</b>	<b>2 - 1</b>
2.1 Intended Use	2 - 1
2.1.1 Intended Purpose	2 - 1
2.1.2 Indication for Use	2 - 1
2.1.3 Intended Users	2 - 1
2.1.4 Intended Patient Population	2 - 1
2.1.5 Intended Medical Conditions	2 - 2
2.1.6 Contra-indications	2 - 2
2.1.7 Side-effects	2 - 2
2.2 Dock	2 - 3
2.2.1 Front View	2 - 3
2.2.2 Left View	2 - 7
2.2.3 Rear View	2 - 8
2.3 Screen Display	2 - 8
2.3.1 On-screen Symbols	2 - 9
2.3.2 Using the Pump Touchscreen	2 - 9
2.3.3 Using the Pump On-Screen Keyboard	2 - 10
<b>3 Equipment Preparation</b>	<b>3 - 1</b>
3.1 Equipment Preparation Safety Information	3 - 1
3.2 Environmental Requirements	3 - 2
3.3 Setting Up the Equipment	3 - 2
3.3.1 Turning on the Dock	3 - 2
3.3.2 Securing a Pump in the Dock	3 - 3
3.3.3 Charging the Battery	3 - 4
<b>4 Getting Started</b>	<b>4 - 1</b>
4.1 Locating the Equipment	4 - 1
4.2 Connecting the AC Mains	4 - 2
4.3 Starting the MR Examination	4 - 3
4.4 Completing the MR Examination	4 - 4
<b>5 Dock Setup</b>	<b>5 - 1</b>
5.1 Accessing the Dock Setup Menu	5 - 1

5.2 The Network Setup Settings .....	5 - 1
5.2.1 The Network Type Settings .....	5 - 1
5.2.2 The LAN IP Settings .....	5 - 2
5.2.3 The WLAN Settings .....	5 - 2
5.2.4 The Bedside Hotspot Settings .....	5 - 3
5.2.5 The WLAN IP Settings .....	5 - 3
5.2.6 The Central Station Setup Settings .....	5 - 4
5.2.7 The Device Discover Settings .....	5 - 4
5.2.8 The ADT Setup Settings .....	5 - 4
5.2.9 The Cert Manage Settings .....	5 - 5
5.2.10 The HL7 Configuration Settings .....	5 - 5
5.3 The Device Management Settings .....	5 - 6
5.4 The Patient Information Settings .....	5 - 6
5.5 Viewing the History Record .....	5 - 6
5.6 Exporting the History Record .....	5 - 6
5.7 The Language Settings .....	5 - 7
5.8 The Alarm Settings .....	5 - 7
5.9 The Night Mode Settings .....	5 - 7
5.10 The Import and Export Settings .....	5 - 8
5.11 Viewing the Version Information .....	5 - 8
5.12 Viewing the Dock Information .....	5 - 8
5.13 Exporting the Log .....	5 - 8
5.14 The Batch Configuration Settings .....	5 - 8
<b>6 Alarms .....</b>	<b>6 - 1</b>
6.1 Alarm Safety Information .....	6 - 1
6.2 Understanding the Alarms .....	6 - 1
6.2.1 Alarm Priorities .....	6 - 1
6.2.2 Alarm Indicators .....	6 - 1
6.2.3 Alarm Handling Rules .....	6 - 2
6.3 Setting the Alarm Sound .....	6 - 3
6.3.1 Setting the Alarm Volume .....	6 - 3
6.3.2 Setting the Alarm Sound Mode .....	6 - 3
6.4 Alarm Solutions .....	6 - 3
<b>7 Networked Communication .....</b>	<b>7 - 1</b>
7.1 Network Safety Information .....	7 - 1
7.2 Connecting the Equipment to the CMS .....	7 - 1
7.3 Connecting the Equipment to the Monitor .....	7 - 2
7.4 Connecting the Equipment to the eGateway .....	7 - 2
<b>8 Managing Patient .....</b>	<b>8 - 1</b>
8.1 Admitting a Patient .....	8 - 1
8.2 Exporting Patient Information .....	8 - 1

8.3 Importing Patient Information .....	8 - 1
<b>9 Maintenance .....</b>	<b>9 - 1</b>
9.1 Maintenance Safety Information .....	9 - 1
9.2 Maintenance and Testing Schedule .....	9 - 2
9.3 Testing Methods and Procedures .....	9 - 2
9.3.1 Performing Visual Inspection .....	9 - 2
9.3.2 Performing Power-on Test .....	9 - 3
9.3.3 Checking the Battery .....	9 - 3
9.4 Maintaining the Battery .....	9 - 3
9.4.1 Battery Safety Information .....	9 - 3
9.4.2 Installing the Battery .....	9 - 4
9.4.3 Charging the Battery .....	9 - 4
9.4.4 Conditioning the Battery .....	9 - 5
9.5 Checking Version Information .....	9 - 5
9.6 Checking the History Record .....	9 - 6
9.7 Exporting the History Record .....	9 - 6
9.8 Disposing of the Equipment .....	9 - 6
<b>10 Care and Cleaning .....</b>	<b>10 - 1</b>
10.1 Care and Cleaning Safety Information .....	10 - 1
10.2 Cleaning the Equipment .....	10 - 2
10.3 Disinfecting the Equipment .....	10 - 2
10.4 Sterilization .....	10 - 3
10.5 Impact of Improper Cleaning .....	10 - 3
<b>11 Accessories .....</b>	<b>11 - 1</b>
<b>A Product Specifications .....</b>	<b>A - 1</b>
A.1 Classifications .....	A - 1
A.2 Environmental Specifications .....	A - 1
A.3 Power Supply Specifications .....	A - 2
A.3.1 External Power Supply Specifications .....	A - 2
A.3.2 Battery .....	A - 2
A.4 Physical Specifications .....	A - 2
A.5 Hardware Specifications .....	A - 2
A.5.1 Displays .....	A - 2
A.5.2 LEDs .....	A - 3
A.5.3 Audio Indicator .....	A - 3
A.5.4 Interface Specifications .....	A - 3
A.6 Product Specifications .....	A - 3
A.7 Wireless Network .....	A - 3
<b>B EMC and Radio Regulatory Compliance .....</b>	<b>B - 1</b>

B.1 EMC .....B - 1

B.2 Radio Regulatory Compliance .....B - 9

**C Abbreviations .....C - 1**



# 1 Safety

---

## 1.1 Safety Information

---

### **WARNING**

---

- Indicates a potential hazard or unsafe practice that, if not avoided, could result in death, serious injury or damage to product/property.
- 

### **CAUTION**

---

- Indicates a potential hazard or unsafe practice that, if not avoided, could result in minor personal injury, product malfunction or damage to product/property.
- 

### **NOTE**

---

- Provides application tips or other useful information to ensure that you get the most out of the product.
- 

### 1.1.1 Warnings

---

#### **WARNING**

---

- To avoid risk of electric shock, the MRI Infusion Workstation (hereafter referred to as “Dock”) must only be connected to mains power with protective earth. If a protective earth conductor is not provided, operate it on battery power, if possible.
- This equipment is used for single patient at a time.
- To avoid explosion hazard, do not use the equipment in the presence of oxygen-rich atmospheres, flammable anesthetics, or other flammable agents.
- Do not use the multiple portable socket outlets (MPSO) or AC mains extension cords. Ensure that the sum of the individual ground leakage currents does not exceed the allowable limits.

- Do not open the equipment housings. All servicing and future upgrades must be carried out by trained and authorized personnel. Moreover, the servicing must be done only after the AC power supply is disconnected.
  - Do not place the equipment or accessories in any position that might cause it to fall on the patient.
  - Do not start an infusion unless the setup was verified to be correct.
  - Do not touch the patient and device connectors simultaneously. Otherwise leakage current may result in patient injury.
  - Ensure that more than two people are present to support and operate the equipment when it is transferred within the hospital, so as to prevent damage to the equipment and avoid tipping which can cause injury.
  - The communication distance between the Dock and BeneFusion nCS Infusion Supervision System, the Dock and BeneVision Central Monitoring System should be less than 50 m.
  - Equipments connected to the Dock must meet the requirements of IEC 60950. Only equipments designated by the manufacturer can be connected to the Dock. Based on patient safety, do not insert products that are not specified by the manufacturer into the Dock and its connectors.
  - To avoid electric shock, do not touch patient and other non-defibrillation proof equipments during defibrillation. Defibrillation will not affect the performance of the equipment.
- 

## 1.1.2 Cautions

---

### CAUTION

---

- Ensure that the equipment is supplied with continuous electric power during work. Sudden power failure may cause data loss.
  - Electromagnetic fields may affect equipment performance. This makes it necessary for other equipment used in the vicinity of this equipment to meet EMC standards. Mobile phones, X ray and MRI equipment are all potential interference sources because of their high-intensity electromagnetic radiation.
  - Always install or carry the equipment properly to avoid damage caused by drop, impact, strong vibration or other mechanical force. The equipment should be observed to verify normal operation after fall, otherwise it cannot be used.
  - Dry the equipment immediately in case of rain or water spray.
  - Some settings are password protected and can only be changed by authorized personnel. Contact your department manager or biomedical engineering department for the passwords used at your facility.
-















### 1.1.3 Notes




 












#### NOTE

- The software was developed in compliance with IEC62304.
- The equipment provides power-down storage. Alarms limit setting and history record are saved and will be maintained if the equipment is powered down suddenly. The storage time is equals to the equipment's service life. The alarm limit settings before power-down are reloaded when the equipment is restarted.
- This manual describes all features and options. Your equipment may not have all of them.

## 1.2 Equipment Symbols



Some symbols may not appear on your equipment.

	Refer to instruction manual/booklet		Caution
	Alternating current		MR Conditional
	Locking		Unlocking
	Volume adjustment		Stand-by
	Battery		Magnet Indicator battery
	Trolley is locked, and cannot be moved		Trolley is unlocked, and can be moved
	Unique device identification		Medical Device

<b>IP33</b>	Protected against solid foreign objects with a diameter no less than 2.5 mm in diameter. Protected against spraying liquid water.		DEFIBRILLATION-PROOF TYPE CF APPLIED PART
	Date of manufacture		Manufacturer
	Serial number		Authorized representative in the European Community
	Dispose of in accordance to your country's requirements		Temperature limitations
	Atmospheric pressure limitations		Humidity limitations
	THIS WAY UP		Keep dry
	Fragile, handle with care		STACKING LIMIT BY NUMBER
	Non-ionizing electromagnetic radiation		No pushing
	The product bears CE mark indicating its conformity with the provisions of the REGULATION (EU) 2017/745 on medical devices and fulfills the general safety and performance requirements of Annex I of this regulation. Note: The product complies with the Council Directive 2011/65/EU.		

The general meaning assigned to geometric shapes, safety colors and contrast colors for safety signs are as follows:



Geometric shape	Meaning	Safety color	Contrast color	Graphical symbol color
	Mandatory action	Blue	White	White
	Warning	Yellow	Black	Black

**This page intentionally left blank.**

# 2 Equipment Introduction

---

## 2.1 Intended Use

---

### **WARNING**

---

- **This system is intended for use only by clinical professionals or under their guidance. It must only be used by persons who have received adequate training in its use. Anyone unauthorized or untrained must not perform any operation on it.**
- 

### **NOTE**

---

- **According to the conclusion of clinical evaluation and residual risk evaluation, for the intended patients, there is no known side effects that can occur during or after the use of the medical device. And there is no need for the operator to make extra preparations. Thus, no residual risk associated with using the medical device should be disclosed.**
- 

### 2.1.1 Intended Purpose

MRI Infusion Workstation is intended for conjunction with the infusion pump and syringe pump, providing space management, power management, alarm management, information display, and communicate with pump to transmit data.

### 2.1.2 Indication for Use

MRI Infusion Workstation is intended for conjunction with the infusion pump and syringe pump, providing space management, power management, alarm management, information display, and communicate with pump to transmit data.

### 2.1.3 Intended Users

This system is intended for use only by clinical professionals or under their guidance. It must only be used by persons who have received adequate training in its use. Professional clinical medical personnel, including clinicians, nurses of all departments, equipment department personnel, technicians, etc. Anyone unauthorized or untrained must not perform any operation on it.

### 2.1.4 Intended Patient Population

The system is intended for adults, pediatric and neonate.

### **2.1.5 Intended Medical Conditions**

MRI Infusion Workstation is expected to be used in healthcare facilities, including MRI Room, OR with MRI.

### **2.1.6 Contra-indications**


None.

### **2.1.7 Side-effects**

None.


## 2.2 Dock

### 2.2.1 Front View

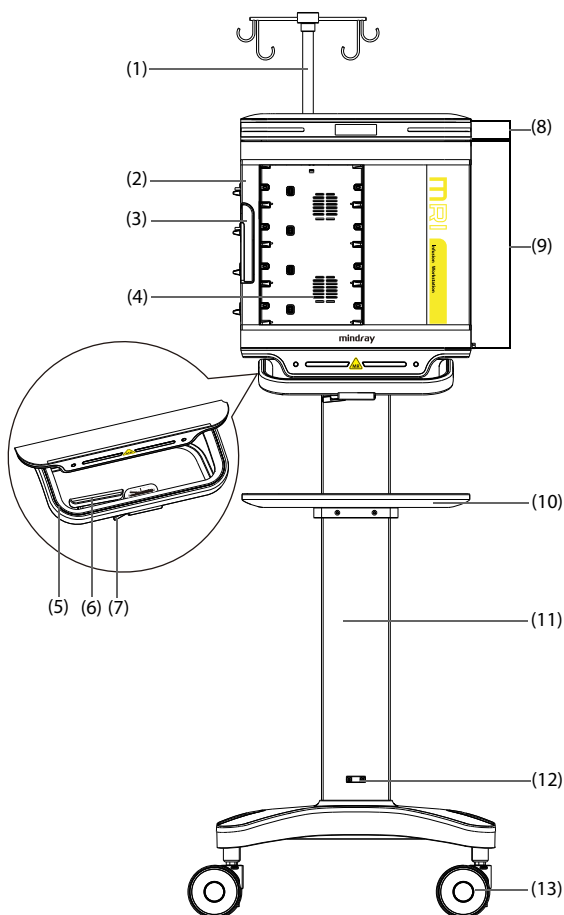


- (1) IV pole  
Hangs the IV container, supports a maximum load of 4 kg.
- (2) Door
- (3) Door handle  
Locks or unlocks the door.


- (4) Pump status window  
Observes the infusion status.
- (5) Handle  
Moves the trolley.
- (6) Brake  
Squeezes and holds the brake, and holds the handle to move the trolley; releases the brake to locate the trolley.
- (7) Lock catch  
Squeezes the brake and presses the lock catch, first releases the brake, and then releases the lock catch, only holds the handle to move the trolley; squeezes the brake again to locate the trolley.  
**Note:** Squeezes the brake and presses the lock catch, if first releases the lock catch, and then releases the brake, or simultaneously releases the lock catch and brake, the trolley may not be moved.
- (8) Controller
- (9) Shelf module
- (10) Desktop surface  
Temporarily places pumps and drugs, supports a maximum load of 10 kg.  
**Note:** Do not move the equipment if pumps or drugs are placed on the desktop surface.
- (11) Trolley
- (12) Connection for tether  
Connects the safety tether.
- (13) Locking wheel

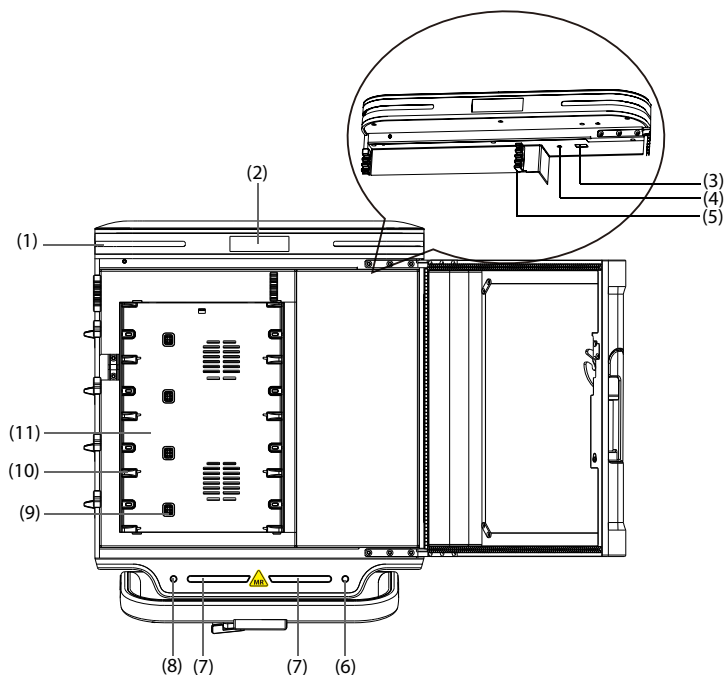

- (1) Alarm light  
When an alarm occurs, this lamp lights and flashes corresponding with the alarm priority:
  - High priority alarms: the lamp quickly flashes red.
  - Low priority alarms: the lamp lights in yellow without flashing.
- (2) Display
- (3) USB connector  
Connects USB devices.
- (4) ON/OFF switch of **magsense™**  
The Magnet Indicator **magsense™** is an integrated system for measuring the magnetic flux density. The ON/OFF switch of **magsense™** has to be activated before moving the equipment inside the MR environment.
- (5) Tubing guide for lines  
Secures the lines.

- (6)  error LED
- Flashing red: error of Magnet Indicator.
  - Off: Magnet Indicator works properly.
- (7) Magnet Indicator LED  
The Magnet Indicator LED lights corresponding with the magnetic field strength:


Positioning	Priority	Magnet Indicator LED Color	Alarm sound	Instruction
Magnetic field $\leq 20\text{mT}$	/	Steady green LED	No	The MRI Infusion Workstation is located outside the critical magnetic field, and can be operated properly.
$20\text{mT} < \text{Magnetic field} \leq 40\text{mT}$	Medium	Yellow LED flashes	Yes	The critical magnetic field is reached. Move the MRI Infusion Workstation within the green area, and the Magnet Indicator LED is steady green.
Magnetic field $> 40\text{mT}$	High	Red LED flashes	Yes	Maximum magnetic field exceeded. Move the MRI Infusion Workstation within the green area immediately, and the Magnet Indicator LED is steady green.

- (8)  battery LED
- Steady yellow: the battery is being charged.
  - Flashing yellow: the battery has low power.
  - Steady green: the external power power is connected, and the battery is fully charged.
  - Off: the external power power is not connected, and the battery is adequately charged.
- (9) Multifunctional connector  
Provides power and data communication to individual pumps when pumps are secured in the Dock.
- (10) Connection rail lock  
Secures the pump in place.



(11) Pump bay


### 2.2.2 Left View

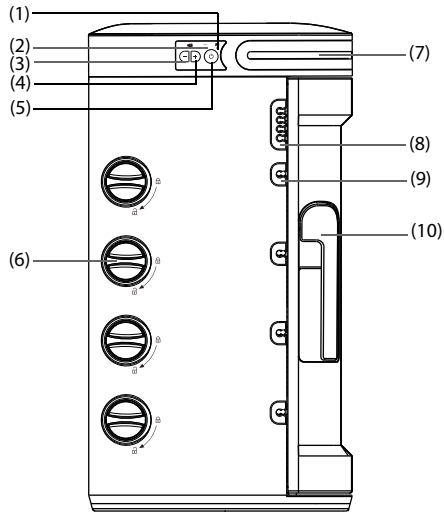

- (1) Battery LED
  - Steady green: the battery is being charged.
  - Flashing green: the Dock runs on battery power.
  - Off: no battery is installed, or no external power is connected when the equipment is off.
- (2) External power LED
  - On: when external power supply is connected.
  - Off: when external power supply is not connected.
- (3) Volume adjustment key  
Turns down the alarm volume.
- (4) Volume adjustment key  
Turns up the alarm volume.
- (5) Power switch
- (6) Unlocking knob  
Turns the unlocking knob clockwise to the vertical position to remove the pump.
- (7) Alarm light

- (8) Infusion tubing inlet  
Infusion lines connect to the pump through the inlet.
- (9) Infusion tubing outlet  
Infusion lines or extension lines connect to the patient through the outlet.
- (10) Door handle  
Locks or unlocks the door.


### 2.2.3 Rear View

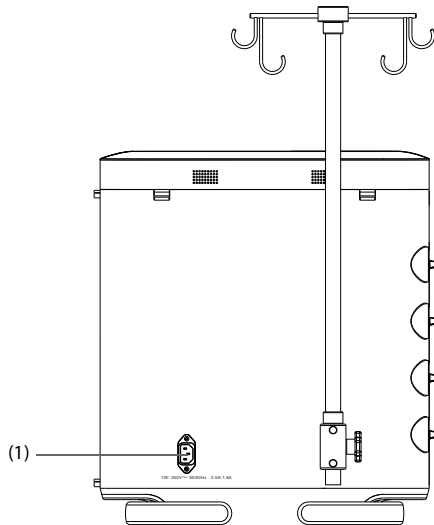

- (1) AC power input connector  
Connects the AC power cord.

## 2.3 Screen Display



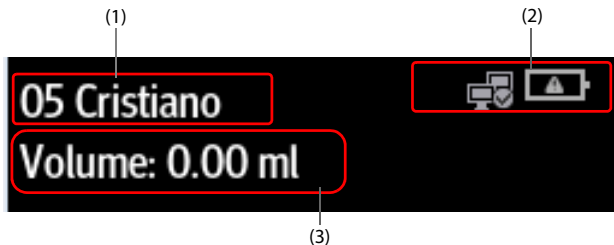







The following figure shows the screen:



- (1) Patient information area  
Displays bed number and patient name.
- (2) System information area  
Displays battery status and network status. For more information, see **2.3.1 On-screen Symbols**.
- (3) Infusion volume area  
Displays the total infusion volume of the current patient within 24 hours.

### 2.3.1 On-screen Symbols


The following table lists the on-screen symbols:

Symbol	Description	Symbol	Description
	The battery works correctly. The solid portion represents the remaining charge.		The battery is being charged.
	The battery has low power and needs to be charged.		The battery has critically low charge and needs to be charged immediately. Otherwise, the Dock will automatically shut down.
	No battery is installed.		Battery fault, battery communication fault, or battery charging fault. Contact service personnel for help.
	Wired network is connected.		Wired network is not connected.
	Wireless network is connected. The solid part indicates network signal strength.		Wireless network is not connected.

### 2.3.2 Using the Pump Touchscreen

You can use the pump touchscreen to select a screen element by pressing directly on the pump's screen.

To avoid misuse, the touchscreen is locked automatically if no operation is detected in the preset time. To manually lock the touchscreen, swipe the touchscreen from top down, and select **Lock**.

To unlock the touchscreen, select  on the pump touchscreen and swipe the slider as instructed.





## NOTE

---

- **Wipe off any water on the touchscreen in case of rain or water spray.**
- 

### 2.3.3 Using the Pump On-Screen Keyboard

The pump on-screen keyboard enables you to enter the pump and Dock information:

- Enter the information by selecting one character after another.
- Select the Backspace key  to delete single characters.
- Select the Caps Lock key  to switch uppercase letters and lowercase letters.
- Select the Enter key  to confirm the entry and close the on-screen keyboard.
- Select the Space bar  to enter a space.

# 3 Equipment Preparation

---

## 3.1 Equipment Preparation Safety Information

---

### **WARNING**

---

- Use only installation accessories specified by Mindray Scientific.
  - The equipment software copyright is solely owned by Mindray Scientific. No organization or individual shall resort to modifying, copying, or exchanging it or to any other infringement on it in any form or by any means without due permission.
  - Connect only approved devices to this equipment. Devices connected to the equipment must meet the requirements of the applicable IEC standards (e.g. IEC 60950 safety standards for information technology equipment and IEC 60601-1 safety standards for medical electrical equipment). The system configuration must meet the requirements of the IEC 60601-1 medical electrical systems standard. Any personnel who connect devices to the equipment's signal input/output port are responsible for providing evidence that the safety certification of the devices has been performed in accordance to the IEC 60601-1. If you have any questions, please contact Mindray Scientific.
  - If it is not evident from the equipment specifications whether a particular combination with other devices is hazardous, for example, due to summation of leakage currents, please consult the manufacturer or an expert in the field. A determination must be made that the proposed combination will not negatively affect the devices themselves or the patient's safety.
  - Ensure that the equipment is properly secured and positioned. Position change and severe shock can lead to changes to the delivery accuracy.
- 

### **CAUTION**

---

- The equipment should be installed by the authorized personnel.
  - Before use, verify whether the packages are intact. In case of any damage, do not apply it to patient.
- 

### **NOTE**

---

- **Save the packing case and packaging material as they can be used if the equipment must be reshipped.**
- 

## 3.2 Environmental Requirements

The operating environment of the equipment must meet the requirements specified in this manual.

The environment where the equipment is used shall be reasonably free from noises, vibration, dust, corrosive, flammable and explosive substances. Moreover, to maintain good ventilation, there shall be at least 2 inches (5cm) away from around the equipment.

When the equipment is moved from one place to another, condensation may occur as a result of temperature or humidity differences. In this case, never start the system before the condensation evaporates.

---

### CAUTION


---

- **Ensure that the equipment operating environment meets the specific requirements. Otherwise unexpected consequences, e.g. damage to the equipment, could result.**
- 

## 3.3 Setting Up the Equipment

Observance of this manual is a prerequisite for proper product performance and correct operation. It ensures patient and operator safety.

### 3.3.1 Turning on the Dock

Press the power switch  to turn on the Dock. The Dock automatically performs a self-test at startup. Check that the alarm tone is heard and the alarm lamp illuminates, one after the other, in red and yellow. This indicates that the visible and audible alarm indicators function correctly. The **System Error** alarm will be triggered when the self-test fails.

---

### CAUTION

---


- **Check that visual and auditory alarm signals are presented correctly when the Dock is powered on. Do not use the Dock if you suspect it is not working properly, or if it is mechanically damaged. Contact your service personnel or us.**
- 

### NOTE

---

- **The Dock is automatically turned on when the external AC power supply is connected.**
-

### 3.3.2 Securing a Pump in the Dock

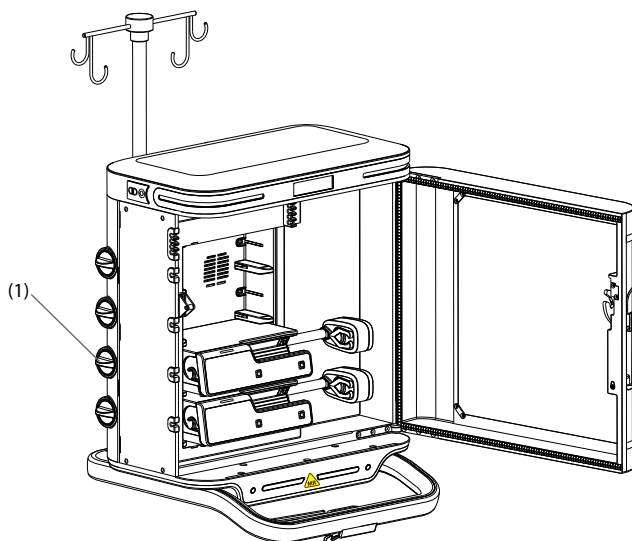

(1) Unlocking knob

Before securing a pump into the Dock, ensure that the following requirements are met:

- The unlocking knob on the shelf module is in the horizontal position for the selected pump bay.
- The pole clamp is removed from the pump.
- The power cord is disconnected from the pump.

To secure a pump into the Dock, follow this procedure:

1. Pull the door handle upward and open the door of the Dock. The Dock gives prompt message **Door Open**.
2. Firmly push the pump until you hear that the clip engages the pump bay.
3. Hang the IV container, load the infusion set or syringe, and start infusion.
4. Press the door handle downward to close, and ensure the door is securely locked. The prompt message **Door Open** disappears.

To unlock and remove the pump, keep the Dock stable, open the door of the Dock, hold the pump you wish to remove, then turn the unlocking knob clockwise to the vertical position and slide the pump out of the bay.

---

## WARNING

---

- **This equipment must be installed outside the MR environment. Ensure that all installations (such as securing the pumps) are performed and the equipment can work properly before using in the MR environment.**
  - **Do not use the drop sensor or PCA controller while inside the MR environment.**
- 

## **NOTE**

---

- **If “Device cannot be used in MRI environment” is displayed on the pump's screen after a pump is secured in the Dock, do not use the pump in the MR environment.**
  - **Maximum 4 pumps can be combined within a MRI Infusion Workstation.**
  - **Be careful connecting the extension lines and intravenous needles to the patient, to avoid interference to the scan image.**
  - **Infusion lines enter the shelf module and connect to the pump through the infusion tubing inlet. Infusion lines exit the shelf module and connect to the patient through the infusion tubing outlet. Ensure that the infusion lines are straightly and firmly clipped into the tubing guides for lines.**
  - **Ensure that IV containers or syringes have sufficient infusion liquid, to avoid changing disposables during MR examination.**
  - **Remove the infusion bags and tubings from the IV poles or pumps, and pumps from shelf module before transporting the Dock. Carry each component separately. Failure to do so can result in system becoming unbalanced.**
- 

### **3.3.3 Charging the Battery**

To optimize performance, a fully or nearly fully discharged battery should be charged as soon as possible. The battery is automatically charged when the equipment is connected to the AC power.

## **NOTE**

---

- **The battery can only be charged by the equipment.**
  - **If the equipment is run by battery power, ensure that the battery is adequately charged. Charging the battery if required.**
-



# 4 Getting Started

---

## 4.1 Locating the Equipment


The MRI Infusion Workstation can be operated safely at a maximum magnetic field of 20mT in the MR environment. The equipment must be located in an area with a magnetic field less than 20mT, or a distance greater than 1.5m to the opening of the magnet bore.

Before moving the equipment inside the MR environment, ensure that the following requirements are met:

- The ON/OFF switch of the Magnet Indicator is activated.
- The Magnet Indicator works properly.
- The battery of Magnet Indicator is adequately charged.

To locate the equipment, follow this procedure:

1. Slowly move the equipment inside the MR environment. Attach one end of the safety tether to the connection for tether, attach another end of the safety tether to the wall hook. The tether makes sure that the equipment stays within the safe area.
2. Slowly move the equipment towards the MR scanner. Position the equipment in an area with a magnetic field less than 20mT, or a distance greater than 1.5m to the opening of the magnet bore.

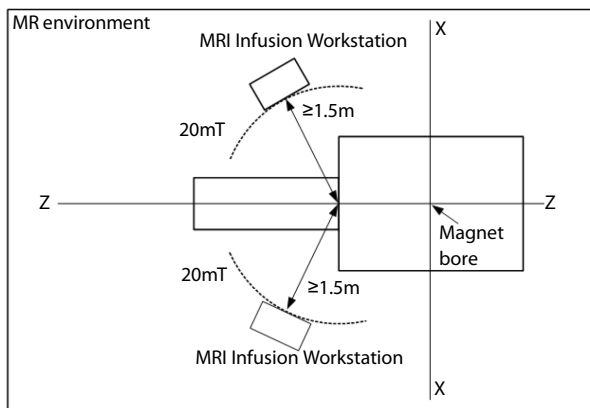

3. Observe the Magnet Indicator LED, and ensure the LED is steady green.

---

## WARNING

---

- **The equipment must be operated at a maximum magnetic field of 20mT in the MR environment.**
  - **To avoid unintentional movement, securely lock the trolley when a safe working distance is indicated by the Magnet Indicator LED.**
  - **Be careful positioning the safety tether to prevent a stumbling hazard.**
  - **Keep the door of the equipment closed after entering the MR environment.**
  - **Do not insert, change or remove pumps from the equipment while inside the MR environment.**
- 

## NOTE

---

- **It is recommended to mark the critical magnetic field on the floor.**
  - **It is recommended to position the equipment in such a way that the alarms can be easily observed.**
  - **The equipment uses a mains plug as isolation means to the mains power. Do not locate the equipment in a place difficult to operate the mains plug.**
- 

## 4.2 Connecting the AC Mains

The equipment is powered by AC power supply. Before connecting the equipment to the AC mains, check the followings:

- The voltage and frequency ratings of the power line are the same as those indicated besides the AC power input.
- The both sides of the power cord connectors are free of liquid or other residue.
- The inside and surroundings of the AC power input connector are free of liquid or other residues.

To connect the AC power source, follow this procedure:

1. Connect the female end of the power cord to the AC power input.
2. Connect the male end of the power cord to a wall AC outlet.
3. Check that the external power supply indicator is on.

The external power supply indicator lies at the left side of the equipment. When the AC mains is not connected, the external power supply indicator is off. When AC mains is connected, the external power supply indicator is illuminated in green.

---

## WARNING

---

- Always use the accompanying power cord delivered with the equipment.
  - Be careful positioning the power cord to prevent a stumbling hazard.
  - Before connecting the equipment to the AC mains, check that the voltage and frequency ratings of the power line are the same as those indicated on the equipment.
  - Do not touch the power connector with wet hand. Eliminate the liquid or any residue inside of or at the surroundings of the AC power input connector and power cord connectors.
  - Use the battery if the integrity of the protective earth conductor or the protective earthing system in the installation is in doubt.
- 

### 4.3 Starting the MR Examination

Before getting started, check the followings:

- The equipment is placed within the safe area.
- The equipment is plugged in to a properly-grounded, AC power outlet.
- If the equipment is run on battery power, ensure that the battery is adequately charged.

---

## WARNING

---

- Before putting the system into operation, the operator must verify that the equipment, connecting cables and accessories are in correct working order and operating condition.
  - Do not use the equipment if you suspect it is not working properly, or if it is mechanically damaged (such as error of Magnet Indicator). Contact your service personnel or us.
  - Keep the door of the equipment closed during MR examination, to avoid artifacts on MR images and damage to the equipment. If needed, open the door of the equipment only between the MR scan sequences. In an emergency or to handle alarms, the door of the equipment can be opened.
  - Do not place the pump on the examination table of the MR scanner, there may be a risk of magnetic attraction.
- 

## NOTE


---

- Stay within 1 m of the equipment while setting it up and operating it, ensuring that you have a clear view of the interface.

- **The noise within the MR environment is much louder than alarm sounds from the equipment and pump during MR examination. Always keep the alarm light and the pump's infusion status under close surveillance.**
- 

## 4.4 Completing the MR Examination

To complete the MR examination, follow this procedure:

1. Ensure the MR examination is completed.
2. Disconnect the equipment from the safety tether.
3. Disconnect the equipment from the power cord.
4. Move the equipment outside the MR environment.
5. Disconnect the equipment from the patient.
6. Unload the IV container, infusion set or syringe.
7. Remove the pump. For detailed information, see **3.3.2 Securing a Pump in the Dock**.
8. Press  for at least three seconds to turn off the equipment.

### NOTE

---

- **Turning off the Dock does not disconnect the Dock from the AC mains. To completely disconnect the power supply, unplug the power cord.**
-

# 5 Dock Setup

---

Setting the Dock enables you to customize the Dock to best meet your needs. Accessing the **Dock Setup** menu is password protected.

This chapter describes the settings and functions in the **Dock Setup** menu.

---

## CAUTION

- The Dock Setup can only be changed by authorized personnel. Contact your department manager or biomedical engineering department for the passwords used at your facility.


---

## NOTE

- Dock Setup menu and Batch Config menu are available when the pump and Dock are in proper connection.

## 5.1 Accessing the Dock Setup Menu

To access the **Dock Setup** menu, follow this procedure:

1. Swipe the pump touchscreen from top down → select **Menu** → select **Dock Setup** → input the required password → select .
2. Select the desired tab.

## 5.2 The Network Setup Settings

### 5.2.1 The Network Type Settings

Menu Item	Default Setting	Function
Network Type	Auto	Selects what kind of network your equipment will use. <b>Auto:</b> the equipment automatically identify your network type.

### 5.2.2 The LAN IP Settings

Menu Item		Default Setting	Function
DHCP Switch		On	Selects whether inputting the <b>IP Address</b> , <b>Subnet Mask</b> , and <b>Gateway</b> is required.
IP Address		0.0.0.0	
Subnet Mask		0.0.0.0	
Gateway		0.0.0.0	
Auto-obtain DNS Switch		On	Selects whether inputting the IP address of <b>Preferred DNS Server</b> and <b>Alternate DNS Server</b> is required.
Preferred DNS Server		0.0.0.0	
Alternate DNS Server		0.0.0.0	
MAC Address		/	/

### 5.2.3 The WLAN Settings

Menu Item		Default Setting	Function
WLAN Setup	WLAN Band	Auto	<b>Auto</b> : automatically identifies the WLAN band.
	BGN Channel	All	Selects the type of B, G, and N channels.
	AN Channel	All	Selects the type of A and N channels.
SSID		/	/
Password		/	/
Security		WEP OFF	Selects the security method.

### 5.2.4 The Bedside Hotspot Settings

Menu Item		Default Setting	Function
WLAN Setup	WLAN Band	5GHz	If you want to connect the device to a monitor, the WLAN band set on the device must be the same with that of the monitor when the monitor serves as a hotspot.
	BGN Channel	All channels	Selects the type of B, G, and N channels.
	AN Channel	All channels	Selects the type of A and N channels.
Password		/	Views or changes the password of the shared hotspot. If you want to connect the device to a monitor, the shared hotspot password set on the device must be the same with that of the monitor.

### 5.2.5 The WLAN IP Settings

Menu Item	Default Setting	Function
DHCP Switch	On	Selects whether inputting the <b>IP Address</b> , <b>Subnet Mask</b> , and <b>Gateway</b> is required.
IP Address	0.0.0.0	
Subnet Mask	0.0.0.0	
Gateway	0.0.0.0	
Auto-obtain DNS Switch	On	Selects whether inputting the IP address of <b>Preferred DNS Server</b> and <b>Alternate DNS Server</b> is required.
Preferred DNS Server	0.0.0.0	
Alternate DNS Server	0.0.0.0	
MAC Address	/	/

### 5.2.6 The Central Station Setup Settings

Menu Item	Default Setting	Function
CMS Server Address	/	Inputs the IP addresses of the CMS you want to connect to.
Central Station IP Address	0.0.0.0	/

### 5.2.7 The Device Discover Settings

Multicast helps device discovery between the Dock and Dock, the Dock and CMS. Devices in the same multicast group can be mutually discovered.

Menu Item	Default Setting	Function
Multicast TTL	1	/
Multicast Address	225.0.0.8	
Master Server Address	/	
Master Server IP Address	0.0.0.0	
Connected Status	Disconnect	

### 5.2.8 The ADT Setup Settings

If the Dock is connected with the Admit-Discharge-Transfer (ADT) server through the eGateway. You can load patient information from ADT server to the Dock.

Menu Item	Default Setting	Function
Server Address	/	Inputs the host name or IP address of the ADT gateway.
IP Address	0.0.0.0	
Port	3502	Inputs the port of the ADT gateway.
ADT Query	Off	Selects whether patient information can be loaded to the Dock from the ADT server.



## 5.2.9 The Cert Manage Settings

Menu Item	Default Setting	Function
Local Cert Manage	/	<b>Delete:</b> delete the selected certifications.
USB Cert Manage	/	Selects certifications you want to import from the USB memory, and then select <b>Import:</b> import the desired certifications from the USB memory.

## 5.2.10 The HL7 Configuration Settings

You can send the realtime data, waveforms, and alarms from the Dock to the hospital servers via the HL7 protocol. This page also display the server connection status.

Menu Item		Default Setting	Function
Parameter HL7 Setup	Server Address	/	Inputs the name or IP address for the server receiving the realtime data and waveform.
	IP Address	0.0.0.0	
	Port	0	/
	Send Data	Off	
	Data Interval	1h	
	Connected Status	Disconnect	
Alarm HL7 Setup	Server Address	/	Inputs the name or IP address for the server receiving the alarm data.
	IP Address	0.0.0.0	
	Port	0	/
	Send Alarms	Off	
	Connected Status	Disconnect	
SSL Encrypt		Off	/

## 5.3 The Device Management Settings

Menu Item	Default Setting	Function
Facility	/	Inputs the Facility, the Department, and the Device Name.
Department		
Device Name		
Device ID	/	Displays the device ID.

## 5.4 The Patient Information Settings

Menu Item	Default Setting	Function
Data Source	Dock	Selects the data source of patient information. <b>Dock:</b> when the patient information of the Dock and pump is inconsistent, pump's patient information is synchronously updated as the Dock.
Patient ID	On	Selects whether the items can be displayed and edited from the <b>Patient Management</b> menu.
Visit Number	Off	
Patient Location	Fixed	<ul style="list-style-type: none"><li>• <b>Fixed:</b> After a patient is discharged, only patient data are removed, the Bed No. and Room No. are retained.</li><li>• <b>Unfixed:</b> After a patient is discharged, patient data, Bed No., and Room No. are all removed from the pump.</li></ul>

## 5.5 Viewing the History Record

Menu Item	Default Setting	Function
History Record	/	Views the history record.

## 5.6 Exporting the History Record

Menu Item	Default Setting	Function
Export History Record	/	Exports the history record.

## 5.7 The Language Settings

Menu Item	Default Setting	Function
Language	/	Sets the language. <b>Note:</b> This setting is effective after the Dock has been restarted.

## 5.8 The Alarm Settings

Menu Item	Default Setting	Function
Alarm Sound	Sound2	Sets the alarm sound mode.
CMS/eGW Disconnected Alarm	Off	Sets whether the disconnection alarm will be triggered when the Dock is disconnected from the CMS or eGateway.

## 5.9 The Night Mode Settings

Menu Item	Default Setting	Function
Night Mode	Off	Sets the night mode switch. The switch is turned on: The Dock enters night mode when the set <b>Start Time</b> is reached. The switch is turned off: The night mode is not available for the Dock.
Start Time	18:00	Sets the start time and end time of the night mode.
End Time	7:00	
Sound Volume	2	Sets the system volume during night mode.

## 5.10 The Import and Export Settings

Menu Item	Default Setting	Function
Select Config File	/	Imports configuration file, drug library or brand library by following this procedure: connect the USB drive with the configuration file, drug library or brand library to the Dock's USB connector → select the file as needed → select <b>Import</b> .
Select Drug Library		
Brand Library		
Import		
Export	/	Exports configuration file to the USB drive by following this procedure: connect the USB drive to the Dock's USB connector → select <b>Export</b> → input the file name → select <b>Export</b> .

## 5.11 Viewing the Version Information

Menu Item	Default Setting	Function
Version Information	/	Displays Software Version, Internal Version, Power Software, etc.

## 5.12 Viewing the Dock Information


Menu Item	Default Setting	Function
USB Drive	NoDisk	Displays whether there is USB drive.

## 5.13 Exporting the Log

Menu Item	Default Setting	Function
Export Log	/	Exports the log.

## 5.14 The Batch Configuration Settings

To set the batch configuration, follow this procedure:

1. Swipe the pump touchscreen from top down → select **Menu** → select **User Maintenance** → input the required password → select  → select **Batch Config**.
2. Set **Therapy Config in Batches**: select the desired options.

3. Set **System Config in Batches**: select the desired options.
4. Select **Batch Assign** → select **Yes** to assign the configurations to all pumps in the same Dock.

**This page intentionally left blank.**

# 6 Alarms

---

## 6.1 Alarm Safety Information

---

### WARNING

---

- A potential hazard can exist if different alarm presets and default settings are used for the same or similar equipment in the same care area, for example an intensive care unit or cardiac operating room.
  - The equipment in your care area may each have different alarm settings to suit different patients. Always check that the alarm settings are appropriate for your patient before start infusing.
  - Do not rely exclusively on the audible alarm system during an infusion. Adjustment of alarm volume to a low level may result in a hazard to the patient. Always ensure that the audio alarm volume level is adequate in your care environment. Always keep the patient under close surveillance.
  - Fully evaluate the risk before changing the alarm mode setting. New alarms may be failed to be detected if the operator is not familiar with the new sound.
  - The maximum alarm delay from the alarm status of the pump or shelf module to the alarm signal (sound and text displays) generated by the equipment should not exceed 5 sec.
  - The Network Disconnected alarm delay time from the equipment to the CMS is less than 14 sec, and other alarms delay time is less than 8 sec.
- 

## 6.2 Understanding the Alarms

### 6.2.1 Alarm Priorities

By severity, the alarms are classified into the high priority alarms and low priority alarms.

### 6.2.2 Alarm Indicators

When an alarm occurs, the equipment indicates it visually and audibly. For more information, see the following table.

Alarm priority	Alarm lamp color	Alarm lamp flashing frequency	Alarm sound interval	Alarm message	Alarm priority indicator	Duty Cycle
High priority alarm	Red	2.0±0.6Hz	5s (±2s)	White text or symbol inside a black box	!!!	20% ~ 60%
Low priority alarm	Yellow	Not flashing	20s (±2s)	White text or symbol inside a black box	!	100%

## NOTE

- **The tones of the alarm sound and the reminder sound are different.**
- **When multiple alarms occur simultaneously, the alarm messages are displayed circularly, and the sound and light of the higher priority alarm are given.**

### 6.2.3 Alarm Handling Rules


When an alarm occurs, the alarm screen is displayed to help you identify the problem.

If an alarm is triggered by the Dock, the alarm is expressed as audible tone and visual alarm message is displayed on the controller screen.

If an alarm is triggered by the pump, the alarm is expressed on the pump screen.

If the pump is secured in the Dock, the following rules are followed:

#### 1. Alarm sound

- ◆ The Dock conducts centralized control of the alarm sound of the pump, the alarm sound and interval time of the reminder sound are consistent with the pump.
- ◆ The alarm sound of the Dock are silenced for two minutes by pressing  of the pump.
- ◆ The alarm sound of the Dock is cleared after alarms of all the pumps are cleared.
- ◆ The alarm sound of the pump is consistent with the Dock after the audio paused pump is secured in the Dock.



#### 2. Alarm light



- ◆ When an alarm is triggered by the pump, the Dock and the pump produce alarm light, and the alarm lights of the Dock are consistent with the highest priority alarm of the pump.
- ◆ When an alarm is triggered by the pump, the alarm lights of the Dock are cleared after alarms of all the pumps are cleared.


## 6.3 Setting the Alarm Sound

### 6.3.1 Setting the Alarm Volume

Press  and  to set the alarm volume. The alarm volume can be set from 1 to 8, in which 1 is the minimum volume and 8 is the maximum volume, the default alarm volume is 4.

### 6.3.2 Setting the Alarm Sound Mode

To change the alarm mode, follow this procedure:

1. Swipe the pump touchscreen from top down → select **Menu** → select **Dock Setup** → input the required password → select  → select **Alarm**.
2. Set the **Alarm Sound**.

## 6.4 Alarm Solutions

### WARNING

- When an alarm occurs, check the Dock's status and handle the alarm as soon as possible. If the alarms do not conform with the actual situation, contact your service personnel.

Alarm	Priority	Causes	Solutions
System Error	High	The Dock system faults, such as shelf module communication error, etc.	Stop using the Dock, and contact your service personnel.
Battery Depleted	High	The Dock battery is empty when the equipment runs on battery power.	Connect the Dock to the external power source.
Magnet Indicator Battery Depleted	High	The Magnet Indicator battery is empty when the equipment runs on battery power.	Connect the Dock to the external power source.

Alarm	Priority	Causes	Solutions
Low Battery	Low	The Dock battery is insufficient when the equipment runs on battery power.	Connect the Dock to the external power source.
Magnet Indicator Low Battery	Low	The Magnet Indicator battery is insufficient when the equipment runs on battery power.	Connect the Dock to the external power source.
LAN IP Address Conflict	Low	The Dock and other equipments in LAN have the same IP address.	Check the network settings.
WLAN IP Address Conflict	Low	The Dock and other equipments in WLAN have the same IP address.	Check the network settings.
Network Disconnected	Low	<ul style="list-style-type: none"> <li>The Dock is disconnected from the CMS, the wireless network connection symbol disconnects.</li> <li>The Dock is disconnected from eGateway, the wireless network connection symbol disconnects.</li> </ul>	<ul style="list-style-type: none"> <li>Reconnect the Dock with the CMS, the wireless network connection symbol restores.</li> <li>Reconnect the Dock with the eGateway, the wireless network connection symbol restores.</li> <li>If the alarm persists, contact your service personnel.</li> </ul>

# 7 Networked Communication

---

The equipment can be connected to the BeneFusion nCS Infusion Supervision System and BeneVision Central Monitoring System (hereafter both referred to as “CMS”), patient monitors, and the eGateway.

## 7.1 Network Safety Information

---

### CAUTION

---

- **Wireless network designing, deploying, debugging, and maintenance should be executed by the service personnel or authorized technicians.**
  - **Always set the wireless network according to local wireless regulations.**
  - **Data communication for all network functions must be performed within a closed network or within a virtually isolated network provided by a hospital. The hospital is responsible for ensuring the security of the virtually isolated network.**
  - **Keep network authentication information, for example password, safe, protecting the network from being accessed by unauthorized users.**
  - **Do not connect non-medical devices to the network.**
  - **If wireless network signal is poor, there may be a risk of CMS data loss.**
  - **RF interference may result in wireless network disconnection.**
  - **Disconnecting from the network may result in CMS data loss and function failure. Check the patient in case of network disconnection and solve the network problem as soon as possible.**
  - **Ensure that the IP address setting is correct. Changing the network settings may result in network disconnection. Contact your service personnel if you have any problems on setting the IP address.**
- 

## 7.2 Connecting the Equipment to the CMS

The equipment can be connected to the CMS through wireless network. When connected to the CMS, the system provides the following function:

- The equipment can transmit infusion information, alarm information, and equipment information (such as battery and network) to the CMS.
- Patient information can be synchronized between the equipment and the CMS.

- Patient can be admitted or discharged by the CMS, and patient information can be transmitted to this equipment.

For more information on the CMS, see *BeneFusion nCS Infusion Supervision System and BeneVision Central Monitoring System Operator's Manuals*.

To connect the equipment to the CMS, follow this procedure:

1. Set the **IP Address**, **Subnet Mask**, and **Gateway**. For more information, see **5.2 The Network Setup Settings**.
2. Connect the equipment to the CMS through any of the following methods:
  - ◆ Admit the equipment on the CMS. Refer to the *BeneFusion nCS Infusion Supervision System and BeneVision Central Monitoring System Operator's Manuals* for details of admitting an equipment.
  - ◆ Pair the equipment on the CMS. Refer to the *BeneVision Central Monitoring System Operator's Manual* for details of pairing an equipment.
  - ◆ Set the **CMS Server Address** in the **Dock Setup** menu, and the equipment automatically search and connected to the corresponding CMS. For the setting of **CMS Server Address**, see **5.2.6 The Central Station Setup Settings**.

## NOTE

---

- **The equipment can communicate with the CMS only when it is properly connected the CMS. If the network is interrupted, you are not able to view the infusion information through the CMS.**
- 

## 7.3 Connecting the Equipment to the Monitor

The equipment can be connected to the BeneVision N series (except for the BeneVision N1) patient monitor through the BeneLink module.

The equipment can transmit the infusion and alarm information to the patient monitor. On the patient monitor, you can view the infusion information from the **Integrated Devices** screen and infusion trends from the **InfusionView** screen. For the detailed information, see the *BeneVision N series Operator's Manual*.

## 7.4 Connecting the Equipment to the eGateway

You can connect the equipment to the eGateway to implement interaction between the equipment and the Hospital Information System (HIS) via the HL7 protocol. When connected to the eGateway, the system provides the following functions:

- The equipment can transmit infusion information and drug information to the eGateway.
- Patient information can be synchronized between the equipment and the eGateway.

- The prescription system assigns prescriptions to the Dock through the eGateway and master server. Then the Dock assigns prescriptions to the specified pumps.

**This page intentionally left blank.**

# 8 Managing Patient

---

## 8.1 Admitting a Patient

The Dock admits a new patient in the following situations:

- If the Dock is connected to the ADT server through the eGateway, patient information is loaded to the Dock after Patient ID or Visit Number is input. Then patient information in the Dock automatically update.
- If the Dock is directly connected to the CMS, patient information in the Dock and CMS synchronously updates if either patient information is edited.
- If the Dock is connected to the BeneVison N series (except for the BeneVison N1) patient monitor, patient information in the Dock synchronously update when patient information in the monitor is edited, but patient information in the Dock cannot be edited.

## 8.2 Exporting Patient Information

To export the information of the current patient to the USB drive, follow this procedure:

1. Connect the USB drive to the USB connector.
2. Swipe the pump touchscreen from top down → select **Menu** → select **Patient Management** → select **Export Patient Information**.
3. Select **OK**.

Exporting the patient information automatically discharge the patient.

## 8.3 Importing Patient Information

To import the patient information from the USB drive, follow this procedure:

1. Connect the USB drive to the USB connector.
2. Swipe the pump touchscreen from top down → select **Menu** → select **Patient Management** → select **Import Patient Information**.
3. Select **OK**.

**This page intentionally left blank.**



# 9 Maintenance

---

Regular maintenance is essential to ensure that the equipment functions properly. This chapter contains information on periodic testing and maintenance.

## 9.1 Maintenance Safety Information

---

### WARNING

---

- To avoid electric shock, stop using the equipment if you find the housing of the equipment has signs of broken. Contact the service personnel for help in that case.
  - Failure on the part of the responsible individual hospital or institution using this equipment to implement a recommended maintenance schedule may cause undue equipment failure and possible health hazards.
  - No modification of this equipment is allowed.
  - This equipment contains no user serviceable parts.
  - The safety checks or maintenance involving any disassembly of the equipment should be performed by professional service personnel. Otherwise, undue equipment failure and possible health hazards could result.
  - The service personnel must be properly qualified and thoroughly familiar with the operation of the equipment.
- 

### CAUTION

---

- The equipment and accessories shall not be served or maintained while in use with a patient.
  - If you discover a problem with the equipment, such as the product label falls off, contact your service personnel.
- 

### NOTE

---

- If needed, contact the manufacture for circuit diagrams, component part lists, descriptions, or other information concerning the repair of the equipment.
-

## 9.2 Maintenance and Testing Schedule

Follow the maintenance and testing schedule or local regulations to perform testing and maintenance. Make sure to clean and disinfect the equipment before taking any tests and maintenance.

The following table lists the maintenance and testing schedule:

Test/Maintenance Item		Recommended Frequency
Safety Tests		
Electrical safety tests		<ul style="list-style-type: none"><li>• Once every three years, or if required.</li><li>• When the power board is repaired or replaced.</li><li>• When the main board is replaced.</li><li>• When the equipment drops to the ground.</li></ul>
Other Tests		
Visual inspection		Every day, before first use.
Magnet Indicator LED		Each time before use.
Power-on test		Each time the equipment is powered on.
Battery check	Functionality test	<ul style="list-style-type: none"><li>• When the battery is first installed.</li><li>• When the battery is replaced.</li></ul>
	Performance test	Every three months or if the battery runtime reduces significantly.

## 9.3 Testing Methods and Procedures

Except the following maintenance tasks, all other test and maintenance tasks should be performed by the qualified service personnel only.

- Regular check, including visual inspection and power-on test
- Battery check

If your equipment needs a safety test and performance test, contact the service personnel.

### 9.3.1 Performing Visual Inspection

Visually inspect the equipment before it is first used every day. If you find any signs of damage, remove the equipment from use and contact the service personnel.

Verify that the equipment meets the following requirements:

- Environment and power supply specifications are met.

- The equipment housing and display screen are free from cracks or other damages.
- The power cord is not damaged and the insulation is in good condition.
- Connectors, plugs, and cables are not damaged and kinked.
- Power cord and cable are securely connected with the equipment.

### 9.3.2 Performing Power-on Test

The equipment automatically performs a selftest at startup. Check the following items for the power-on test:

- The equipment powers on properly.
- The alarm system works properly.
- The equipment displays properly.

### 9.3.3 Checking the Battery

See steps 1 to 6 of **9.4.4 Conditioning the Battery** to check battery performance. The operating time of the battery reflects their performance directly. If the operating time of a battery is noticeably shorter than that stated in the specifications, the battery may reach its service life or malfunction. If the battery performance meets the requirement, fully charge the battery again for use or charge it to 40 – 60% for storage.

## 9.4 Maintaining the Battery

This equipment is designed to run on rechargeable Lithium-ion battery power when the external power is not available. The equipment can switch between battery power and the external power without interrupting working. If both the external power and the battery power are available, the equipment uses the external power in preference to the battery power.

### 9.4.1 Battery Safety Information

---

#### **WARNING**

---

- **Use only specified battery. Use of a different battery may present a risk of fire or explosion.**
- **Do not crush, drop or puncture the battery. Mechanical abuse can lead to internal damage and internal short circuits. If a battery has been dropped or banged against a hard surface, whether damage is externally visible or not, remove the battery from use and dispose of it properly.**
- **If the battery shows signs of damage or signs of leakage, replace it immediately. Use caution in removing the battery. Avoid contacting the leakage.**
- **Extremely high ambient temperature may cause battery overheat protection, resulting in equipment shutdown.**

- **The lithium-ion battery has a service life. Replace your battery when it reaches the end of its service life. Failure to replace the battery may cause serious damage to your equipment from battery overheating.**
  - **Do not open the battery, heat the battery above 60 °C, incinerate battery, or short battery terminals. They may ignite, explode, leak or heat up, causing personal injury.**
- 
- 

---

## **CAUTION**

---

- **Remove the battery if it will not be used for an extended period of time.**
- 

---

## **NOTE**

---

- **Storing the battery at high temperature for an extended period of time will significantly shorten their life expectancy.**
  - **Storing the battery in a cool place can slow the aging process. Ideally the battery should be stored at 15 °C.**
- 

### **9.4.2 Installing the Battery**

The battery must only be installed by service personnel trained and authorized by Mindray Scientific. To install the battery, contact your service personnel. The battery is installed when the equipment leaves the factory.

Replace a battery in the following situations:

- The battery has visual signs of damage.
  - The battery fails.
  - The battery is aged and its runtime significantly shorter than the specification.
  - The battery service life expires.
- 

---

## **CAUTION**

---

- **Lithium batteries replaced by inadequately trained personnel could result in a hazard, such as excessive temperatures, fire or explosion.**
  - **Properly dispose of the battery according to local regulations.**
- 

### **9.4.3 Charging the Battery**

To optimize performance, a fully or nearly fully discharged battery should be charged as soon as possible. The battery is recharged automatically when the equipment is connected to AC mains power.

## NOTE

---

- **The battery should be charged only in this equipment.**
  - **When this equipment is used with a pump, and the equipment is connected to the AC power source, the pump battery is charged automatically.**
  - **Check the battery for adequate power when the equipment runs on battery power. Charging the battery if required.**
- 

### 9.4.4 Conditioning the Battery

The service life of a battery depends on how frequent it is used. When properly used, the lithium-ion battery has a service life of approximately three years. If improperly used, its service life can be shorten. We recommend replacing the battery every three years.

The performance of the battery deteriorates over time. You should condition the battery every two months.

To condition a battery, follow this procedure:

1. Disconnect the equipment from the patient.
2. Turn off the equipment, and connect the equipment to the external power source.
3. Allow the battery to be charged uninterruptedly till it is fully charged.
4. Disconnect the equipment from the external power source, and turn on the equipment.
5. Allow the equipment to run on the battery until the battery is completely depleted and the equipment automatically shuts down.
6. Fully charge the battery again for use or charge it to 40 – 60% for storage.


## NOTE

---

- **If the battery is not conditioned for a prolonged time, its charge indication may not be accurate and you may wrongly evaluate the remaining battery runtime.**
  - **Do not interrupt battery conditioning.**
- 

## 9.5 Checking Version Information


To view the system Software Version, Internal Version, Compile Time, Driver Software, Power Software, and WiFi Version, follow this procedure:

1. Swipe the pump touchscreen from top down → select **Menu** → select **Dock Setup** → input the required password → select .
2. Select **Version Information**.

## 9.6 Checking the History Record

The **History Record** menu shows the history of the Dock activities, including the alarms and other operations.

To access the **History Record** menu, follow this procedure:

1. Swipe the pump touchscreen from top down → select **Menu** → select **Dock Setup** → input the required password → select .
2. Select **History Record**.


### NOTE

---

- **A total loss of power has no impact on the history records stored.**
  - **Alarms are saved as events and will remain if the equipment is powered down. The time of equipment power down is also recorded as an event.**
  - **The Dock stores up to 2500 events. When the capacity is reached, earlier events will be overwritten by later ones.**
- 

## 9.7 Exporting the History Record

To export the history record, follow this procedure:

1. Connect the USB drive to the USB connector.
2. Swipe the pump touchscreen from top down → select **Menu** → select **Dock Setup** → input the required password → select .
3. Select **Export History Record**.

## 9.8 Disposing of the Equipment

The service life of this equipment is ten years. Dispose of the equipment when its service life is reached. Follow local regulations regarding the disposal of such product.

---

### WARNING

---

- **For disposal of parts, batteries, packaging materials, and accessories, where not otherwise specified, follow local regulations regarding disposal of hospital waste.**
-

# 10 Care and Cleaning

---

In this chapter we only describe cleaning and disinfection of the Dock, IV pole, desktop surface, and trolley. For the cleaning and disinfection of other reusable accessories, refer to their instructions for use.

## 10.1 Care and Cleaning Safety Information

---

### WARNING

---

- Use only the approved cleaners, disinfectants and methods listed in this chapter to clean and disinfect your equipment and accessories. Warranty does not cover damage caused by unapproved substances or methods.
  - Do not mix disinfecting solutions, as hazardous gases may result.
  - We make no claims regarding the efficacy of the listed chemicals or methods as a means for controlling infection. For the method to control infection, consult your hospital's infection control officer or epidemiologist.
  - The responsible hospital or institution shall carry out all cleaning and disinfection procedures specified in this chapter.
- 

### CAUTION

---

- Turn off the equipment and remove the power cord from the equipment before cleaning and disinfecting.
  - Never immerse any part of the equipment or accessories in liquids or allow liquid to enter the interior of the equipment or accessories.
  - Any contact of cleaners or disinfectants with connectors or metal parts may cause corrosion.
  - Do not pour or spray any liquid directly on the equipment or accessories or permit fluid to seep into connections or openings.
  - If you spill liquid on the equipment or accessories, disconnect the power supply, dry the equipment, and contact your service personnel.
  - Never use abrasive materials (such as steel wool or silver polish), or erosive cleaners (such as acetone or acetone-based cleaners).
  - Dilute and use the cleaners or disinfectants according to the manufacturer's instructions.
-

- **Check the equipment after cleaning and disinfecting. If there is any sign of damage, remove it from use.**

## 10.2 Cleaning the Equipment

Clean the Dock, IV pole, desktop surface, and trolley on a regular basis. Before cleaning, consult your hospital's regulations. The following table lists approved cleaners:

Product Name	Product Type	Manufacturer
Ethanol, 75%	Liquid	/
Soapy water (pH value: 7.0 to 10.5)	Liquid	/

To clean the equipment, follow this procedure:

1. Dampen a soft lint-free cloth with water or ethanol (75%).
2. Wring excess liquid from the cloth.
3. Wipe the display screen of the equipment.
4. Wipe the external surface of the equipment with the damp cloth, avoiding the connectors and metal parts.
5. Dry the surface with a clean cloth. Allow the equipment air dry in a ventilated and cool place.

### CAUTION

- **Any contact of cleaners or disinfectants with connectors or metal parts may cause corrosion.**

## 10.3 Disinfecting the Equipment

Disinfect the Dock, IV pole, desktop surface, and trolley as required in your hospital's servicing schedule. Cleaning the equipment before disinfecting is recommended. Always dilute and use disinfectants according to the manufacturer's instructions. The following table lists approved disinfectants:

Product Name	Product Type	Manufacturer
Ethanol, 75%	Liquid	/
Isopropanol, 70%	Liquid	/
PDI Sani-Cloth® AF3 Germicidal Disposable Wipe	Wipes	PDI Inc.



Product Name	Product Type	Manufacturer
Virex® II 256 (1:256)	Liquid	Diversey Inc
Hydrogen peroxide, 3%	Liquid	/
Sodium hypochlorite bleach, 0.5%	Liquid	/

---

## CAUTION

---

- **To avoid long term damage, the accessories should be disinfected only when necessary as determined by your hospital's policy.**
- 

## 10.4 Sterilization

Sterilization is not recommended for this equipment, related products, accessories, or supplies unless otherwise indicated in the Instructions for Use that accompany the products, accessories or supplies.

## 10.5 Impact of Improper Cleaning

Using cleaners other than those recommended may have the following impact:

- Product discoloration
- Metal part corrosion
- Brittle and breaking wires, connectors, and equipment housing
- Reduced cable and leadwire life
- Overall system performance degradation
- Equipment malfunction or failure

**This page intentionally left blank.**

# 11 Accessories

---

The accessories listed in this chapter comply with the requirements of IEC 60601-1-2 when in use with the equipment. For details about the accessories, refer to the instructions for use provided with the accessory.

---

## WARNING

---

- **Use accessories specified in this chapter. Using other accessories may cause damage to the equipment or not meet the claimed specifications.**
- 

---

## CAUTION

---

- **The accessories may not meet the performance specifications if stored or used outside the specified temperature and humidity ranges. If accessory performance is degraded due to aging or environmental conditions, contact your service personnel.**
  - **Check the accessories and their packages for any sign of damage. Do not use them if any damage is detected.**
  - **Use the accessories before the expiry date if their expiry date is indicated.**
- 

PN	Description
0020-20-12522	Power cord, 10A, 250V, 2.5m, International
048-011658-00	Safety tether
030-001626-00	Wall hook
025-000217-00	MRI-TNC-WiFi antenna
/	Cisco Catalyst 9120AXE router

**This page intentionally left blank.**

# A Product Specifications

---

## A.1 Classifications

The equipment is classified, according to IEC60601-1:

Type of protection against electrical shock	CLASS I EQUIPMENT, equipment energized from an internal electrical power source.
Degree of protection against electrical shock	The pump: Defibrillation-proof type CF applied part (direct cardiac application)
Degree of protection against harmful ingress of water	IP33
Degree of mobility	Transportable
Mode of operation	Continuous
Degree of safety of application in the presence of flammable anesthetic mixture with air or with oxygen or nitrous oxide	The equipment is not suitable for use in the presence of a flammable anesthetic mixture with air or with oxygen or nitrous oxide

## A.2 Environmental Specifications

Item	Temperature (°C)	Relative humidity (noncondensing)	Barometric (kPa)
Operating conditions	5 to 40	15% to 95%	57.0 to 107.4
Storage conditions	-30 to 70	10% to 95%	16.0 to 107.4

Storage Conditions: Corrosive-free and ventilated

---

### WARNING

---

- **The equipment may not meet the performance specifications if stored or used outside the specified temperature and humidity ranges. If the performance of the equipment is degraded due to aging or environmental conditions, contact your service personnel.**
-

## A.3 Power Supply Specifications

### A.3.1 External Power Supply Specifications

Item	External AC Power Supply
Voltage	100 VAC to 240 VAC
Current	2.5A to 1.6A
Frequency	50/60 Hz
Fuse	T3.15AL 250V

### A.3.2 Battery

Battery Type	Lithium-ion
Rated battery voltage	10.8 VDC
Battery capacity	2900mAh
Power supply time	Dock battery: $\geq 10$ hours Magnet Indicator battery: $\geq 720$ hours
Charging time	Dock battery: $\leq 6$ hours Magnet Indicator battery: $\leq 8$ hours
Shutdown delay	At least 30 minutes after first low battery alarm (new battery, Wi-Fi disabled, not provide power to the pump)

## A.4 Physical Specifications



Item	Maximum Weight (kg)	L x W x H (mm)
Dock	$\leq 50$ (with trolley and IV pole)	$\leq 560 \times 540 \times 1540$ (with trolley, without IV pole)

## A.5 Hardware Specifications

### A.5.1 Displays

Type	Size (diagonal)	Resolution
OLED	$\geq 3$ inches	$\geq 256 \times 64$ pixels

### A.5.2 LEDs

Alarm lamp	2 (red and yellow)
External power LED	1 (green)
Battery LED	1 (green)
Magnet Indicator LED	2 (green, yellow, and red)
 battery LED	1 (yellow and green)
 error LED	1 (red)

### A.5.3 Audio Indicator

Speaker	Gives alarm tones (sound pressure 50 to 68 dB). Supports multi-level tone modulation. Alarm tones comply with IEC 60601-1-8.
---------	--

### A.5.4 Interface Specifications

Multifunctional connector	4
USB connector	1, USB 2.0 protocol. Fixed time synchronization pulse specified by the USB protocol.
Power input connector	1

## A.6 Product Specifications

MR scanner	1.5T and 3.0T
Magnetic field in MR environment	$\leq 20\text{mT}$
Distance to the opening of the magnet bore	$\geq 1.5\text{m}$
Magnetic field strength detection accuracy	$\leq \pm 10\%$

## A.7 Wireless Network

Standards	IEEE 802.11a/b/g/n/ac
-----------	-----------------------

Modulation mode	BPSK, QPSK, QAM
Operating frequency	2412 MHz to 2472 MHz 5180 MHz to 5825 MHz
Data rate	IEEE 802.11a: 6 to 54 Mbps IEEE 802.11b: 1 to 11 Mbps IEEE 802.11g: 6 to 54 Mbps IEEE 802.11n: MCS0 to MCS7 IEEE 802.11ac: MCS0 to MCS8
Transfer power	< 20 dBm (CE requirement: detection mode – RMS) < 30 dBm (FCC requirement: detection mode – PEAK)
Operating mode	Transmitting data through the wireless access point (AP)
Data security	Standards: WPA/WPA2 PSK, WPA/WPA2 EAP, WPA/WPA2 CCKM EAP methods: LEAP, EAP-TTLS, EAP-TLS, EAP-FAST, PEAP-MsChapV2, PEAP-GTC, PEAP-TLS Encryption modes: TKIP and AES
Data transmission delay between the Dock and the CMS	Total data transmission delay time between the Dock and the CMS is $\leq 8s$



# B EMC and Radio Regulatory Compliance

---

## B.1 EMC

The system complies with the EMC standard IEC60601-1-2:2020.

---

### WARNING

---

- The use of unapproved accessories may diminish system performance.
  - Use of components, accessories, probes, and cables other than those specified may result in increased emission or decreased immunity of system.
  - The system needs special precautions regarding EMC and needs to be installed and put into service according to the EMC information provided below.
  - Use of this equipment adjacent to or stacked with other equipment should be avoided because it could result in improper operation. If such use is necessary, this equipment and the other equipment should be observed to verify that they are operating normally.
  - Use of accessories, transducers and cables other than those specified or provided by the manufacturer of this equipment could result in increased electromagnetic emissions or decreased electromagnetic immunity of this equipment and result in improper operation.
  - Portable RF communications equipment (including peripherals such as antenna cables and external antennas) should be used no closer than 30 cm (12 inches) to any part of the system, including cables specified by the manufacturer. Otherwise, degradation of the performance of this equipment could result.
  - Other devices may interfere with this equipment even though they meet the requirements of CISPR.
  - Use of portable or mobile communications devices can degrade the performance of the equipment.
-

If the system is operated within the electromagnetic environment listed in Table EMC-2, Table EMC-3 and Table EMC-4, the system will remain safe and will provide the following basic performances:

- Operating mode
- Function
- ALARM CONDITIONS regarded
- Magnetic field strength indication function
- Data stored


**Table EMC-1**

<b>Guidance and Mindray Declaration - Electromagnetic Emissions</b>		
The system is intended for use in the electromagnetic environment specified below. The customer or the user of system should assure that it is used in such an environment.		
<b>Emission test</b>	<b>Compliance</b>	<b>Electromagnetic environment - guidance</b>
RF Emissions CISPR 11	Group 1	The system uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF Emissions CISPR 11	Class A	The system is suitable for use in all establishments other than domestic and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic Emissions IEC 61000-3-2	Not applicable	
Voltage Fluctuations/ Flicker Emissions IEC 61000-3-3	Not applicable	

**Table EMC-2**

<b>Guidance and Mindray Declaration - Electromagnetic Immunity</b>			
The system is intended for use in the electromagnetic environment specified below. The customer or the user of system should assure that it is used in such an environment.			
<b>Immunity test</b>	<b>IEC 60601 test level</b>	<b>Compliance level</b>	<b>Electromagnetic environment - guidance</b>
Electrostatic discharge (ESD) IEC 61000-4-2	±8 kV contact; ±2 kV, ±4 kV, ±8 kV, ±15 kV air	±8 kV contact; ±2 kV, ±4 kV, ±8 kV, ±15 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%.
Electrical fast Transient / burst IEC 61000-4-4	±2 kV for power supply lines; ±1 kV for input/output lines	±2 kV for power supply lines; ±1 kV for input/output lines	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	±0,5 kV, ±1 kV line(s) to line(s); ±0,5 kV, ±1 kV, ±2 kV line(s) to earth	±0,5 kV, ±1 kV line(s) to line(s); ±0,5 kV, ±1 kV, ±2 kV line(s) to earth	
Voltage dips, Short interruptions and voltage variation on power supply input voltage IEC 61000-4-11	0% $U_T$ ; 0,5 cycle At 0°, 45°, 90°, 135°, 180°, 225°, 270° and 315°  0% $U_T$ ; 1 cycle 70% $U_T$ for 25/30 cycle at 0°  0% $U_T$ ; 250/300 cycle	0% $U_T$ ; 0,5 cycle At 0°, 45°, 90°, 135°, 180°, 225°, 270° and 315°  0% $U_T$ ; 1 cycle 70% $U_T$ for 25/30 cycle at 0°  0% $U_T$ ; 250/300 cycle	Mains power quality should be that of a typical commercial or hospital environment. If you require continued operation during power mains interruptions, it is recommended that our product be powered from an uninterruptible power supply or a battery.
Power frequency (50/60 HZ) magnetic field IEC 61000-4-8	30 A/m	30 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.
Note: $U_T$ is the A.C. mains voltage prior to application of the test level.			

Table EMC-3

Guidance and Mindray Declaration - Electromagnetic Immunity			
The system is intended for use in the electromagnetic environment specified below. The customer or the user of system should assure that it is used in such an environment.			
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
Conducted RF IEC 61000-4-6	3 Vrms 0,15 MHz to 80 MHz	3 Vrms 0,15 MHz to 80 MHz	Portable and mobile RF communications equipment should be used no closer to any part of system, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter. Recommended separation distance: $d = 1.2\sqrt{P}$ $d = 2\sqrt{P}$
	6 Vrms in ISM bands <sup>a</sup> between 0,15 MHz and 80 MHz	6 Vrms in ISM bands <sup>a</sup> between 0,15 MHz and 80 MHz	
Radiated RF IEC 61000-4-3	3V/m 80 MHz to 2.7 GHz	3V/m 80 MHz to 2.7 GHz	$d = 1.2\sqrt{P}$ 80 MHz to 800 MHz $d = 2.3\sqrt{P}$ 800 MHz to 2.7 GHz Where, P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in meters (m). Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey <sup>b</sup> , should be less than the compliance level in each frequency range <sup>c</sup> . Interference may occur in the vicinity of equipment marked with the following symbol: 
Note 1: At 80 MHz and 800 MHz, the higher frequency range applies. Note 2: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.			

<sup>a</sup> The ISM (industrial, scientific, and medical) bands between 150 kHz and 80 MHz are 6,765 MHz to 6,795 MHz; 13,553 MHz to 13,567 MHz; 26,957 MHz to 27,283 MHz; and 40,66 MHz to 40,70 MHz. The amateur radio bands between 0,15 MHz and 80 MHz are 1,8 MHz to 2,0 MHz, 3,5 MHz to 4,0 MHz, 5,3 MHz to 5,4 MHz, 7 MHz to 7,3 MHz, 10,1 MHz to 10,15 MHz, 14 MHz to 14,2 MHz, 18,07 MHz to 18,17 MHz, 21,0 MHz to 21,4 MHz, 24,89 MHz to 24,99 MHz, 28,0 MHz to 29,7 MHz and 50,0 MHz to 54,0 MHz.

<sup>b</sup>Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the device is used exceeds the applicable RF compliance level above, the device should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as re-orienting or relocating the device.

<sup>c</sup> Over the frequency ranges 150 kHz to 80 MHz, field strengths should be less than 3V/m.

**Table EMC-4**

Guidance and Mindray Declaration - Electromagnetic Immunity			
The system is intended for use in the electromagnetic environment specified below. The customer or the user of system should assure that it is used in such an environment.			
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
Proximity magnetic fields IEC 61000-4-39	65 A/m 134,4 kHz Pulse modulation 2,1 kHz	65 A/m 134,4 kHz Pulse modulation 2,1 kHz	/
	7,5 A/m 13,56 MHz Pulse modulation 50 kHz	7,5 A/m 13,56 MHz Pulse modulation 50 kHz	

**Table EMC-5 Test specifications and minimum distances**

<b>Recommended Separation Distances between Portable and Mobile RF Communications Device and the System</b>						
<p>The system is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of system can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the system as recommended below, according to the maximum output power of the communications equipment. Portable and mobile radio communications equipment (e.g. two-way radio, cellular/ cordless telephones and similar equipment) should be used no closer to any part of this system, including cables, than determined according to the following method:</p>						
<b>Test frequency (MHz)</b>	<b>Band (MHz)</b>	<b>Service</b>	<b>Modulation</b>	<b>Maximum power (W)</b>	<b>Distance (m)</b>	<b>Immunity test level (V/m)</b>
385	380 - 390	TETRA 400	Pulse modulation 18Hz	1.8	0.3	27
450	430 - 470	GMRS 460 FRS 460	FM $\pm 5$ kHz deviation 1 kHz sine	2	0.3	28
710	704 - 787	LTE Band 13,17	Pulse modulation 217 Hz	0.2	0.3	9
745						
780						
810	800 - 960	GSM 800/900, tetra 800, iDEN 820, CDMA 850, LTE Band 5	Pulse modulation 18 Hz	2	0.3	28
870						
930						

1720	1700 - 1990	GSM 1800, CDMA 1900, GSM 1900, DECT, LTE Band 1, 3, 4, 25, UMTS	Pulse modulati on 217 Hz	2	0.3	28
1845						
1970						
2450	2400 - 2570	Bluetooth , WLAN, 802.11 b/ g/n, RFID 2450, LTE Band 7	Pulse modulati on 217 Hz	2	0.3	28
5240	5100 - 5800	WLAN, 802.11 a/ n	Pulse modulati on 217 Hz	0.2	0.3	9
5500						
5785						

**Table EMC-6**

<b>Recommended Separation Distances between Portable and Mobile RF Communications Device and the System</b>				
The system is intended for use in an electromagnetic environment in which radiated RF disturbance are controlled. The customer or the user of system can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communication equipment (transmitters) and system as recommended below, according to the maximum output power of the communication equipment.				
<b>Rated Maximum Output Power of Transmitter Watts (W)</b>	<b>Separation Distance According to Frequency of Transmitter</b>			
	150 kHz to 80 MHz Out ISM bands $d = 1.2\sqrt{P}$	150 kHz to 80 MHz in ISM bands $d = 2\sqrt{P}$	80 MHz to 800 MHz $d = 1.2\sqrt{P}$	800 MHz to 2.7 GHz $d = 2.3\sqrt{P}$
0.01	0.12	0.2	0.12	0.23
0.1	0.38	0.64	0.38	0.73
1	1.2	2	1.2	2.3
10	3.8	6.4	3.8	7.3
100	12	20	12	23
<p>For transmitters at a maximum output power not listed above, the recommended separation distanced in meters (m) can be determined using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.</p> <p>Note 1: At 80 MHz and 800 MHz, the higher frequency range applies.</p> <p>Note 2: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.</p>				

**Table EMC-7**

<b>No.</b>	<b>Name</b>	<b>Cable Length (m)</b>	<b>Shield or not</b>	<b>Remark</b>
1	AC power cable	2.5	Not shield	/



## B.2 Radio Regulatory Compliance

Refer to **A.7 Wireless Network** for the details of RF parameters.



The radio device used in this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

---

### WARNING

---

- **Keep a distance of at least 20cm away from the equipment when Wi-Fi function is in use.**
-

**This page intentionally left blank.**

# C Abbreviations

---

Abbreviation	In Full
AC	Alternating Current
Anti-Bolus	Anti-Bolus
BOLUS	Bolus
CCU(CICU)	Cardiac Intensive Care Unit
CE	Conformité Européenne
CISPR	International Special Committee on Radio Interference
CPU	Central Processing Unit
DC	Direct Current
DEFS	Dose Error Reduction Systems
DPS	Dynamic Pressure System
EEC	European Economic Community
EMC	Electromagnetic Compatibility
EMI	Electromagnetic Interference
EtO	Ethylene oxide
ICU	Intensive Care Unit
ID	Identification
IEC	International Electrotechnical Commission

Abbreviation	In Full
IEEE	Institute of Electrical and Electronic Engineers
ISO	International Organization for Standardization
IV	Intravenous
KVO	Keep Vein Open
LED	Light Emitting Diode
Max	Maximum
MDD	Medical Device Directive
Min	Minimum
MR	Magnetic Resonance
MRI	Magnetic Resonance Imaging
N/A	Not Applied
OR	Operating Room
SN	Series Number
USB	Universal Serial Bus
VTBI	Volume To Be Infused



