

12.4. Alarms

The generator control system monitors the proper functioning of the generator. Alarms are triggered in the event of malfunctions, i.e. if previously defined limit values are exceeded or not reached. The alarm message then appears on each page of the control panel.

All error messages that occur are automatically saved. The alarms can be read out from the data memory at a later time. All alarm messages are displayed in the Alarm menu.

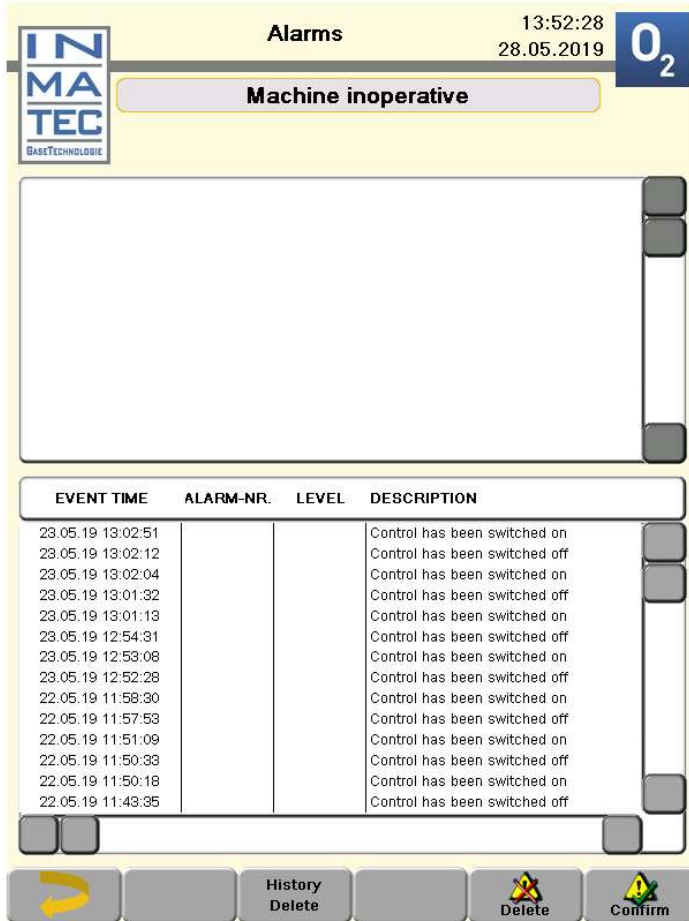


Fig. 10: Alarms

Function	Description
Confirm	Alarm is deleted on the start page Alarm is documented in the upper field
Clear	Alarm changes from the upper field (temporary) in the lower field (history)

Tab. 11: Alarms

12.8. Export control menu

In the Export control menu, saved generator data can be exported individually or combined into groups by checking the respective boxes.

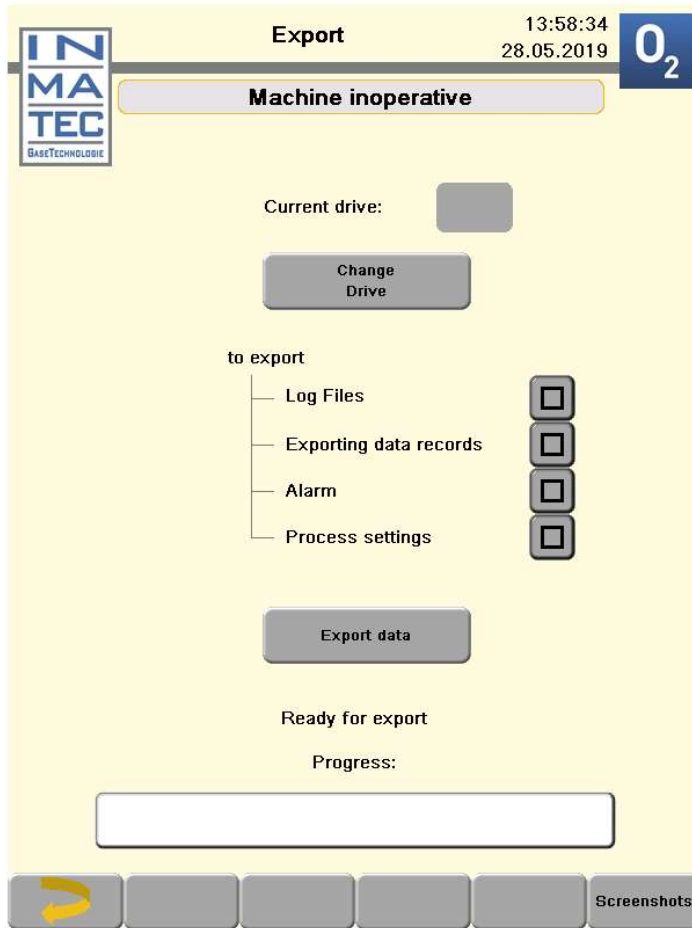


Fig. 14: Export

Function	Description
Export data	<ol style="list-style-type: none"> 1. Selection of the data to be exported 2. Drive selection C: Touch Control Panel F: External data memory USB
Change drive	The current drive changes from C: Touch Control Panel internal data memory F: External data memory USB

Tab. 14: Export