

Our products are warranted for 2 (two) years period against the manufacturing, material, labor defects providing that there is no misuse and interference for repairment and/or other reasons by people who are not qualified in electrical issues.

1. Damages and failures due to user errors.
2. Damages and failures caused during loading, discharge and transportation after delivered to the consumer.
3. Damages and failures due to under voltage or high voltage, no grounding, faulty electrical installations made by unauthorized bodies/people and using the product at a different voltage than the voltage written on the label
4. Damages and failures due to fire and stroke of lightning.
5. Interfering in faulty piece or product, exposing to destructive synthetic materials, accident, negligence, usage by unqualified people and other usage faults, the damages on exterior surface are not

COVERED BY THE GUARANTEE

Manufacturing Company

Corporate Name: GRUP İMAJ AYDINLATMA SAN.VE TİC. A.Ş.

Adress: DENİZ AKTAŞ CAD.NO:6 KAVAKLI/BEYLİKDÜZÜ – İSTANBUL

TEL : +90(212) 689 93 10

FAX: +90(212) 689 93 11

E-mail: info@grupimaj.com

Website: www.grupimaj.com

Signature/ Stamp of Company Executive

About Product

Type :

Brand :

Model :

Banderol and Serial No:

Delivery date and place:

Guarantee Period: 2 (two) Years

About Vendor

Corporate Name:

Address :

Tel :

Fax :

Invoice date:

Date/Signature/Stamp:





GRUP İMAJ

BALAST MANUAL

50W-100W-150W-250W-400W



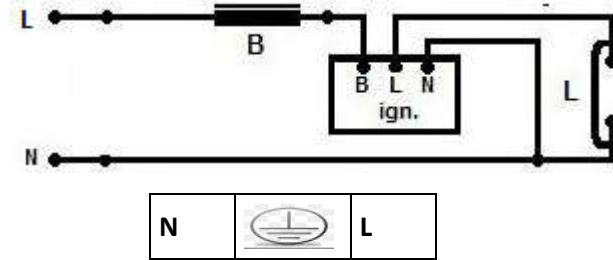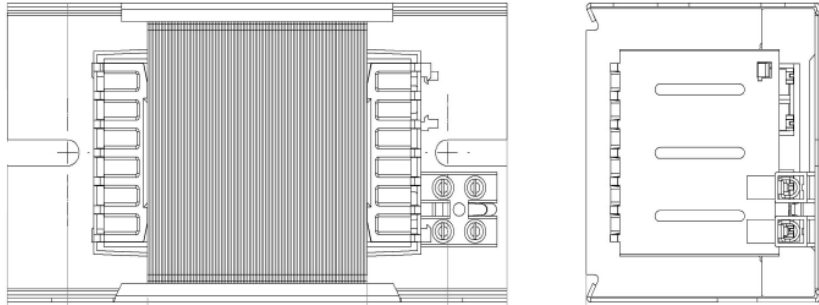

Technical Features

 
Ballast cover resistant to high temperature

Click-fit electric terminals and montage cable option from 0.55 to 15 mm²

220-230 Volt Option

Montage and Technical Connection

- 1- The bottom plate in the ballast equipment section is disassembled and installed with a stainless cross-head screw and philips head screwdriver.
- 2- Ballast is installed to metal bottom in terms of the security of maintenance and repair.
- 3- Terminals on the ballast end are mounted to connectors in order to install the cables.
- 4- 1.5mm² single core cables are mounted to the tip of the electric terminals with a flathead screwdriver after electric terminals mounted to ballast terminals.
- 5- Igniter, socket, capacitor are mounted by means of cables, respectively after the montage of ballast.
- 6- For excellent operation of the terminals, the cable isolation layer must be opened by 8mm.



Montage Connection Diagram