

AURIGA HP LIST OF ALARM

msg Auriga HP

Msg No	String ENG	
1	Mains	not available
3	Battery	boost charge
4	Battery	float charge
5	Battery test	failed
6	Battery test	executing
7	Battery empty	
8	Battery prealarm	
9	Battery test	passed
10	Battery test	not executed
11	Inverter	switched off
12	Inverter overload	(>100%)
13	Inverter overload	(>125%)
14	Inverter overload	(>150%)
15	Inverter overload	time exceeded
16	Cabinet temperature	over alarm level
17	Maintenance period	elapsed
18	UPS Emergency	Power Off
19	ECONOMY MODE	enabled
20	Static switch	overload (>100%)
21	Static switch	overload (>125%)
22	Static switch	overload (>150%)
23	SS overload	time exceeded
24	Manual bypass	switch closed
25	Load on	manual bypass
26	PFC overload	(>100%)
27	PFC overload	(>125%)
28	PFC overload	(>150%)
29	PFC overload	time exceeded
30	wrong reserve	phases sequence
31	Reserve not	available
32	Static switch	failure
33	Static switch	locked
34	Load on reserve	
35	Load on inverter	
36	Battery failure	
37	UPS Master	
38	UPS Slave	
39	Parallel data	exchange failure
41	Load not fed	
42	Input status	low / ok / fail
43	PFC power reduction	function active

msg Auriga HP

50	<u>Fan speed</u>	<u>reduced</u>
51	<u>Cabinet temperature</u>	<u>over warning level</u>
52	<u>Battery temperature</u>	<u>over alarm level</u>
53	<u>Battery temperature</u>	<u>over warning level</u>
54	<u>PFC IGBT temperature</u>	<u>over warning level</u>
55	<u>Fan speed</u>	<u>nominal</u>
56	<u>PFC IGBT temperature</u>	<u>over alarm level</u>
57	<u>INV IGBT temperature</u>	<u>over warning level</u>
58	<u>INV IGBT temperature</u>	<u>over alarm level</u>
59	<u>PFC/INV module</u>	<u>overtemp. protection</u>
60	<u>Command E.P.O.</u>	<u>(local)</u>
61	<u>Command E.P.O.</u>	<u>(relay board 1)</u>
62	<u>Command E.P.O.</u>	<u>(relay board 2)</u>
63	<u>Command E.P.O.</u>	<u>(parallel)</u>
65	<u>Mains ok</u>	
67	<u>Inverter on</u>	
68	<u>Reserve ok</u>	
69	<u>Synchro</u>	<u>not ok</u>
70	<u>Manual bypass</u>	<u>breaker open</u>
71	<u>Input section</u>	<u>activated</u>
72	<u>Flash memory</u>	<u>write protection</u>
73	<u>Synchro ok</u>	
74	<u>Precharge failed</u>	
75	<u>Autostart process</u>	<u>activated</u>
76	<u>Autostart process</u>	<u>finished</u>
77	<u>Autostart process</u>	<u>interrupted</u>
78	<u>Autostart process</u>	<u>failed</u>
80	<u>System start</u>	<u>done</u>
81	<u>System start</u>	<u>failed</u>
82	<u>System stop</u>	<u>done</u>
83	<u>System stop</u>	<u>failed</u>
84	<u>UPS protection</u>	<u>Power supply low</u>