

Wind Direction Transmitter >>First Class<<

Instruction for Use

4.3151.x0.001

Low Power Device with digital output, 10 Bit serial-synchronous



Dok. No. 021744/08/21

THE WORLD OF WEATHER DATA

Safety Instructions

- Before operating with or at the device/product, read through the operating instructions. This manual contains instructions which should be followed on mounting, start-up, and operation. A non-observance might cause:
 - failure of important functions
 - endangerment of persons by electrical or mechanical effect
 - damage to objects
- Mounting, electrical connection and wiring of the device/product must be carried out only by a qualified technician who is familiar with and observes the engineering regulations, provisions and standards applicable in each case.
- Repairs and maintenance may only be carried out by trained staff or **Adolf Thies GmbH & Co. KG**. Only components and spare parts supplied and/or recommended by **Adolf Thies GmbH & Co. KG** should be used for repairs.
- Electrical devices/products must be mounted and wired only in a voltage-free state.
- **Adolf Thies GmbH & Co. KG** guarantees proper functioning of the device/products provided that no modifications have been made to the mechanics, electronics or software, and that the following points are observed:
 - All information, warnings and instructions for use included in these operating instructions must be taken into account and observed as this is essential to ensure trouble-free operation and a safe condition of the measuring system / device / product.
 - The device / product is designed for a specific application as described in these operating instructions.
 - The device / product should be operated with the accessories and consumables supplied and/or recommended by **Adolf Thies GmbH & Co. KG**.
 - Recommendation: As it is possible that each measuring system / device / product may, under certain conditions, and in rare cases, may also output erroneous measuring values, it is recommended using redundant systems with plausibility checks for **security-relevant applications**.

Environment

- As a longstanding manufacturer of sensors Adolf Thies GmbH & Co. KG is committed to the objectives of environmental protection and is therefore willing to take back all supplied products governed by the provisions of "*ElektroG*" (German Electrical and Electronic Equipment Act) and to perform environmentally compatible disposal and recycling. We are prepared to take back all Thies products concerned free of charge if returned to Thies by our customers carriage-paid.
- Make sure you retain packaging for storage or transport of products. Should packaging however no longer be required, please arrange for recycling as the packaging materials are designed to be recycled.



Documentation

- © Copyright **Adolf Thies GmbH & Co. KG**, Göttingen / Germany
- Although these operating instruction has been drawn up with due care, **Adolf Thies GmbH & Co. KG** can accept no liability whatsoever for any technical and typographical errors or omissions in this document that might remain.
- We can accept no liability whatsoever for any losses arising from the information contained in this document.
- Subject to modification in terms of content.
- The device / product should not be passed on without the/these operating instructions.

Contents

1	Models available	4
2	Application	4
3	Mode of Operation	4
4	Recommendation Site Selection / Standard Installation	5
5	Installation.....	6
5.1	Wind Vane Mounting	7
5.2	Mechanical Mounting.....	8
5.3	Electrical Mounting	10
5.3.1	Cable	10
5.3.1.1	Cable Recommendation	10
5.3.2	Cable Shield.....	10
5.3.3	Connecting Recommendation for the Cable Shield	11
5.3.4	Plug and Cable Mounting	12
5.4	Connecting Diagram.....	13
6	Serial-synchronous Interface	14
7	Placing into Operation.....	20
8	Maintenance	20
9	Technical Data.....	21
10	Dimensional drawing	23
11	Accessories	24
12	EC-Declaration of Conformity	26

Figures

Figure 1:	Wind-Direction Transmission.....	14
Figure 2:	Interface specification "serial- synchron.".....	14
Figure 3:	Protocol.....	15
Figure4:	10bit Wind Direction Gray Code	16
Figure5:	Data- out activation	20

1 Models available

Order - No.	Measuring range	Electrical Output	Supply	Heating	Features
4.3151.00.001	0 ... 360°	Digital: 10 Bit Serial Synchronous	3.3 ... 42V DC	ja (24V AC / DC)	
4.3151.10.001	0 ... 360°	Digital: 10 Bit Serial Synchronous	3.3 ... 42V DC	nein	
4.3151.90.001	0 ... 360°	Digital: 10 Bit Serial Synchronous	3.3 ... 42V DC	yes (24V AC / DC)	Mast- Adaptor from stainless steel (V4A)

2 Application

The wind direction transmitter serves for the detection of the horizontal wind direction in the field of meteorology and the technology of environmental protection.

Special characteristics:

- High level of measuring accuracy and resolution.
- High damping ratio at a small delay distance.
- Low starting threshold.
- Low current consumption (3.3 V @ 1.4mA).

For wintertime use the wind direction transmitter (see chapter 1 models available) is optionally equipped with an electronically regulated heating, which guarantees the smooth running of the ball bearing, and prevents ice forming in the space between the external rotation parts.

3 Mode of Operation

The dynamic characteristics of the wind vane is achieved by the aluminum lightweight construction. The co-action of wind vane and balance weight results in a high damping ratio with small delay distance as excellent characteristic of the complete vane.

The axis of the wind vane is running in ball bearings and carries a diametrically magnetized magnet at the inner end. The angle position of the axis is scanned contact-free by a magnetic angle sensor (TMR-Sensor, Tunnel Magneto Resistance) through the position of the magnet field. As the sensor is operated in magnetic saturation, effects by external magnetic fields can

almost be eliminated. The connected electronics calculates the angle position of the axis and provides the respective serial-synchronous output signal.

An AC- or DC-voltage of 24V is intended for the separate supply of the optional heating. In all probability, the heating guarantees a trouble-free function of the Wind Direction Transmitter First Class even under extreme meteorological icing-conditions.

The outer parts of the instrument are made of corrosion-resistant anodized aluminum, and stainless steel. Highly effective labyrinth gaskets and O-rings protect the sensitive parts inside the instrument against humidity and dust.

4 Recommendation Site Selection / Standard Installation

In general wind measurement instruments should be able to detect the wind conditions of a large area. In order to obtain comparable values when determining the surface wind, measurements should be taken at a height of 10 meters over an even area with no obstacles. An area with no obstacles means that the distance between the wind direction transmitter and an obstacle should be at least 10 times the height of the obstacle (s. VDI 3786 Part 2). If it is not possible to fulfill this condition then the wind direction transmitter should be set up a height where local obstacles do not influence the measured values to any significant extent (approx. 6 - 10m above the obstacle). The wind direction transmitter should be set up in the center of flat roofs and not on the edge in order to avoid any preferential directions.

5 Installation

Attention:

Storing, mounting and operation under weather conditions is permissible only in vertical position, as otherwise water can get into the instrument.

Remark:

When using fastening adapters (angle, traverses, etc.) please take a possible effect on the measurements by turbulences into consideration.

Caution:

The device may only be supplied with a power supply of the "Class 2, limited power".

5.1 Wind Vane Mounting

Before the wind direction transmitter can be installed at its selected site, the wind vane must be mounted on the housing.

Tool:

Not required.

Process

1. Remove wind transmitter shaft and wind vane from the packing.
2. Remove cap ❶ by left-hand rotation of upper part ❷ of wind transmitter shaft.
3. Put the wind vane onto the upper part of the wind transmitter shaft.

Remark:


The longer part of the wind vane blade must indicate upwards.

4. Keep hold of the wind vane by hand to avoid twist movement, and turn the upper part of the wind transmitter shaft until the vane locks into the forcible control ❸.

Remark:

The marking lines ❹ at the bottom of wind vane counter weight, and at the upper part of the wind transmitter shaft, must be aligned.

5. Put the cap onto the thread, and seize strongly by clockwise rotation by hand..... ready

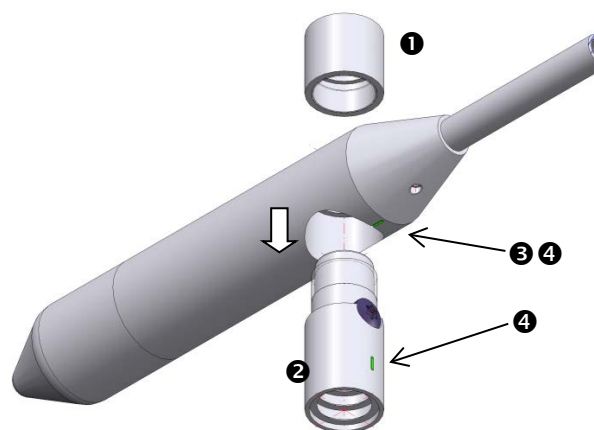

5.2 Mechanical Mounting

Remark:

The wiring must be prepared so far, that plug and cable have been pushed through instrument carrier, mast, traverse etc., and can be connected to the wind direction transmitter at the moment of the „Mechanical Mounting”, described in the following (please refer also to chapter 5.3.).

The wind direction transmitter must be mounted on an instrument carrier, which is suited for the measurement. For dimensions of wind direction transmitter please refer to chapter 10 Dimension diagram.

Suitable instrument carriers are masts, tubes, traverses, arms, adapters, adapters of POM for isolated mounting, which correspond to the mounting dimensions of the wind transmitter, and to the static requirements.

The inner diameter of the instrument carrier should be $\geq 20\text{mm}$ based on plug- and cable feed-through.

If the north alignment is carried out by compass, please consider the local declination (= deviation of direction of the magnetic needle from the true north), and local magnetic interferences (e.g. hardware, electric cable).

For alignment aid and for easy changing / replacement without readjustment:

With the help of the north-ring (accessory 509619):

The optional north ring part. no. 509619 can be used to mount the wind transmitter. The north ring serves as an alignment aid and for easy changing / replacement without having to re-adjustment of the north direction of wind direction indicators. The north ring uses the north borehole of the mast holder for this. See chapter 10 Dimension diagram.

When aligning the wind direction transmitter on a moving object (e.g. vehicle, wind wheel, ship etc) please consider that the “north point” to be determined, might possibly be located on the object.

Tools:


Hexagon socket wrench size 3 (Allen key).

Procedure:

1. Push cable/ plug connector of the wind direction transmitter through the borehole of the mast, tube, arm etc.
2. Put wind direction transmitter on mast, tube, arm etc.
3. For the precise determination of the wind direction the wind direction transmitter must be aligned **northwards** (geographical north).

The north point (0 °) is at the point where the output signal jumps from the maximum value to the minimum value.

4. Rotate north marking (I) at the housing and wind vane axially one above the other, acc. to figure.
5. Determine a prominent spot in the surrounding area (tree, building etc.) in northward direction, by means of a compass.
6. Locate the prominent spot over wind vane and balance weight of the wind direction transmitter.
7. Align wind direction transmitter. The north marking must indicate the *geographical north*.
8. In case of conformity, safeguard the wind direction transmitter by two M6-Allen head screws.

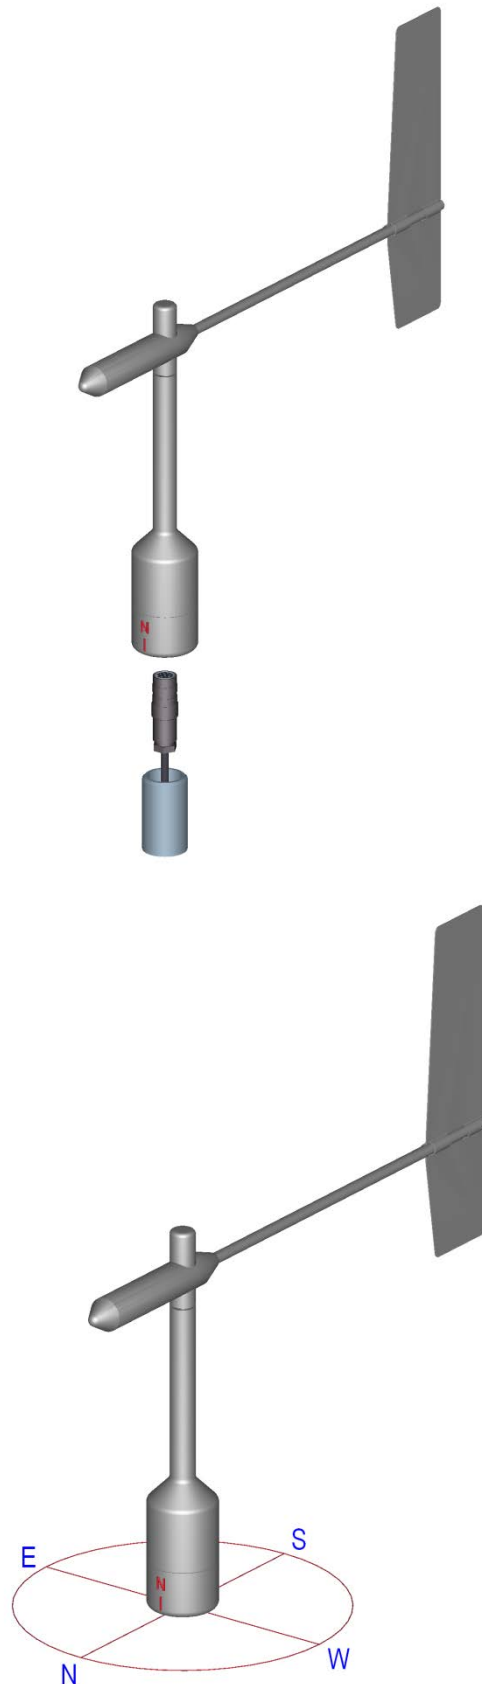

5.3 Electrical Mounting

5.3.1 Cable

Solder a shielded cable with diameter 7 ... 8mm and a core cross-section of 0.5 ... 0.75mm² to the enclosed coupling socket.

- The number of necessary wires is given in the connection diagram (chapter 5.4).

5.3.1.1 Cable Recommendation

No. of wires/ diameter / type / cable diameter
CABLE 8 x 0.5mm ² LIYCY BLACK, UV- resistant, Ø 7.6mm

5.3.2 Cable Shield





The connection of the cable shield between sensor and data acquisition device should be selected in way, that in case of over-voltages no equalizing currents will flow that might destroy the electronic components.

The connection of the cable shield should depend on the selected isolated, or respectively, non-isolated mounting of the sensors.

5.3.3 Connecting Recommendation for the Cable Shield


	Sensor Carrier	Sensor	Shielding / Ground	Lightning Protection
1.	Metallic measurement mast, grounded	Isolated mounting at the measuring mast (e.g. by non-metallic brackets, holder etc. or by metallic brackets, holder etc. with isolated plastic adaptors).	Apply the cable shield between sensor and data acquisition device (e.g. datalogger) both-sided. Ground data acquisition device.	Mount metallic lightning protection rod on the mast. Alternatively: Install separate lightning protection rod beside the measurement mast.
2.	Metallic measurement mast, grounded	Non-isolated mounting at the measurement mast (e.g. by metallic brackets, holders etc.).	Apply cable shield between sensor and data acquisition device (e.g. datalogger) only one-sided at the acquisition device. Ground data acquisition device.	Mount metallic lightning protection rod on the mast in isolated condition , and ground lightning protection rod. Alternatively: Install separate lightning protection rod beside the measurement mast.
3.	Metallic measurement mast, not grounded (mounted in isolated condition, e.g. on the attic)	Non-isolated mounting at the measurement mast. (e.g. by metallic brackets, holders etc.).	Apply the cable shield between sensor and data acquisition device (e.g. datalogger) both-sided. Ground data acquisition device.	Mount metallic lightning protection rod on the mast in isolated condition , and ground lightning protection rod. Alternatively: Install separate lightning protection rod beside the measurement mast.
4.	Non-metallic measuring mast (=isolated)	Mounting at the measurement mast. (e.g. by metallic brackets, holders etc.).	Apply the cable shield between sensor and data acquisition device (e.g. datalogger) both-sided. Ground data acquisition device.	Mount metallic lightning protection rod on the mast, and ground lightning protection rod. Alternatively: Install separate lightning protection rod beside the measurement mast.

5.3.4 Plug and Cable Mounting

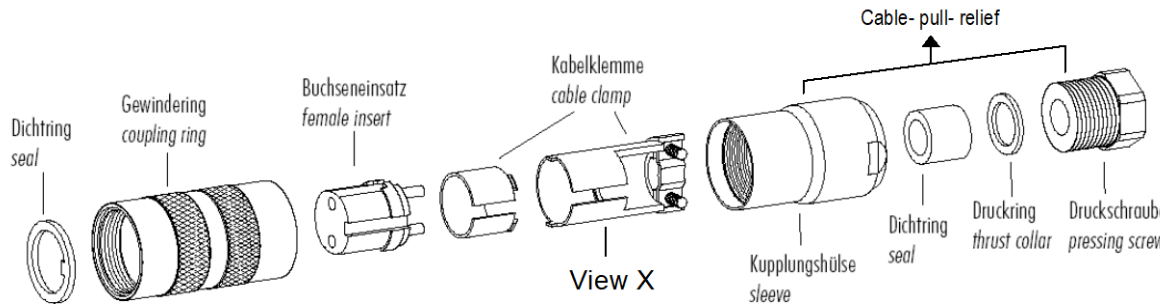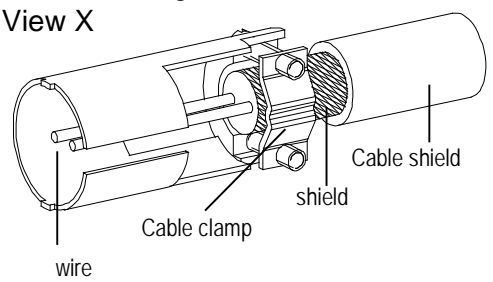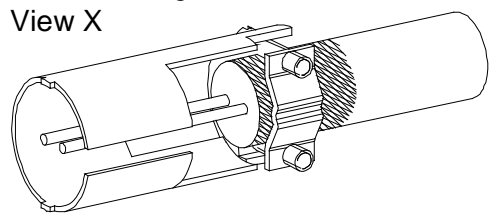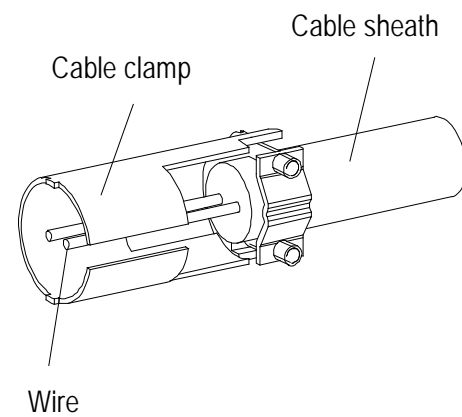Coupling socket, Type: Binder, Serial 423, EMC with cable clamp	
	
Cable connection: with cable shield	
<ol style="list-style-type: none"> Stringing parts on cable acc. to plan given above. Stripping cable sheath 20mm Cutting uncovered shield 15mm Stripping wire 5mm. <p><i>Cable mounting 1:</i> Putting shrink hose or insulating tape between wire and shield.</p> <p><i>Cable mounting 2:</i> If cable diameter permits, put the shield backward on the cable sheath.</p> <ol style="list-style-type: none"> Soldering wire to the insert, positioning shield in cable clamp. Screwing-on cable clamp. Assembling remaining parts acc. to upper plan. Tightening pull-relief of cable by screw-wrench (SW16 und 17). 	<p><i>Cable mounting 1</i> View X</p> 
<ol style="list-style-type: none"> Soldering wire to the insert, positioning shield in cable clamp. Screwing-on cable clamp. Assembling remaining parts acc. to upper plan. Tightening pull-relief of cable by screw-wrench (SW16 und 17). 	<p><i>Cable mounting 2</i> View X</p> 
Cable connection: without cable shield	
<ol style="list-style-type: none"> Stringing parts on cable acc. to plan given above. Stripping cable sheath 20mm Cutting uncovered shield 20mm Stripping wire 5mm. Soldering wire to the insert. Positioning shield in cable clamp. Screwing-on cable clamp. Assembling remaining parts acc. to upper plan. Tightening pull-relief of cable by screw-wrench (SW16 und 17). 	

5.4 Connecting Diagram

Connection diagram acc. to chapter 5.3.2.1 no.1, 3 and 4:

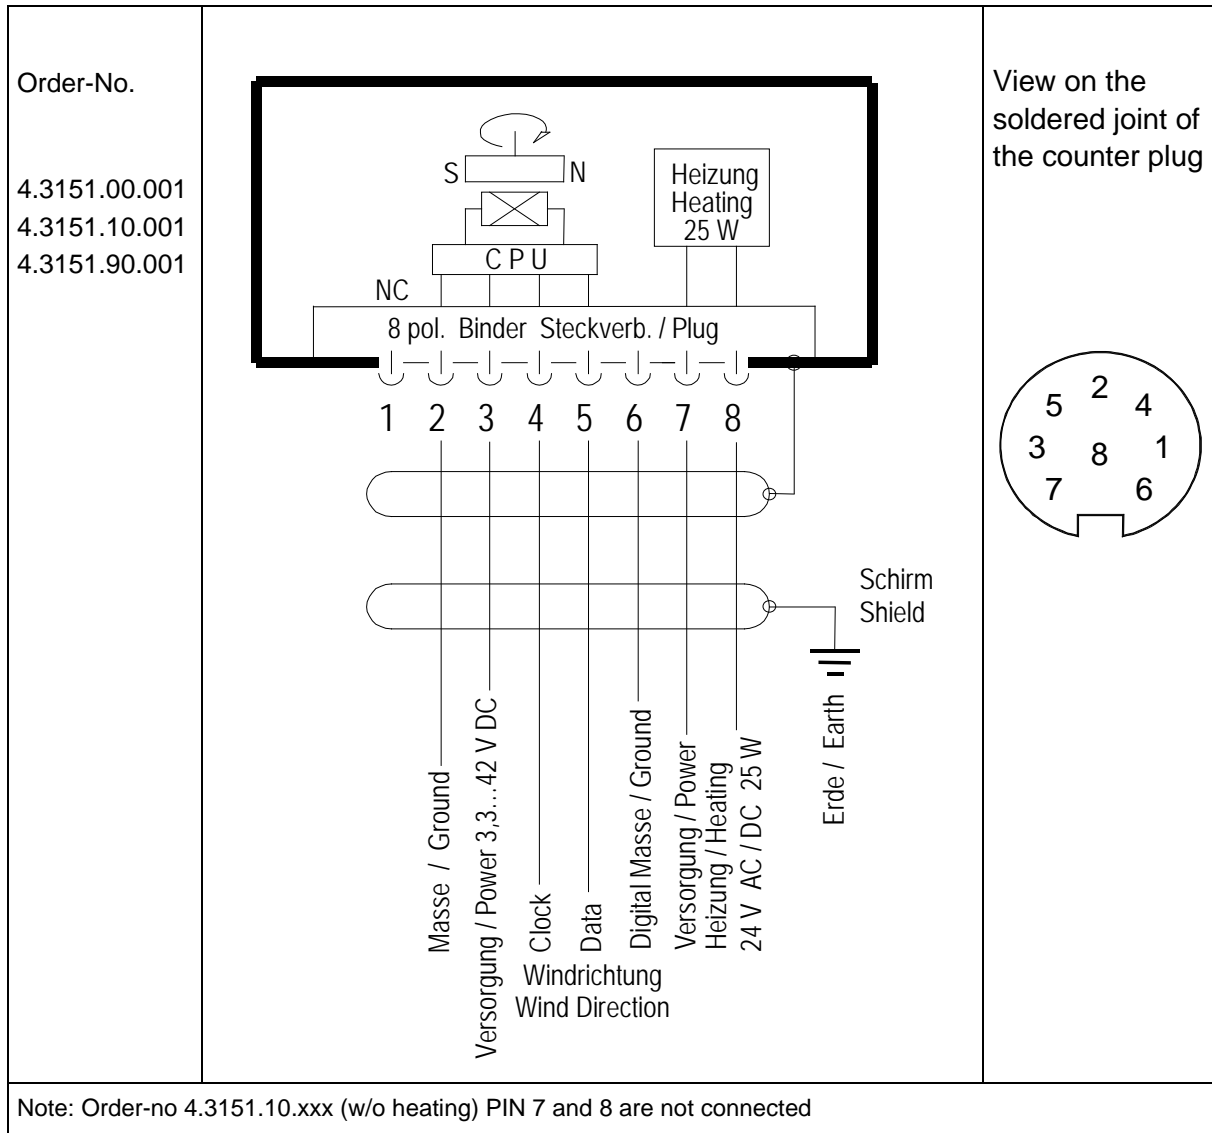

Contact	Name	Function
1	-----	Not connected
2	GND	Supply ground
3	+Vcc	Supply 3.3 ... 42V DC
4	Clock	Serial-synchron Clock
5	Data	Serial-synchron Data
6	DIG-GND	Digital ground
7	HZG	Heating supply:
8		Voltage: 24V AC/DC Power: 25W

6 Serial-synchronous Interface

The serial-synchronous interface has a unidirectional two-leads-interface. When no data query is carried out the wind transmitter is in standby-mode. On the first received clock pulse the 10bit measuring value of the wind direction plus status bit is accepted in a shift register, and the LSB is connected to the data output. In parallel, the new measuring process is starting.

After 16 clock pulses the WD-code plus status bit is output (see figure 2). The identification as 10bit word is carried out through the characteristic bit, and the control of transmission errors is done by the parity bit.

The simultaneous data output and the starting of a measuring process mean that always the last measuring value is output (see figure 1).

The parity is formed over all 16bit. Parity bit = 1 when the sum of bit0 – bit15 is even.

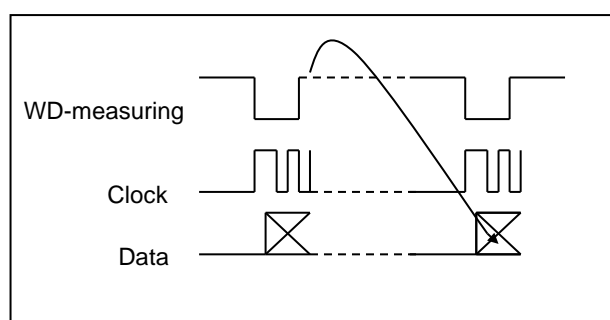


Figure 1: Wind-Direction Transmission

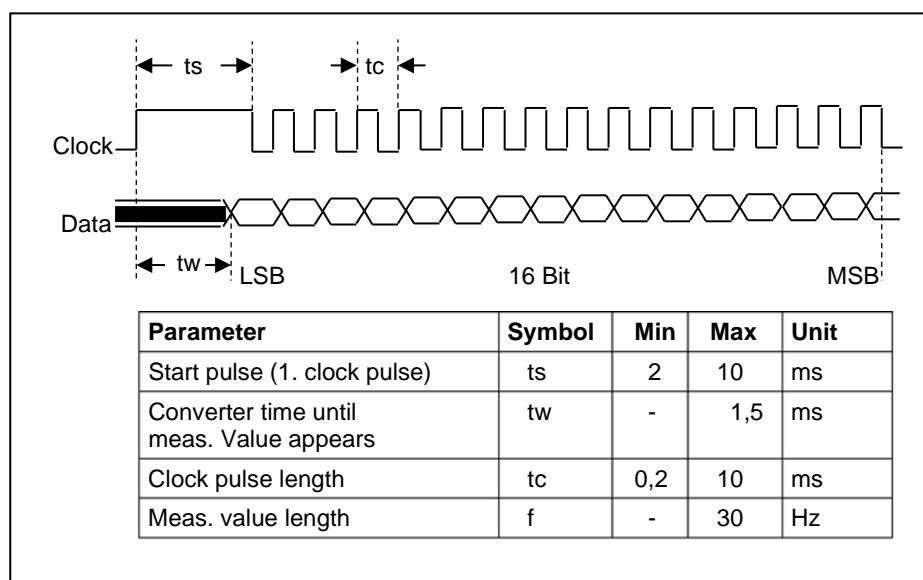


Figure 2: Interface specification "serial- synchron."

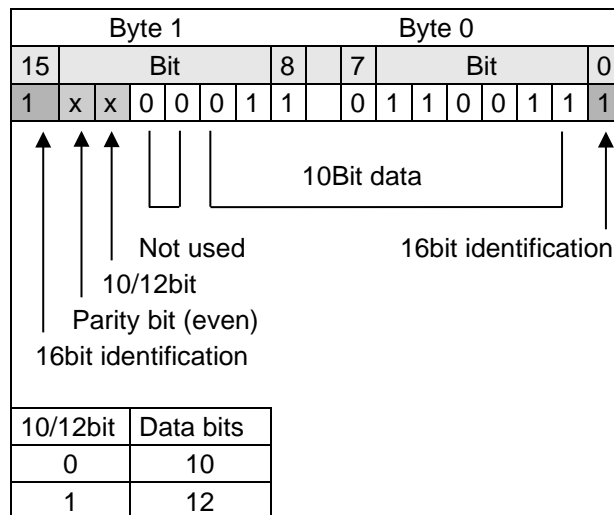



Figure 3: Protocol

Figure 4: 10bit Wind Direction Gray Code

The wind direction (0 ... 360°) is transformed into a 10 bit Gray-code, and then output. The resolution is 0,35°. 1024 increments per revolution.

Increment 0 = 0° = North and corresponds to the sector 0 ... 0,35°

Increment 1023 = 359.6° corresponds to the sector 359.6 ... 0°

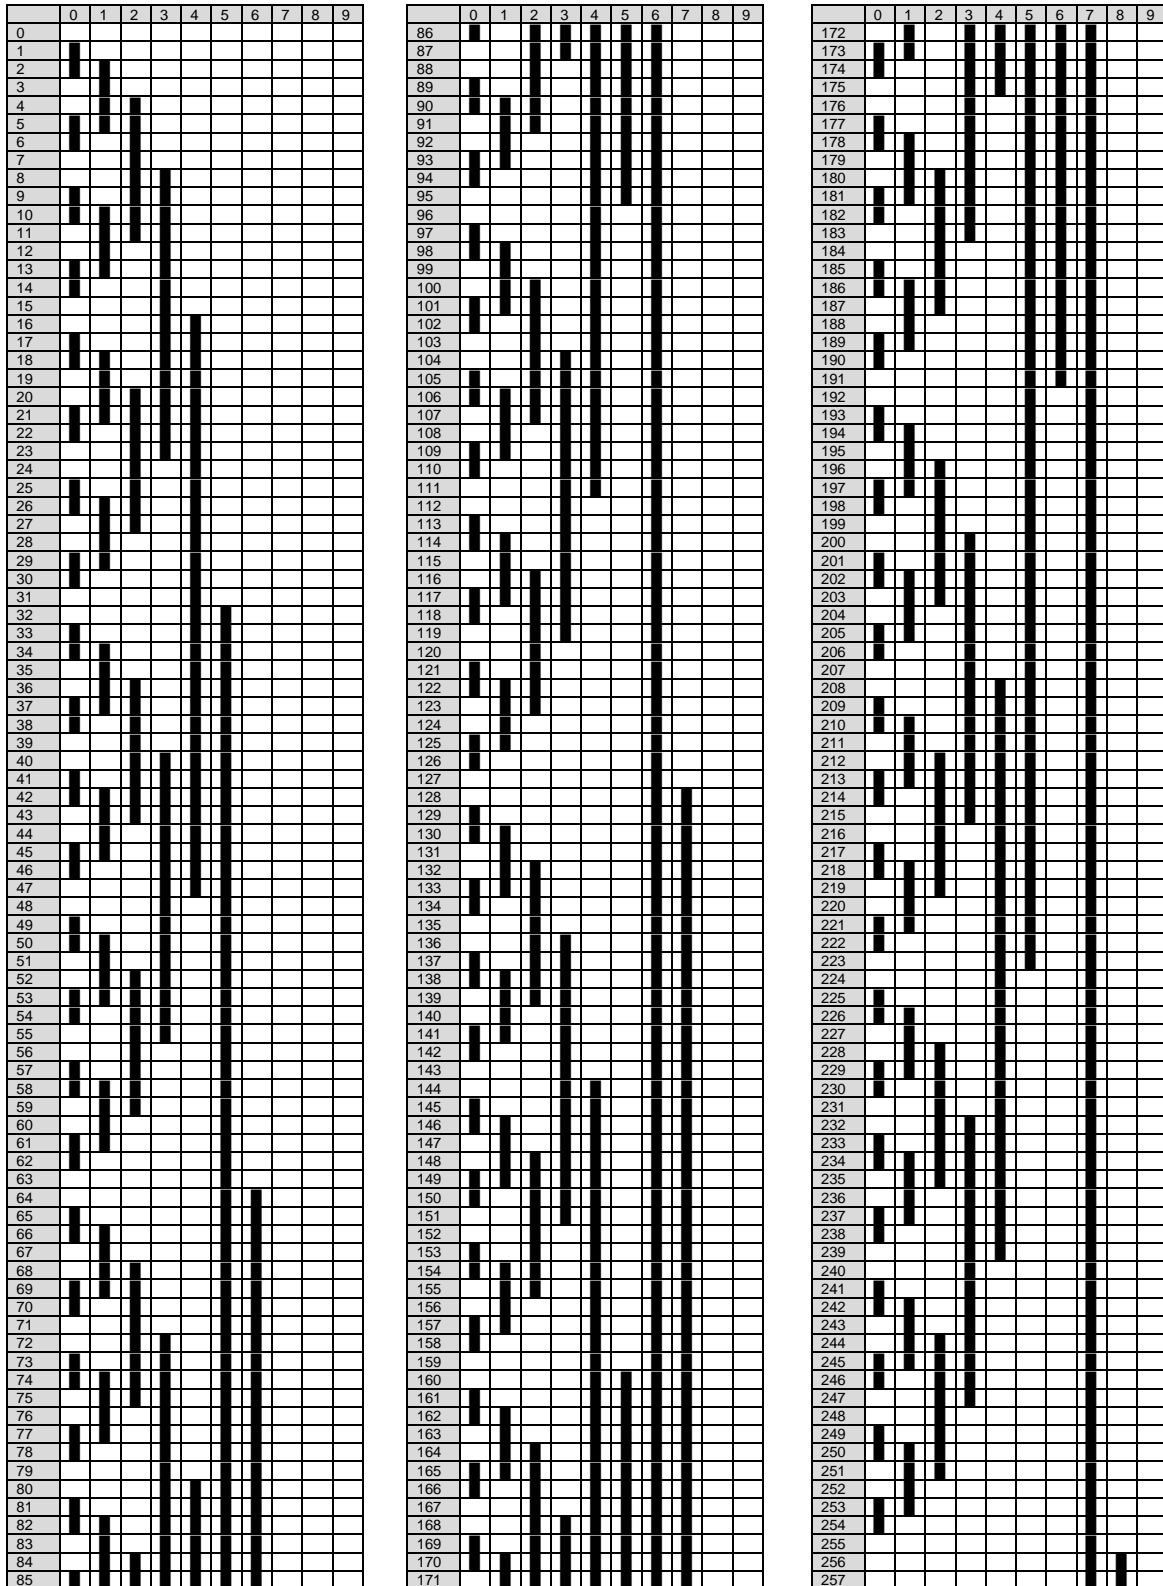

	0	1	2	3	4	5	6	7	8	9
258										
259										
260										
261										
262										
263										
264										
265										
266										
267										
268										
269										
270										
271										
272										
273										
274										
275										
276										
277										
278										
279										
280										
281										
282										
283										
284										
285										
286										
287										
288										
289										
290										
291										
292										
293										
294										
295										
296										
297										
298										
299										
300										
301										
302										
303										
304										
305										
306										
307										
308										
309										
310										
311										
312										
313										
314										
315										
316										
317										
318										
319										
320										
321										
322										
323										
324										
325										
326										
327										
328										
329										
330										
331										
332										
333										
334										
335										
336										
337										
338										
339										
340										
341										
342										
343										




	0	1	2	3	4	5	6	7	8	9
344										
345										
346										
347										
348										
349										
350										
351										
352										
353										
354										
355										
356										
357										
358										
359										
360										
361										
362										
363										
364										
365										
366										
367										
368										
369										
370										
371										
372										
373										
374										
375										
376										
377										
378										
379										
380										
381										
382										
383										
384										
385										
386										
387										
388										
389										
390										
391										
392										
393										
394										
395										
396										
397										
398										
399										
400										
401										
402										
403										
404										
405										
406										
407										
408										
409										
410										
411										
412										
413										
414										
415										
416										
417										
418										
419										
420										
421										
422										
423										
424										
425										
426										
427										
428										
429										

	0	1	2	3	4	5	6	7	8	9
430										
431										
432										
433										
434										
435										
436										
437										
438										
439										
440										
441										
442										
443										
444										
445										
446										
447										
448										
449										
450										
451										
452										
453										
454										
455										
456										
457										
458										
459										
460										
461										
462										
463										
464										
465										
466										
467										
468										
469										
470										
471										
472										
473										
474										
475										
476										
477										
478										
479										
480										
481										
482										

	0	1	2	3	4	5	6	7	8	9
516										
517										
518										
519										
520										
521										
522										
523										
524										
525										
526										
527										
528										
529										
530										
531										
532										
533										
534										
535										
536										
537										
538										
539										
540										
541										
542										
543										
544										
545										
546										
547										
548										
549										
550										
551										
552										
553										
554										
555										
556										
557										
558										
559										
560										
561										
562										
563										
564										
565										
566										
567										
568										
569										
570										
571										
572										
573										
574										
575										
576										
577										
578										
579										
580										
581										
582										
583										
584										
585										
586										
587										
588										
589										
590										
591										
592										
593										
594										
595										
596										
597										
598										
599										
600										
601										

	0	1	2	3	4	5	6	7	8	9
602										
603										
604										
605										
606										
607										
608										
609										
610										
611										
612										
613										
614										
615										
616										
617										
618										
619										
620										
621										
622										
623										
624										
625										
626										
627										
628										
629										
630										
631										
632										
633										
634										
635										
636										
637										
638										
639										
640										
641										
642										
643										
644										
645										
646										
647										
648										
649										
650										
651										
652										
653										
654										
655										
656										
657										
658										
659										
660										
661										
662										
663										
664										
665										
666										
667										
668										
669										
670										
671										
672										
673										
674										
675										
676										
677										
678										
679										
680										
681										
682										
683										
684										
685										
686										
687										

	0	1	2	3	4	5	6	7	8	9
688										
689										
690										
691										
692										
693										
694										
695										
696										
697										
698										
699										
700										
701										
702										
703										
704										
705										
706										
707										
708										
709										
710										
711										
712										
713										
714										
715										
716										
717										
718										
719										
720										
721										
722										
723										
724										
725										
726										
727										
728										
729										
730										
731										
732										
733										
734										
735										
736										
737										
738										
739										
740										

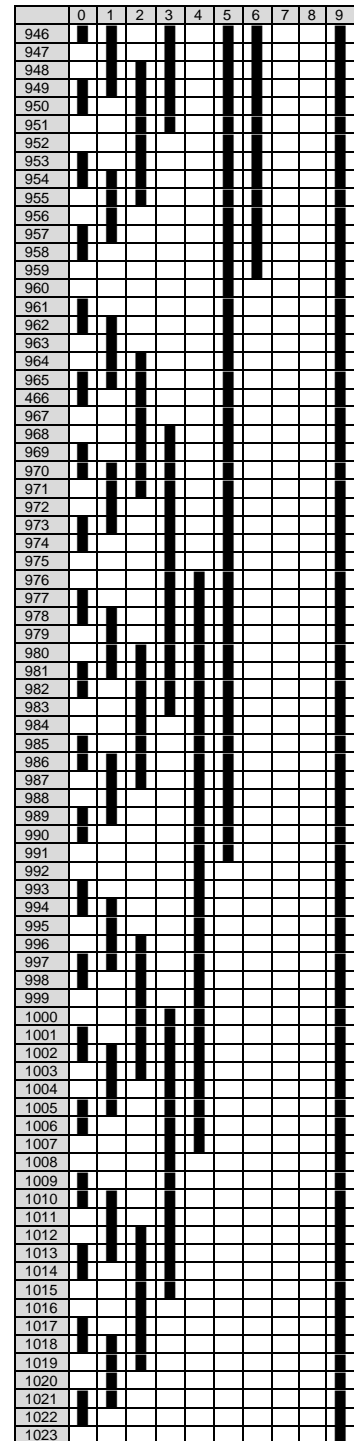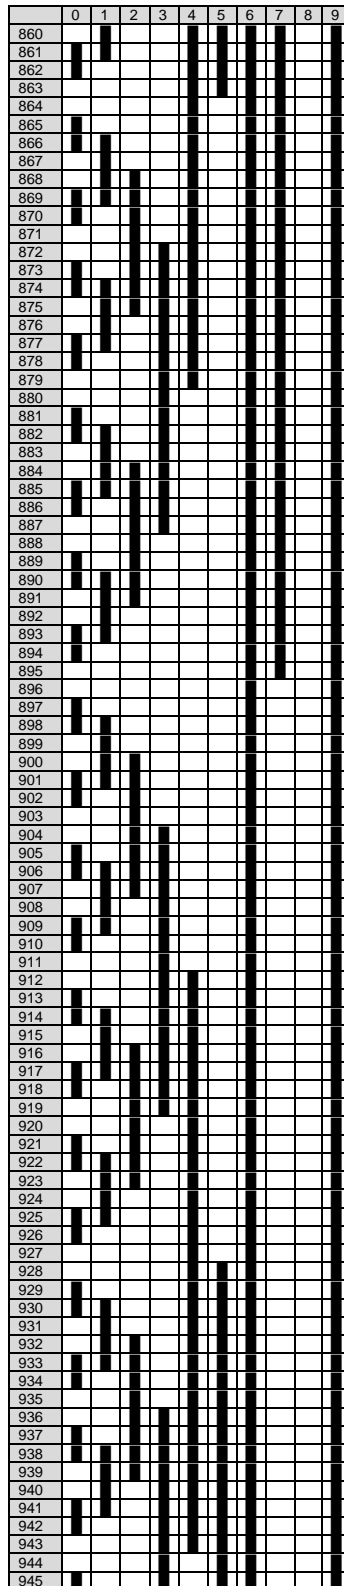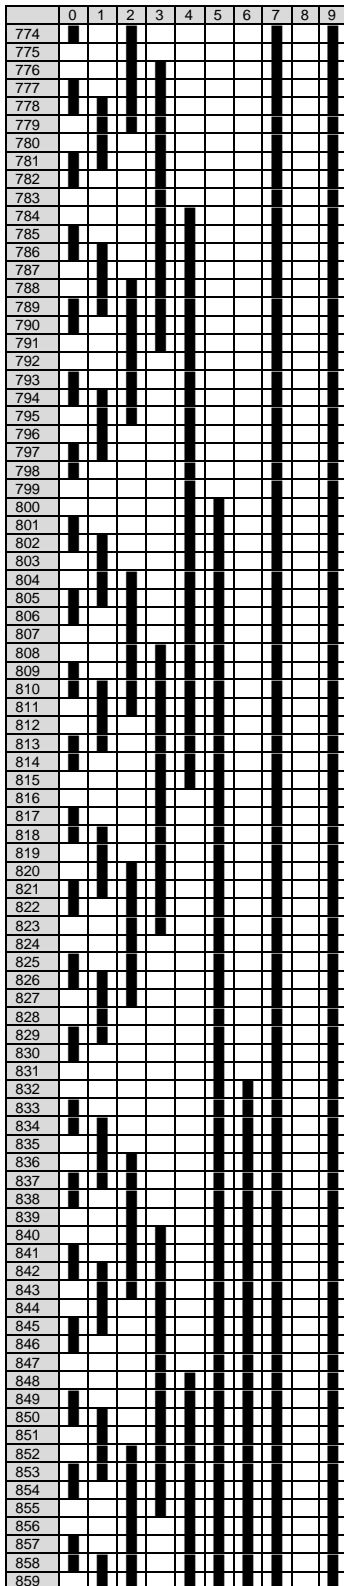

7 Placing into Operation

Connect the wind transmitter to a power supply unit and a serial-synchronous interface, as described in the connection diagram. After connection of the supply voltage, and after a delay of $t(v) = 5\text{sec}$, while the interface is inactive, the wind direction data can be recalled via the interface.

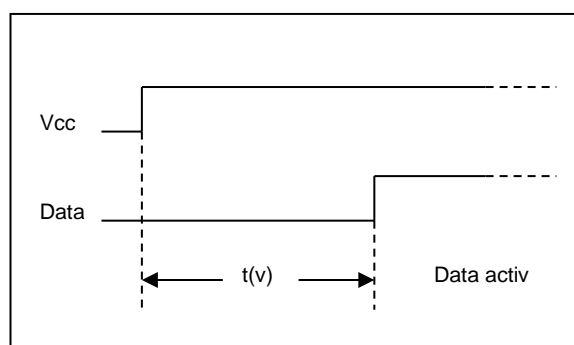


Figure5: Data- out activation

8 Maintenance

If properly installed, the instrument requires no maintenance.

The ball bearings of the wind direction transmitter are prone to wear, and with a prolonged use they might change the dynamic behavior of the wind vane. Therefore, we recommend to check the instrument in regular intervals.

Cleaning

For the cleaning of the device should use a damp cloth without chemical cleaning agents are used.

Remark:

For transport of instrument please use original packing.


We recommend the threads of the plugs with a suitable corrosion inhibitor to protect against corrosion.

9 Technical Data

Characteristic	Description
Measuring range	0 ... 360°
Measuring Accuracy	±0.75°
Resolution of measuring value	0.35°
Operating speed	Up to 75m/s.
Survival speed	85m/s up to 0.5h.
Permissible ambient conditions for operation	-50 ... +80°C All occurring situations of rel. humidity incl. dew moistening.
Wind load (Wind power)	64,5N
Output	16bit serial synchronous (see figure 2).
Output-Code	Thies Gray Code 10bit (see figure 4).
Electrical output	Data (out), Clock I (Data (out) max. = 10mA Clock (in) see table 2 Power- On delay 5sec
Data-Out (Amplitude)	V _{cc} (max = 15V)
Clock-IN (Amplitude)	3.3V ... V _{cc}
Starting threshold	< 0.5m/s at 10° amplitude (acc. to ASTM D 5366-96). < 0.2m/s at 90° amplitude (acc. to VDI 3786 Part 2).
Delay distance	< 1.8m (acc. to ASTM D 5366-96).
Damping ratio	D > 0.3 (acc. to ASTM D 5366-96).
Quality factor	K > 1 $K = \frac{4 \cdot D \cdot \omega_0}{\rho \cdot u}$ D damping ratio, ω ₀ angular frequency of undamped oscillation, ρ air density u wind speed.
Heating	Surface temperature of housing neck >0°C at 20m/s up to -10°C air temperature, at 10m/s up to -20°C using the Thies icing standard 012002 on the housing neck heating regulated with temperature sensor.
Electrical supply (V _{cc})	V _{cc} 3.3 ... 42V DC I _{cc} = 0.88 mA in standby I _{cc} ≈ 1.2 mA 10Hz query rate
Electrical supply for heating	Current: 24V AC/DC +- 20%, 45...65 Hz (galvanic isolation from housing) Idling voltage: max. 32V AC and max. 48V DC Power: 25W

Characteristic	Description
Connection	8-pole plug connection for shielded cable in the shaft (see connecting diagram).
Mounting	Mounting on mast Outer diameter $\leq 34\text{mm}$ Inner diameter $\geq 20\text{mm}$ Remark: mounting on other mast is possible with separate adapter (option).
Dimensions	See dimensional drawing.
Weight	Approx. 0.7kg
Protection	IP 55 (DIN 40050)
4.3151.x0.001 Material: Housing, vane Mast-adaptor	Aluminium (AlMgSi1) Aluminium (AlMgSi1)
4.3151.90.001 Material: Housing, vane Mast-adaptor	Aluminium (AlMgSi1) Stainless steel (V4A)

10 Dimensional drawing

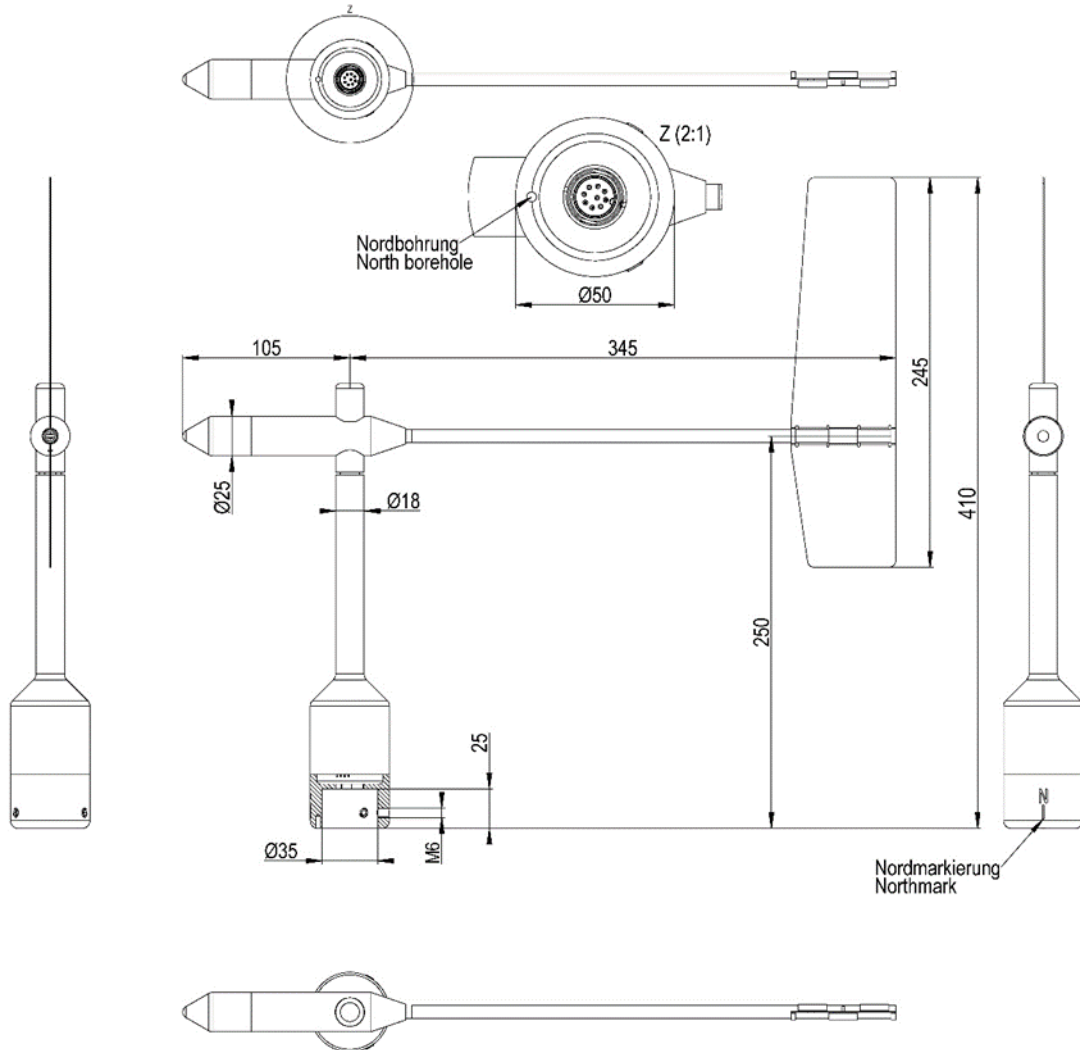

11 Accessories

<p>Traverse 0,6m</p> <p>For mounting the wind speed and wind direction transmitter jointly onto a mast</p>	4.3174.00.000	<p>Horizontal sensor distance: 0.6m</p> <p>Vertical sensor distance: 0.2m</p> <p>Mast receptacle: 48 ... 50mm</p> <p>Material: Aluminum, anodised</p> <p>Dimensions: tube Ø 34 x 4mm, 668 mm long, 756mm high</p>
<p>Hanger –FIRST CLASS- 1m</p> <p>For the lateral mounting of a wind speed and wind direction transmitter onto a mast tube.</p>	4.3184.01.000	<p>Sensor distance to mast: 1m</p> <p>Mast clamp: 40 ... 80mm</p> <p>Tube diameter: 34mm</p> <p>Material: Aluminum</p>
<p>Lightning rod</p> <p>For mounting the a/m traverse or hanger.</p>	4.3100.98.000	<p>Dimension: Ø 12mm, 500mm long, 1050mm high</p> <p>Material: Aluminum</p>
<p>Adaptor</p> <p>For isolated mounting of each wind transmitter and wind direction transmitter on the traverse (4.3174.0.000).</p>	509077	<p>Dimension: A:Ø 34mm, outside 25mm high B:Ø 35mm, inside 45mm high</p> <p>Material: POM</p>
<p>Adapter „north ring“</p> <p>The „north ring“ serves as alignment aid, and for the easy change/replacement without re-adjustment of the northern direction of wind direction transmitters.</p>	509619	<p>Material: Aluminium, anodized</p> <p>Dimension: A: Ø 50mm, outside 75mm high B: Ø 35mm</p>

Please contact us for other accessories such as cables, power supply units, masts, as well as for additional mast- or system-constructions.

Example: Wind transmitter with traverse and lightning rod.



12 EC-Declaration of Conformity

Document-No.: 001585

Month: 08 Year: 21

Manufacturer: **A D O L F T H I E S G m b H & C o. K G**

Hauptstr. 76
D-37083 Göttingen
Tel.: (0551) 79001-0
Fax: (0551) 79001-65
email: Info@ThiesClima.com

This declaration of conformity is issued under the sole responsibility of the manufacturer

Description of Product: **Wind Direction Transmitter FIRST CLASS**

Article No.	4.3151.00.000	4.3151.00.001	4.3151.00.012	4.3151.00.020	4.3151.00.110
	4.3151.00.140	4.3151.00.141	4.3151.00.161	4.3151.00.173	4.3151.00.210
	4.3151.00.212	4.3151.00.312	4.3151.10.312	4.3151.00.400	4.3151.00.401
	4.3151.00.901	4.3151.01.400	4.3151.01.401	4.3151.10.000	4.3151.10.001
	4.3151.10.012	4.3151.10.020	4.3151.10.110	4.3151.10.140	4.3151.10.141
	4.3151.10.161	4.3151.10.173	4.3151.10.210	4.3151.10.212	4.3151.10.400
	4.3151.10.401	4.3151.11.400	4.3151.11.401	4.3151.90.000	4.3151.90.001
	4.3151.90.141	4.3151.90.400			

specified technical data in the document: **021741/08/21; 021743/08/21; 021746/03/20; 021750/08/21; 021753/10/20; 021755/05/20; 021779/05/20; 021860/06/21; 021886/08/21; 021905/03/21; 021780/08/21**

The indicated products correspond to the essential requirement of the following European Directives and Regulations:

2014/30/EU	DIRECTIVE 2014/30/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 26 February 2014 on the harmonisation of the laws of the Member States relating to electromagnetic compatibility
2014/35/EU	DIRECTIVE 2014/35/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 26 February 2014 on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits
552/2004/EC	Regulation (EC) No 552/2004 of the European Parliament and the Council of 10 March 2004 on the interoperability of the European Air Traffic Management network (the interoperability Regulation)
2011/65/EU	DIRECTIVE 2011/65/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment
2012/19/EU	DIRECTIVE 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE)


The indicated products comply with the regulations of the directives. This is proved by the compliance with the following standards:

EN 61000-6-2	Electromagnetic compatibility Immunity for industrial environment
EN 61000-6-3	Electromagnetic compatibility Emission standard for residential, commercial and light industrial environments
EN 61010-1	Safety requirements for electrical equipment for measurement, control, and laboratory use. Part 1: General requirements
EN 50581	Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

Place: Göttingen
Signed for and on behalf of:

Date: 03.08.2021

 Legally binding signature:

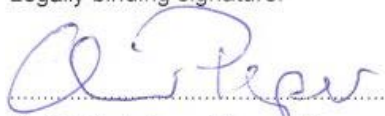

Dr. Christoph Peper, General Manager

issuer:



ppa. Jörg Petereit, Development Manager

This declaration certifies the compliance with the mentioned directives, however does not include any warranty of characteristics. Please pay attention to the security advises of the provided instructions for use.

**Please contact us for your system requirements.
We advise you gladly.**

ADOLF THIES GMBH & CO. KG

Meteorology and environmental metrology
Hauptstraße 76 · 37083 Göttingen · Germany
Phone +49 551 79001-0 · Fax +49 551 79001-65
info@thiesclima.com



www.thiesclima.com