



2 Installation


2.1 Pump Mounting

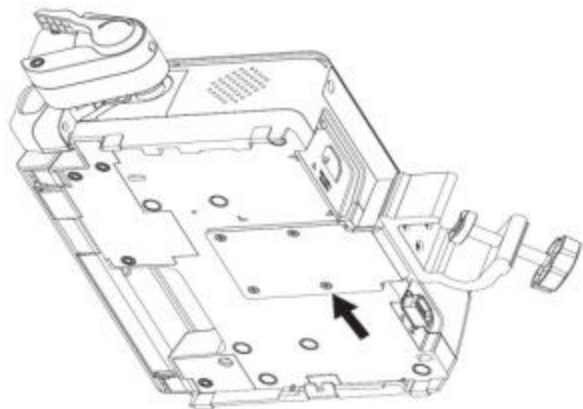

1. Align the holes of the mounting Bracket with the screw holes on the bottom of the pump and tighten the screws.

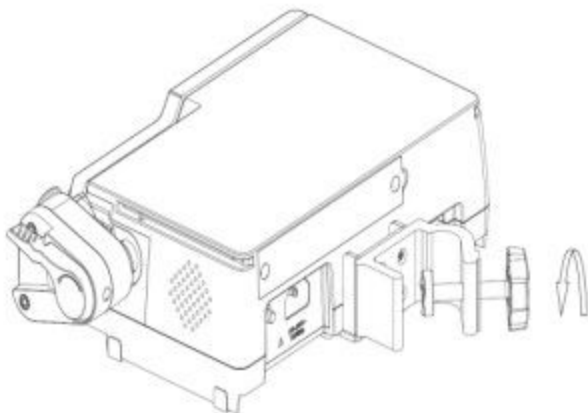

2. Unscrew the clamp knob to fit it to the pole by rotating anticlockwise.

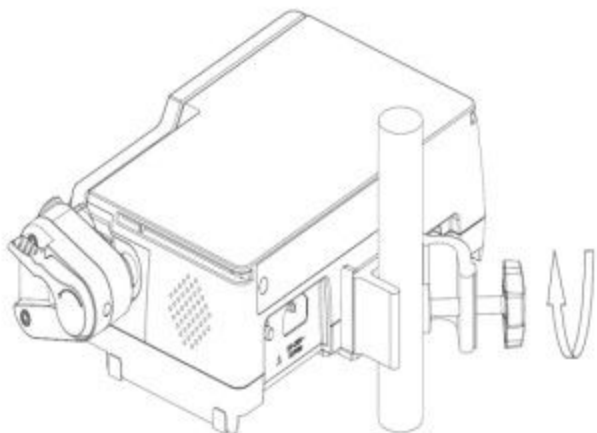

3. Clockwise screw on the clamp knob and ensure that the pump is securely fastened to the pole.