

ZOLL


User Manual

8 Ports 100M PoE Switch with 2 GE Uplink
BS5108P

Packing list

- PoE Switch x 1
- Manual x 1
- Power Cable x 1

■ Product description

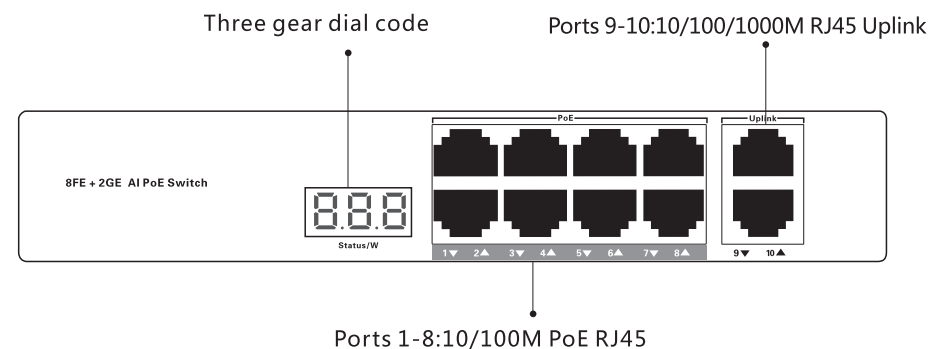

Indicator light	Status	Description
1~10	ON	Port is connected
	Flashing	Port is transmitting data
	OFF	The port is not connected, or the connection is abnormal

Interface/ button	Description
Downlink Port	1-8: 100M PoE RJ45 ports,support Auto-MDI/MDIX functon.
Uplink Port	9-10: 1000M RJ45 Uplink ports
Digital tube display power	Display the total power used by the current switch equipment load equipment

■ Specifications

Name	8 Ports 100M PoE Switch with 2 GE Uplink	
Model	BS5108P	
Interface	PoE Ports	1-8: 10/100Mbps RJ45 Ports
	Uplink Ports	9-10: 10/100/1000Mbps RJ45 Ports
PoE Power Supply	MAX PoE output	30W
	Total power supply	96W
	Priority Function	Support
LED	Power , Link , Act	
Processing Types	Store-and-Forward	
	Half-duplex back pressure and IEEE802.3x full-drplex flow control	
Performance Specification	Bandwidth	5.6Gbps
	Packet Forwarding Rate	4.166Mpps
	MAC Address	4k
Network Standards	IEEE802.3i 10BASE-T IEEE802.3u 100BASE-TX IEEE802.3ab 1000BASE-TX IEEE802.3x Flow Control IEEE802.3af Power over Ethernet IEEE802.3at Power over Ethernet IEEE802.3az EEE	
Power Input	AC 100-240V 50/60Hz	
Size	200mm(L)*118mm(w)*44mm(H)	
Cables	UTP category 5 or above cable	
Environmental Specification	Working Temperature: 0°C-45°C, Humidity: 10%-90%non-condensing	
	Storage Temperature: 20°C-70°C, Humidity: 5%-95%non-condensing	

■ Installation Notes

- To install the switch,please follow the steps:
- (1) This PoE switch is only used indoor please place it in ventilated and dry space.
 - (2) Please avoid placing the switch on an unsteady desk.
 - (3) Please insert the power adapter carefully to the power Socket of the switch,and then connect it properly to a power source through the cable of the switch.
 - (4) Ensure adequate ventilation space(≥10cm)around the switch for dissipating heat and air.
 - (5) Please avoid any heavy thing placed on the switch.
 - (6) Please use the attached power adapter.

■ Connecting the Unit

- (1) Please respectively connect two ends of the cable to the switch port and computer or other network devices.
- (2) Please separately link the ends of the included power supply configuration to power jack and socket.
- (3) The Power indicator will light all the time

■ Warranty Card

Model NO.	
Serial NO	
Date of Purchase	
RMA Number	
Retum Reason	
Customer Name	
Customer Address	
Email	

Note: Please refer to the User Manual for Detail Warranty policy.