

6 MAINTENANCE



Before maintenance, make sure that the power to the compressor is completely cut off and pressurized air is discharged.

The maintenance of your compressor must be done by the authorized service. Maintenance performed by unauthorized and untrained people will violate warranty conditions and may result in damage to your compressor and personal injury. Your compressor may need more frequent maintenance due to high ambient temperatures. Please contact DALGAKIRAN MAKİNE customer service for your compressor's maintenance.

6.1 Maintenance Periods

Periodic Maintenance Schedule for 8 Bar

PERIODICAL MAINTENANCE	Maintenance Period				
	Controller Notification	500 hrs. / 3 months	2500 hours/1year	10000 hours/4 years	20000 hours/8 years
<i>Drain the Condensation Water</i>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<i>Check/Clean Air Filter</i>		<input checked="" type="checkbox"/>			
<i>Check/Clean Cabin Filter</i>		<input checked="" type="checkbox"/>			
<i>Clean Compressor and Check Air Cooler</i>		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<i>Secure Electrical Connections</i>			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<i>Replace Air Filter</i>			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<i>Replace Cabin Filter</i>			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<i>Replace the Silencer on the Selonoid Valve</i>			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<i>Check All Pipes and Mechanical Connections</i>			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<i>Replace Check Valve at Compressed Air Outlet</i>			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<i>Replace V-Belts</i>			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<i>Replace Selonoid Valve</i>			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<i>Clean the Suction Fan</i>			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<i>Clean Cooling Fin</i>				<input checked="" type="checkbox"/>	
<i>Lubricate Scroll Unit Bearings</i>				<input checked="" type="checkbox"/>	
<i>Check Other Bearings</i>				<input checked="" type="checkbox"/>	
<i>Brush Replacement Only For DS 7.5-S, DS 15-D, DS 22.5-T, DS 30-Q</i>				<input checked="" type="checkbox"/>	
<i>Replace Scroll Sealing Kit</i>				<input checked="" type="checkbox"/>	
<i>Replace Scroll Unit</i>					<input checked="" type="checkbox"/>
<i>Check Electric Motor and Replace Bearing</i>					<input checked="" type="checkbox"/>