




9.2 Print Type




9.2.1 DICOM Print

Button	Name	Description
	Print All Sheets	Transfers all images from the Print window to the DICOM printer. You can stop DICOM printing while printing out images.
	Print Current Sheet	Transfers the image of the currently selected sheet to the DICOM printer.
	Print Current Page	Transfers the image of current page to the DICOM printer.



- Activated when the current DICOM printer is selected.
- When the images are transferred to the DICOM printer normally, the mark **Printed** will be displayed on the right top corner of the image.


9.2.2 Paper Print

Button	Name	Description
	Print All Sheets	Prints all images of all sheets in the print window to paper.
	Print Current Sheet	Prints the image of the currently selected sheet on paper.
	Print Current Page	Prints the image of the currently selected page on paper



- Activated when the current paper printer is selected.

9.2.3 Echo

Button	Name	Description
	Echo	Checks the activation status of DICOM Printer.