

UĞUR COMMERCIAL TYPE VERTICAL FROZEN FOOD STORAGE CABINET

OPERATING MANUAL

EN

 **UĞUR**



This manual has been prepared from the models listed below. May appear RX at the end of the model name on the labels of the model you have. The RX doesn't relate using the device. This title can be change in reference to orders.

EN

THIS MANUAL COVERS THE FOLLOWING MODELS

UDD 45 DTK	UDD 440 DTKL NF
UDD 45 DTKL	UDD 440 DTKLE NF
UDD 65 DTKL	UDD 690 DTKLE NF
UDD 370 DTK	UDD 690 DTKLE BK NF
UDD 370 DTKL	UDD 690 DTKL BK NF
UDD 370 D2KL	UDD 740 D2KL
UDD 370 DTK BK	UDD 740 D4KL
UDD 370 DTK BK GST	UDS 374 D2KL
UDD 370 DTK GST	UDD 1600 D2KL NF
UDD 440 DTKL	UDD 1600 D3KL NF
UDD 440 DTKLB	UDD 1600 D3KL NF

INFORMATION

Dear Customer,

In order to use more efficiently your product, which was manufactured and quality controlled in Ugur Sogutma A.Ş. plants with great care, we kindly request you to read this manual carefully and completely before starting using your product, to keep it for further reference and to use your product according to the terms stated herein.

If you fail to use your product according to the rules and instructions contained in this manual and/or in case of any usage error, our Company shall not be anyway responsible from the breaking down of your product.

You can find the updated version of the operating manual from our web site www.ugur.com.

UGUR

Dear Customer,

Points to consider within this manual are indicated under the headings WARNING, CAUTION, NOTE and SUGGESTION

These headings are defined according to the degree of importance and we kindly request you to read each of them carefully.

The information stated under headings WARNING, CAUTION, NOTE and SUGGESTION in this operating manual applies for all stages during the period of use of your product, including transportation and installation.

WARNING!

Contains information for preventing serious damages, which may lead the product out of use, to injury, loss of life and property while the product is in use

CAUTION!

Contains information for preventing the errors, which may decrease the efficiency of your product or failures while the product is in use.

NOTE

Contains explanatory information while the product is in use.

SUGGESTION

Contains information that may be useful while the product is in use.

NOTE

In case of any failure please contact to the nearest Authorize Service of Our Customer Care Centre for information.

It is at the discretion of the consumer to take action related to the food inside your device in case of any failure. Our company is not responsible from the deterioration of your foodstuff due to any failure or usage error.


TABLE OF CONTENTS

- A - Things that must be done before using your product and security warnings.
- B - General appearance and technical specifications of your product
- C - Installation of your product.
- D - Using your product
- E - Cleaning, maintenance and transportation of your product
- F - Recycling information
- G - Things that must be done before calling Authorized Service


A-THINGS THAT MUST BE DONE BEFORE USING YOUR PRODUCT AND SECURITY WARNINGS

WARNING!

- Do not place your product to a place exposed to direct sunlight or influence area of the heat sources such as stove, radiator core, oven, cooker, radiant and infrared. Otherwise, this may cause performance decrease, damage of your product or make it become dysfunctional (Picture 1).
- Your product is set for operating at mains power of 220-240V/50-60 Hz, 110-127/60 Hz Using your product with a different voltage may cause it become dysfunctional and fire (Picture 2).
- Our company is not responsible for the failures and material damages that may occur in case of using without grounding.
- Electrical installation must conform to national regulations.
- There must absolutely be a residual current relay and a fuse in your electrical installation for preventing the risks of electrical shock and fire.
- Place the device in a damp-free place with unobstructed air circulation.
- You must clean inside your product before the first use.
- After placing your device to its place, wait for one (1) hour without moving it before starting using.
- If your device is installed under very cold weather conditions, then the waiting period must be at least two (2) hours before starting to operate it.
- In case of prolonged blackouts, do not open the door of your products for preventing heat loss.
- If you do not use your device or leave it empty for a short time, do not unplug it for saving energy. Otherwise, more energy will be consumed for re-cooling your product.
- In products, the doors of which are left opened or opened and closed continuously, frost deposit will increase and no cooling operation will be carried out. Thus open the doors of your product only when needed. Make sure that the doors are closed if not required.
- Unplug your product in case of sudden blackouts. For starting again, plug in your product. 20 minutes after the electricity is supplied. High voltage occurring at the moment of electricity supply may cause damage of your product and fire.
- Do not allow wild animals and pets to enter into your product or walk around it. It may damage your product or cause death and injury of the animals. Furthermore, wild animals and pets may cause fire by giving harm to the electrical installation.
- Your device does not have any sterilizing effect on the microorganisms. Therefore it is necessary that the foodstuff you place into your product must conform to the hygiene standards and packaged. Otherwise, microorganisms reproducing in foodstuff may pose a threat for your health.

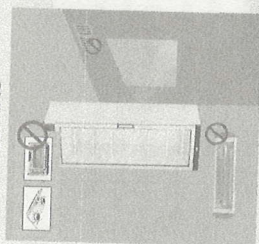

PICTURE 1

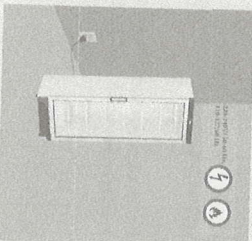

PICTURE 2

A-THINGS THAT MUST BE DONE BEFORE USING YOUR PRODUCT AND SECURITY WARNINGS

WARNING!

- When you place packages, which are not packed, properly packed and cause leakages to your device, liquid leaks from the foodstuff may cause corrosion on the metal parts of your storage cabinet, gas leakage at the pipes, yellowing on the plastic parts, cracks and disappearance of the hygiene conditions, odour formation and reproduction of the microorganisms that may pose a threat for your health.
- Place the foodstuff to be placed into your device after checking their expiry dates.
- Do not use your foodstuff in your product until their expiry dates. Defrost and use foodstuff with close expiry dates. Otherwise expired food may cause poisoning.
- Never place hot foodstuff into your device for cooling or freezing purposes.
- If you use sharp, pointed and metal objects, you may damage internal wall of your storage cabinet. Furthermore, this situation may lead to gas leakage.
- Do not ever pour water or any other liquid for defrosting in your device; never clean with steam cleaning devices. It may cause damage on your device or electric shock.
- Do not ever use a thermal source (electric heater, heater etc.) for accelerating defrosting in your device. These heaters may damage plastic parts of your device.
- The product you've purchased is designed and manufactured for storing frozen food only. Please do not use for other purposes. Our company shall not be responsible from the damage on the products that are used for purposes other than these.
- Your device is designed for using at indoor places. Do not use your product at outdoor places.
- Do not place materials that must not be cooled down or frozen into your device.
- Device installation, placement, maintenance and cleaning must be done as stated in the manual. Do not apply anything contrary to the manual. In case of any damage that may happen in your product as the result of such use, warranty conditions will be invalid.
- Care must be taken for the products with glass doors as hitting them with a sharp, pointed object or contacting them with a very hot substance may cause them broken.
- Place your device onto a flat surface with no slope in order to prevent sliding or tilting of your device.
- Operate your device only in usage position.
- Do not expose your device to direct sunlight.
- Carry and store your device at normal using position only in order to protect it from damages. Actions in contrary may cause loss of the warranty rights.
- For preventing frost depositing in your product and high sweating on its glass, make sure that the discharge plug is closed.

NOTE

It is at the discretion of the consumer entirely to take action related to the food inside your product in case of any failure. Our company is not responsible from the deterioration of your foodstuff due to any failure or usage error.

The product you have purchased has been designed for storing packed frozen food used for commercial purposes only. Our company shall not be held responsible for any damage as the result of use for another purpose.

Check your product if there are any failures or not immediately after receiving the product you've purchased. If there is any damage, contact to your seller within 24 hours.

In order to use your product efficiently and safely, please read this manual entirely before starting using your product and keep it as a source of reference. You can find updated version of the operating manual on our web site www.ugur.com or from our authorized services.

The pictures shown in this manual are representative only and may vary depending on the model. Since the specifications stated in this manual include all options, some of them may not be present at your product.

A-SECURITY WARNINGS

WARNING!

- The products mentioned in this manual are designed and manufactured under control according to national and international security norms.
- Following rules must be followed for a safe and secure use.
- Check that your outlet is suitable for the operation of your product. Always use your product with grounded socket. Make sure that electrical installation of your building is convenient. Do not use displaced and loose outlets.
- Do not ever use your product with extension cord or power strip.
- Always follow the instructions in this manual while replacing the bulb. The power of the bulb to be replaced is indicated on the product declaration name label, on the label just under the lamp and in this manual. Canopy lamps must only be replaced by Authorized Service.
- Lamp replacement for the lightings must only be made by Authorized Service.
- If power cable is damaged, its replacement must only be made by Authorized Service.
- Please call Authorized Service if you have any doubt about the electrical connection while your product is running.
- Always pull the plug of your product by holding it from the plug-head. Never pull the power cord.
- Do not remove any external protective cover that is not stated in this manual. You may access electrical parts posing threat to life if the external protective covers are removed.
- Never use pressurized water for cleaning. Pressurized water may cause damage in live parts.
- Do not handle the electrical issues by yourself. Do not forget that safety comes first.
- Never plug and operate a damaged (such as transportation damage) product. Always call an Authorized Service.
- Always consider maximum loading capacity while loading your product with frozen food. Do not exceed the loading line indicated in your product.
- Do not place defrosted products into your product again.
- Replacement for the live parts must only be made by Authorized Services.
- Always store packaging materials of your product out of reach of children. Packaging materials (nylon, styrofoam etc.) may pose danger for children.
- The product you've purchased must not be used by physically (visual, aural) or mentally handicapped people, children and people with inadequate knowledge without surveillance of a person responsible for their safety. Children must be guarded while using the product and it must be ensured that they are not playing with the product.
- Do not use any material and metal that are not recommended by the manufacturer while defrosting. You may damage cooling parts.
- Do not damage cooling cycle components.
- Do not anyway use the products/materials which are not recommended by the manufacturer company inside and outside the cabin.
- Make sure that the intervention to be made to your product is certainly made by an Authorized Service.
- Do not carry, move your product under any circumstance while it is plugged in.
- Never carry out servicing and repair operations on your product while it is plugged in.
- Substances such as aerosol cans with flammable propellant must not be stored in this product.
- Always abide positioning rules of your product. Not abiding the product layout rules stated in the manual may cause fire danger.
- If your product is damaged or not working properly, please unplug it from the wall outlet. Transfer the foodstuff inside of it to a convenient place and call the nearest Authorized Service.

A- SECURITY WARNINGS

CAUTION!




Please check the refrigerant gas written on your product label.

Following 5 clauses cover the products containing R600a and R290 Hydrocarbon gas.

- Installation of this device must be only made by Authorized Service for reducing flammability dangers.
- Do not obstruct the ventilation holes on the device cover or body.
- Mechanical tools and other apparatus, other than the ones recommended by the manufacturers, must not be used for accelerating defrosting.
- Cooling circuit must not be damaged.
- Electrical devices must not be used inside the food storage section of the device unless the models recommended by the manufacturer.

EN

B- GENERAL APPEARANCE OF YOUR PRODUCT

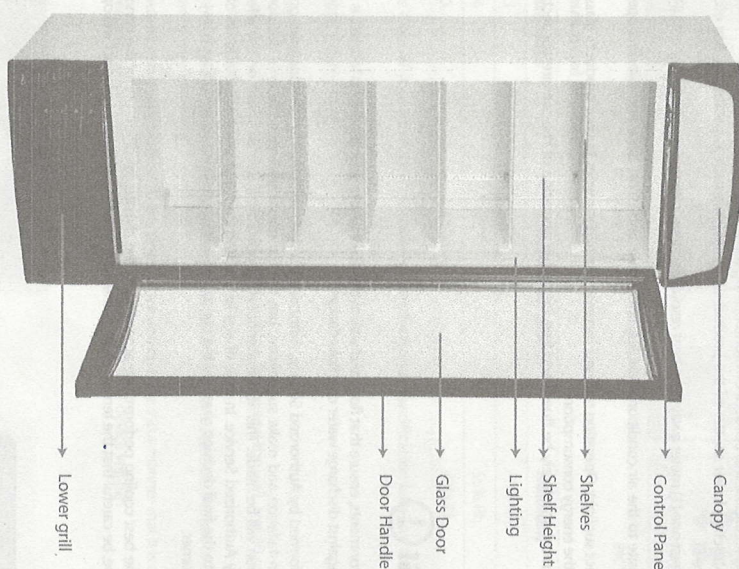

EN

C- INSTALLATION OF YOUR PRODUCT

Selecting the place of installation


The operating environment of the product is very important for the smooth operation of your product. While selecting the operating environment, Do not place your product exposed to outdoor environment (on the street, avenue, etc.). Be careful for not obstructing lower shutter of the product with materials such as cardboard, box etc. for a proper cooling (Picture 3). Place the product at least one (1) meter away from heat resources (stove, radiator, electric heater etc.) (Picture 4). Do not place it opposite to the air conditioner chutes, under fans and direct door and window openings (Picture 5). Do not expose to direct sunlight. Operation ratio will increase if sunlight comes to your product's glass. That means an increase in the energy consumption. Air intake and outlet must absolutely be fluent and free for proper operation of the compressor section of your product.

WARNING!

In very humid environments, ensure that floor and wall of the place where your product is located, is not affected by water, against discharge water overflow danger.


In installations performed by Authorized Service, Authorized Service shall inform the consumer on the suitable place for installation and make suggestion, but the consumer shall give the final decision on where the installation will be made. This above mentioned process shall also be stated on the relevant installation form by Authorized Service. In case of any loss arising from the place of installation of the product according to the final decision given by the consumer, all responsibility related to such loss shall belong to the consumer.

Your product gives the best cooling performance according to the climate condition under the conditions given below. Therefore, be careful that the temperature of the environment where your product will operate is at these levels.

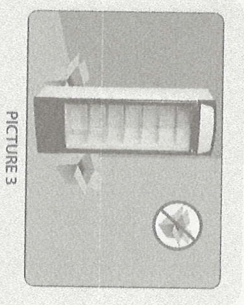

PICTURE 3

C- INSTALLATION OF YOUR PRODUCT

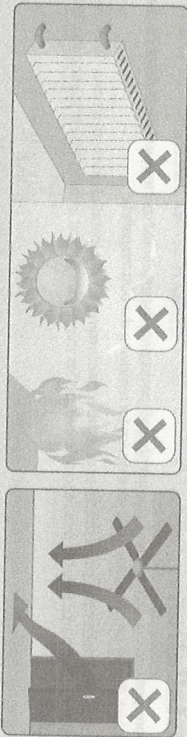

PICTURE 4

PICTURE 5

In commercial products:

Climate Class	Temperature Range	Humidity
Class 3	25 °C	60% Rh
Class 4	30 °C	55% Rh
Class 5	40 °C	40% Rh

Climate Class of your product is indicated on the technical specification label on the product.


Positioning

Possible placement positions:

There must be at least 150 mm between the back of the device and the wall, and 40 mm between the sides and the wall or other device (Picture 6).

The most important point to be considered in all cases of product placement is not to obstruct ventilation of the compressor assembly.

Without exposing your product to any slope, place and operate it in a manner that it is on its feet or wheels. The freer the compressor assembly ventilation is, the better the device will run.

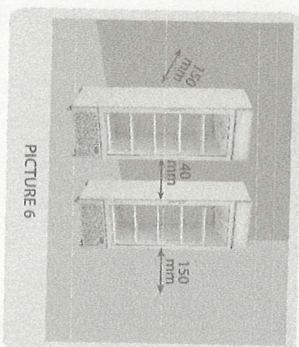

PICTURE 6

C- INSTALLATION OF YOUR PRODUCT

Installation

Before positioning, remove and disassemble all packaging materials and bottom wooden pallet of the product. (It may be necessary to lift your device for removing the bottom pallet).


Insert the replacement parts inside your product according to the installation instructions. Only use genuine spare parts. Please consult to salesperson for minimum period during which spare parts are available.

Inauthentic spare parts may constitute danger for you and damage your product.

Place the product anywhere you desire. Consider the placement rules written in the manual while positioning the product.

Balance your product in width and in depth by means of a water gauge. Please perform optional balancing operation by means of the adjustable feet at the bottom front of your product (Picture 7).

In models with wheels (optional), wheel brake (optional) must be locked or if there is no wheel brake, it must be guaranteed that the device will not move after the positioning of the product.

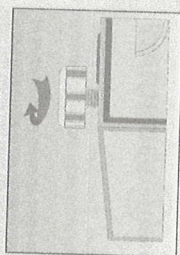

PICTURE 7

EN

C- INSTALLATION OF YOUR PRODUCT

Electric Connection Rules

The product will start when you insert the plug into the outlet as shown in picture 8.

WARNING!


It is forbidden to insert the plug into multiple socket and to use extension cord (Picture 9). There is no separate on-off switch on your product.

Do not contact the cables of your product, which are connected to the mains, to hot surfaces.


The outlet you will use must be grounded. Furthermore, the outlet to be used must have the resistance of at least 10-16 A and be protected with a suitable fuse. Definitely take assistance from our technical service or a competent electrician with regards to the fuse that should be present on the mains where the outlet is connected.

Mains voltage and frequency must be same with the value written on the label inside your product. If your mains voltage is extremely below or above the value indicated, definitely supply demanded voltage by using a voltage regulator. You can get assistance from an expert electrician with this regard.


Do not place your product's cord onto passageways. This may cause you to get injured and damage your device (Picture 10).

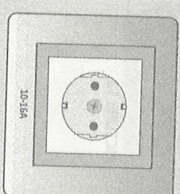

PICTURE 8

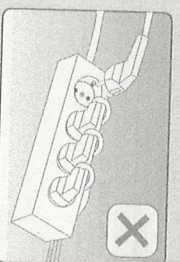

PICTURE 9

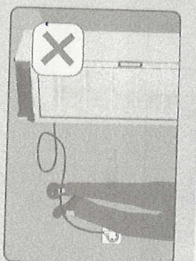

PICTURE 10


EN

D-USING YOUR PRODUCT


Start-up

WARNING!


- This operating manual applies for various device models. Hardware scopes of the models may vary. There may be differences in the pictures.
- Clean inside and all accessories of your product before the first start up.
- If your product has been shaken so much during the transportation and positioning, wait for one (1) hour without running it. Thus, the compressor oil, which may enter into the system, will return back. You may damage the compressor if you run it without considering this.
- Insert your product's plug into an outlet with alternative current of 220-240V/ 50-60 Hz, 110-127/60 Hz only, which has been installed according to the regulations (Picture 11).
- You will hear a slight sound from the compressor when your product is running.
- The fan inside your product will stop once you open the door of your cabinet.
- If the lights of your product do not light, put the 0-1 switch under the canopy to position 1 (Picture 12-13).

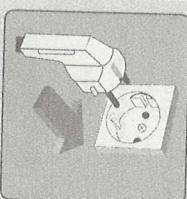

PICTURE 11

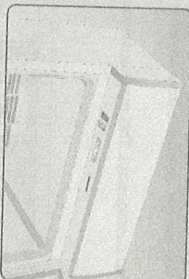

PICTURE 12

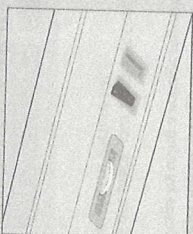

PICTURE 13

D-USING YOUR PRODUCT

Setting Internal Temperature of Your Device

Temperature setting of your product has made at the factory in a manner that it is operated under the most appropriate conditions.

Be careful for always placing frozen product inside your product.

Preservation temperature of the products can be observed from the digital indicator or thermostat under its canopy and adjusted by means of an electronic thermostat.



When you run your product at factory set value, you get the best result in terms of both the performance and energy consumption.

Run your device empty for at least three (3) hours. Therefore inside of your product will be cooled down in the best way.


WARNING!

- Internal temperature of your product can be adjusted between -18°C and -23°C. (In models with a digital thermometer, adjustment can only be made by an Authorized Service.)
- Always provide a gap between the top and the product you load for ensuring air circulation.

D-USING YOUR PRODUCT

Using Digital Thermostat Thermostat Adjustments (ERC 112D) Set Temperature

The explanations regarding the symbols on the thermostat and general information about the settings are given below.

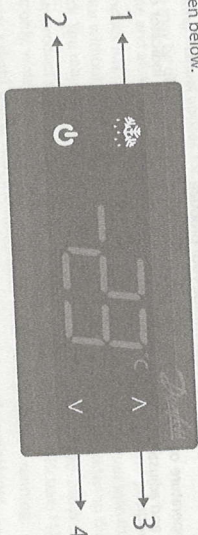

- 1) [❄️] : Defrost Key
- 2) [🔌] : Stand by Key
- 3) [⬆️] : Up Key
- 4) [⬇️] : Down Key

General Information And Instructions


Push the [❄️] until the temperature value is shown or push the [⬇️] until the temperature value is shown.

Manual Defrost

Manual start or stop of a defrost. -Push the [❄️].

Thermostat Adjustments (EWPLUS 971)

EWplus 971 thermostat is used for D (freezer without defrost) models.

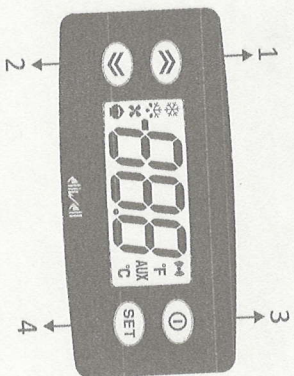

EN

D-USING YOUR PRODUCT

General Information and Instructions

Keys:

- 1- [⬅️] : Press and release, increases the sliding options among menu options and enables transition.
- 2- [➡️] / Light: Internal menu status, reduces sliding values among menu options or enables transition. When you press for 5 seconds, the Light turns on/off.
- 3- [⏻] / Esc: Press and release, return to the previous menu and approval of parameter values. When you press at least for 5 seconds, all the functions are turned off excluding the lights (Standby on).
- 4- [SET] / Enter: Press and release, displays the alarms and opens sub menus (if any). When you press for 5 seconds, opens programming menus. Approves the commands.

	Reduced SET / Economy LED Permanently on: Energy Saving active Flashing: Reduced set active Quick flashing: Access to level2 parameters Off: Otherwise		Fans LED Permanently on: Fans active Off: Otherwise
	Compressor LED Permanently on: Compressor active Flashing: Delay, protection or activation blocked Off: Otherwise		Alarms LED Permanently on: alarm active Flashing: alarm acknowledged Off: otherwise
AUX	Aux LED Permanently on: Aux output active Flashing: Deep cooling Cycle active Off: Aux output not active	°F	°F LED Permanently on: °F setting (dfo = 1) Off: otherwise
°C	°C LED Permanently on: °C setting (dfo = 0) Off: otherwise		

Set Temperature


To display the Setpoint value press the [SET] key when the 'SET' label is displayed. The Setpoint value appears on the display. Please again press the [SET].

To change the Setpoint value, press the [⬅️] and [➡️] keys within 15 seconds. Press [SET] to confirm the modification. Press the [⏻] key to exit setting.

EN

D-USING YOUR PRODUCT

Thermostat Adjustments (CRA)

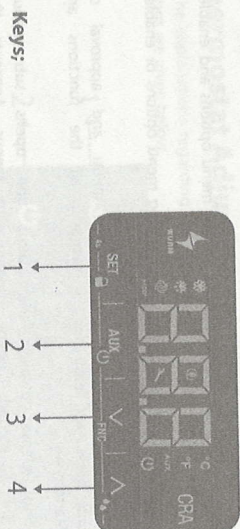

Keys:

The explanations regarding the sybols on the thermostat and general information about the settings are given below.

- 1) [**SET**] - Displays the control setpoint. Exit the control setpoint and save the changes.
- 2) [**AUX**] - Cancel and return to standard mode. Switch furniture lighting on/off. Activate/deactivate AUX output.
- 3) [**FNC**] - Set a lower value. Activate/deactivate energy-saving mode.
- 4) [**Manual Defrost**] - Set a higher value. Activate manual defrosting.

Icons:

- [] - Compressor is switched on
- [] - Defrosting in progress
- [] - Evaporator fan is switched on
- [] - Stored HACCP alarm
- [**°C**] - Temperature unit is the degree Celsius
- [**°F**] - Temperature unit is the degree Fahrenheit
- [**AUX**] - Furniture lighting

EN

- [] - Device is in standby mode
- [] - Energy-saving mode is active
- [] - Compressor requires maintenance

D-USING YOUR PRODUCT

Set Temperature

To set the operating temperature of your device, press the [**SET**] key. The Setpoint value appears on the display. Use the [**Manual Defrost**] / [**FNC**] keys to set the desired value. Press the [**SET**] key to confirm the modification.

Manual Defrost

Hold down the [**Manual Defrost**] key for 5 seconds on the thermostat.

SETPOINT	TEMPERATURE	TEMPERATURE	TEMPERATURE
18.0°C	18.0°C	18.0°C	18.0°C
19.0°C	19.0°C	19.0°C	19.0°C
20.0°C	20.0°C	20.0°C	20.0°C
21.0°C	21.0°C	21.0°C	21.0°C
22.0°C	22.0°C	22.0°C	22.0°C
23.0°C	23.0°C	23.0°C	23.0°C
24.0°C	24.0°C	24.0°C	24.0°C
25.0°C	25.0°C	25.0°C	25.0°C
26.0°C	26.0°C	26.0°C	26.0°C
27.0°C	27.0°C	27.0°C	27.0°C
28.0°C	28.0°C	28.0°C	28.0°C
29.0°C	29.0°C	29.0°C	29.0°C
30.0°C	30.0°C	30.0°C	30.0°C

Temperature

EN

D-USING YOUR PRODUCT

Loading foodstuff to your product

CAUTION!

Before loading your storage cabinet with foodstuff, run your product empty for three (3) hours. Do not place products, which are dangerous to be freeze down, inside your product. Leave a gap of at least two (2) cm between the top and the product you load for ensuring air circulation. Do not load your product with food over the loading line.

MODEL	MAX. SHELF CARRYING CAPACITY	MODEL	MAX. SHELF CARRYING CAPACITY
UDD 45 DTK	10 kg.	UDD 440 DTKL	25 kg.
UDD 45 DTKL	10 kg.	UDD 440 DTKLB	25 kg.
UDD 65 DTKL	15 kg.	UDD 440 DTKLE NF	25 kg.
UDD 370 DTK	16 kg.	UDD 440 DTKLE NF	25 kg.
UDD 370 DTKL	16 kg.	UDD 440 DTKLB NF	25 kg.
UDD 370 DTK GST	16 kg.	UDD 690 DTKLE NF	25 kg.
UDD 370 DTK BK GST	16 kg.	UDD 690 DTKLE BK NF	25 kg.
UDD 370 DTK BK	16 kg.	UDD 740 D2KL	16 kg.
UDD 370 DTKL BK	16 kg.	UDD 740 D4KL	16 kg.
UDD 370 D2KL	16 kg.	UDD 1600 D2KL NF	25 kg.
		UDD 1600 D3KL NF	25 kg.

Defrosting

Your product can be has manual defrost.

If there is excessive frost deposit on the shelves of your device, this will lead decrease in the freezing capacity and increase in energy consumption. If the frost deposit and its thickness are high, place the products inside of your device to another suitable environment that prevents them to get spoiled.

Unplug your product. Frost deposit generally melts in two (2) hours.

Place a container at water discharge for preventing the melted ice waters to damage the floor.

After defrosting operation, wipe internal walls with a dry cloth to make sure that they are not wet. Run your device empty again for three (3) hours and wait for it to cool down. Then you can place your foodstuff in it.

D-USING YOUR PRODUCT


Shutting down your product

Transfer the foodstuff inside your product to a convenient place.

Unplug your product (Picture 14).

If your product will not be used for a long time, apply following considerations:

Clean your product. Otherwise the humidity on the wall may cause darkening of the internal surface.

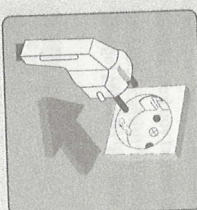

PICTURE 14

CAUTION!

If your product will be stored at an indoor place after shutdown:

- Do not cover it with plastic sheets. Plastic will cause smell and sweating of your product as it does not breathe. Corrosion may be seen as the result of sweating.
- Small formation may occur in cases where you fail to store your product with the door open.

E-CLEANING, MAINTENANCE AND TRANSPORTATION OF YOUR PRODUCT

Cleaning

Cleaning of your device is composed of two stages, which are the internal cleaning and external cleaning.

Following warnings must certainly be abided before start cleaning.

CAUTION!

Unplug your product before every cleaning.

Always wear protective gloves during cleaning and maintenance. This will protect you from injuries.

Never use domestic cleaning agents, abrasive and scratching substances (surface cleaners, detergent, flammable and sparkling, solvent like gasoline, thinner, acid) as cleaning agents. Otherwise loosening may occur in the plastic parts of your product.

Never use flowing and pressurized water for cleaning.

Internal cleaning

Transfer the foodstuff inside your product to a convenient place.

Before the internal cleaning, wait until the temperatures of the internal parts of your product reaches to the ambient temperature.

Always wear protective gloves during cleaning and maintenance. This will protect you from injuries.

Remove the accessories from inside.

Perform cleaning with a soft cotton cloth and warm soapy water or by using the cleaning agents recommended.

Dry with a dry cotton cloth. Products, which are not dried, may darken in time.

Make sure that no wet or humid area is left in the internal section after cleaning.

You can reload your product three (3) hours after running your product as stated in this manual.

External cleaning

Clean with a cotton cloth and warm soapy water.

Prevent penetration of cleaning water into the front control panel and lighting section while cleaning.

Clean the door gasket by using clean soapy water only.

Maintenance

Clean the dust accumulated on the condenser, which is on the back part of your device with the help of a vacuum cleaner or a dry brush after unplugging the device. Repeat this process a few times in a year.

EN

E-CLEANING, MAINTENANCE AND TRANSPORTATION OF YOUR PRODUCT

Transportation of your product

Unplug your product from the grounded outlet.

Carry out defrost operation.

Carry your product at normal using position. Do not carry horizontally, vertically, tilted or with the door open.

Protect your product from the impacts while carrying. Do not carry your product when it is plugged in or full.

In order not to cause any accident or for preventing the product to get damaged by falling or sliding, secure your product to the vehicle during the transportation.

NOTE

Pay attention to the following considerations if you do not use your product for reasons such as vacation, trip etc.

If you do not use it for a short time:

Leave your product in operating state.

If you do not use it for long time and want to shut it down:

Consume the foodstuff inside your product and empty it.

Unplug the power cord from the outlet.

Apply defrost and internal cleaning steps in this manual.

Dry inside of the product thoroughly. Darkening may occur in the product which is not dried.

Leave the product door open.

EN

F- RECYCLING INFORMATION

Disposal

 This product contains (WEEE) classification symbol, which indicates electric and electronic hardware. Accordingly, the user must conform to 2012/19/EU European Directive for recycling in order to minimize the environmental impact of the relevant product.

If the appliance has reached its "End of Lifecycle" (EOL), in other words, the appliance is not repairable or re-usable, do not dispose of the appliance as unsorted municipal waste. Instead, call the relevant recycling company or the local Ugur Sales Office to separately collect the appliance for treatment and recycling. Your device must be definitely delivered to local WEEE disposal institutions in such cases.

Important information to know about disposal of refrigerants

Dispose of refrigerator in accordance with Federal and Local regulations. Refrigerants must be evacuated by a licensed, EPA certified refrigerant technician in accordance with established procedures.

Ensure before disposal to make obsolete and old appliances unusable

- Disconnect the power plug from the socket.
 - Cut the power plug from the power cord.
 - Remove or damage existing latch-locks or deadbolt-locks.
- Thus you'll prevent that playing children confine themselves inside the appliance (danger of suffocation!) or get into other dangerous to life situations. Children often are not able to realise dangers with handling household appliances. Therefore ensure for supervision and don't let children play with the appliance.

EN

G- THINGS THAT MUST BE DONE BEFORE CALLING AUTHORIZED SERVICE

Troubleshooting

The failures and solutions stated in this section can be performed easily by yourselves and always consult to an Authorized Ugur Service if these suggestions do NOT solve your problem.


CAUTION!

- Intervention to any failure that may occur in your product must be carried out by Authorized Service.
- Any intervention that may be done by you may harm you, your employee or customer, invalidate the product guarantee and cause material damage (fire etc.).
- In case of any failure, consult to Customer Care or Authorized Service.
- Consult your salesperson to order spare parts and for minimum period during which spare parts are available.
- Please contact the seller for the minimum duration of the guarantee.

Troubleshooting	Possible Solution	Result
Device is NOTE working. (No sound or only fan sound comes from the product).	It may be due to the thermostat NOTE plugged in. The fuse may be blown or broken down. Condenser lamella may be obstructed or get dirty.	It will run again when reached to the suitable temperature. Insert the plug properly. Consult to an Authorized Service or a competent electrician. Clean the condenser lamellas.
Device internal temperature is high.	External ambient temperature is very high or wrong thermostat setting. Very close to the back wall, ventilation shutters are obstructed or it's front is prevented. It may have been expose to excessive external wind. Condenser lamellas are very dirty.	Move the device to a place where the external temperature is lower. Adjust to the stated gap. Clean in front of the ventilation shutters. Prevent the wind. Clean the condenser lamellas.
Device internal temperature is very low.	Wrong internal thermostat setting.	Re-set the thermostat.
High degree of sweating on the glass and inside the device.	Water discharge hole may be obstructed when sweating is seen inside the cabin. In glass sweating on the other hand, current external ambient humidity is over 65%.	Clean water discharge hole. With regards to the high humidity, you can move your device to an environment with less humidity.
Bad smell coming from the bottom part of the device.	Lower water discharge tray is dirty.	Clean the water discharge tray.

Setting the digital thermostat values other than the factory settings are completely under the user's responsibility. Our company shall NOTE be held responsible for the material and moral losses that may arise in connection thereto.

EN

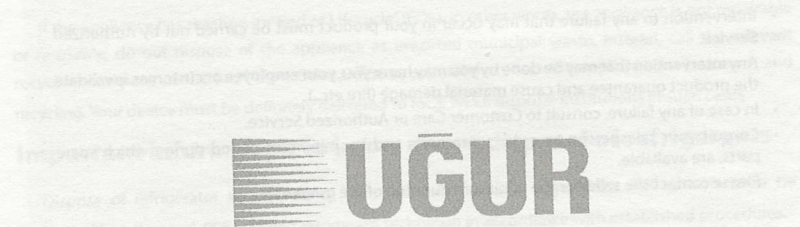

Uğur Soğutma Makinaları Sanayi ve Ticaret A.Ş.

Head Office

Yeni Sanayi Mahallesi
Batı Denizli Bulvarı No: 95
Nazilli/AYDIN TÜRKİYE
T: 0.256 316 10 00
ugur@ugur.com.tr

Marmara Region Headquarters

Mahmutbey Mahallesi 2534 Sokak No: 9A
Bağcılar/İSTANBUL TÜRKİYE

T: 0.212 624 32 28
www.ugur.com