

SALTO ANGEL ELECTRIC KETTLE MANUAL EKK011



ELECTRIC KETTLE

Thank you for choosing our kettle.

it to the end of use of the kettle. Before turning on, refer to the manual of the kettle, even if you know how to use similar Kettle must be used in accordance with operating instructions. You should keep

For the warranty period it is recommended to keep the original packaging and proof of purchase, which is also a guarantee card in case of complaints. When transporting the kettle should be placed into the original box.

5. Lid

"I" - kettle on "O" - kettle off 2. Power O / I

• This product is not for use by persons (including children) with reduced physical, sensory, mental capabilities or lack of experience and knowledge. They could use the kettle only under supervision or have been instructed by a person responsible for their safety. Children is not a toy. Set it out of the reach of children should be under constant supervision and must not allow them to play with the kettle. Kettle

for which it is intended. The kettle is for household use only and should not be used for purposes other than those

kettle when the voltage is not compatible. nameplate of the kettle corresponds to the mains voltage in the grid. Do not connect the Before connecting the kettle to the grid, make sure that the voltage shown on the

The basis of the kettle must be connected only to a grounded socket.

Never use the kettle near a bathtub, shower or swimming pool.
 Never use accessories that have not been supplied with a kettle, or are not designed for

this kettle Always place the kettle on a flat, dry surface

Do not put the kettle on window sills.

Make sure the power cord and plug do not have contact with water or moisture.
 Do not pour water or any other liquid on electric kettle.
 Do not immerse the electric kettle or its part into water and any other liquid.
 The electric kettle cannot be used in industrial environments and outdoor.

Do not use aerosols near the kettle

When not using, cleaning or moving electric kettle must be disconnected from the power

Do not put the electric kettle on the stove, gas and electric kitchen.
 Do not place the kettle near an open flame, equipment and objects that are sources of

Do not use the kettle when the kettle, the plug or cord is damaged. Replacement or repair should be reported to a specialized service or company.

Do not attempt to repair or modify in any way the kettle yourself as there is a risk of electric shock. All repairs and adjustiments should be entrusted to a specialist service or company.
 Self-interference in the appliance during the warranty period results in the loss.
 Do not place the power cord of the kettle near to hot surfaces or sharp objects.

Do not put heavy objects on the power cord, place it in such a way that no-one can walk or

Unplug the kettle by holding the plug, do not pull on the electric wire.

*The kettle should be used only with the base, which was delivered with it. The base of the kettle must not be used for purposes other than those for which it was intended.

• The kettle has an automatic switch-off when there is no water in it.

Before the kettle is used for making hot drinks, fill the kettle with clean water, boil it and empty. The kettle is ready for common use after repeating this procedure 5-6 times.

The appliance is intended only for boiling water.
Do not touch, open or move the lid during the boiling water.

User manual of the electric kettle
Before first use, remove the packaging and Water level indicator take everything from the inside.

* Set the required length of the power cord, put the rest of the cord into the base of the Automatic lid opening Description of the kettle . Base with wire storage Θ

 Fill the kettle with the required amount of water. If the kettle has been overfilled, there is a risk
that boiling water will overflow while if too little of water kettle may not work properly.
 Water can be poured through the spout or through the open lid, which should be properly flat surface

The base should be placed on a clean, dry,

closed after pouring the water

water level (3) The water must reach a minimum and must not exceed the maximum level indicated on the

• Do not pour the water when the kettle is on the base • Put the kettle on the base.

Plug the power plug into a power socket.
Turn on the kettle by pressing the switch (2). When the water is boiling the kettle switches off automatically

Before removing the kettle from the base ensure that the kettle is switched off when it is still at the position (I) disable it manually.

Do not use the kettle without water inside.
 Cleaning and descaling the kettle
 Deposits and limescale must be removed regularly, at least once a month. You can use

following ways to clean the kettle from the deposits:

-1/32 of 8% white vinegar, which must be poured into a cold kettle and leave without cooking,
-1/32 of 8% white vinegar, which must be poured into a cold kettle and be five for 2 hours. Then empty the kettle and boil clean water, empty. Repeat up to five itines.

-30g of citric acid with ½L of water boil in the kettle, leave there for 30 minutes. Empty the kettle and boil clean water, empty, Repeat up to five times.

To clean the outler parts of the kettle use damp cloth moistened with liquid dishwashing delergent. To clean the base use a dry cloth only. Do not use solvents, thinners, or cleaners

that may damage or scratch the kettle and its elements

Technical data

220-240V ~ 50-60Hz, 1850 - 2200W

Capacity: 1,7L

2200	240V, 50Hz	
2000	230V, 50Hz	
1850	220V, 50Hz	
VOLTAGE (V) POWER CONSUMPTION (W)	VOLTAGE (V)	