
USER MANUAL


L-bracket traffic light series

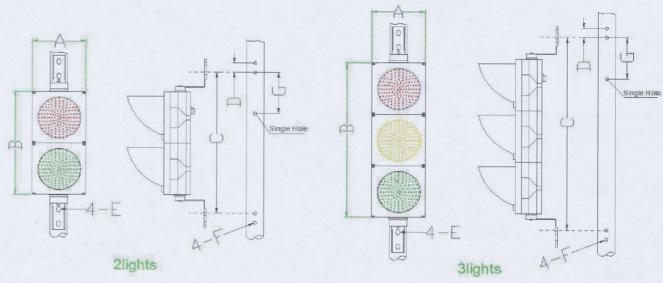

L-bracket traffic light series L-braket...(Unit:mm)

SIZE	100mm thin series 100mm thin series traffic light traffic light					200mm series traffic light					300mm series traffic light									
Asect Qty	1	2	3	4	5	1	2	3	4	5	1	2	3	4	5	1	2	3	4	5
Α	150	150	150	150	150	150	150	150	150	150	250	250	250	250	250	350	350	350	350	350
В	150	300	450	600	750	150	300	450	600	750	250	500	750	1000	1250	350	700	1050	1400	1750
C	190	340	490	640	790	260	410	560	710	860	425	680	930	1185	1440	520	870	1120	1570	1920
D	30				40				67				67							
E	∅9.5				Ø 9.5				Ø 13				Ø 13							
F	Ø12				Ø 12				Ø 15				Ø 15							
G										200				200						

Wire Connection

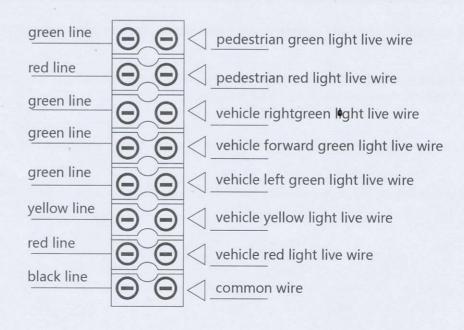

Installation

Install the position:

Step 1:

.

Insert the screw into the hole on the pole

· Fix with gasket

Step 2:

• Put wire into the pole

Step 3:


 Connect lights bracket and screw on the pole, fixed with gasket and M10 nuts

Step 4:

• Tighten the nuts

Step 5:

• Connect the wire at the bottom of pole, the color of wire is matched with the light's color

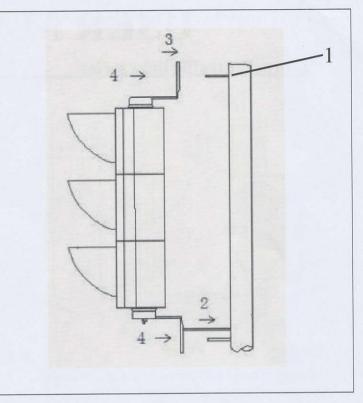

SpareParts

Item	Description	QTY (PCS)	QC
1	Brackets	2	
2	Sun visors	1 /2 / 3	
3	Sunvisor 's screws	5/9/13	
4	User manual	1	

Maintenance

1. Warranty Time: 2 years for product's defects in material and workmanship, from the date of delivery

2. Warranty Compliance:

The warranty is based on all installation and operating instructions supplied by Noble, the product is normally used without any misuse, neglect, modification or the occurrence of accidental damage. 9

3. Product' s Return:

During the warranty period, Noble replaces or repairs goods free of charge, Noble and customer shoulder one-side transportation charge.

Remarks: Warranty invalid if customers modify or disassemble products without Noble's agreement.