


---

## 11.2 Disassemble the Ventilator's Cleanable and Disinfectable Parts

### 11.2.1 Expiration Valve Assembly and Membrane

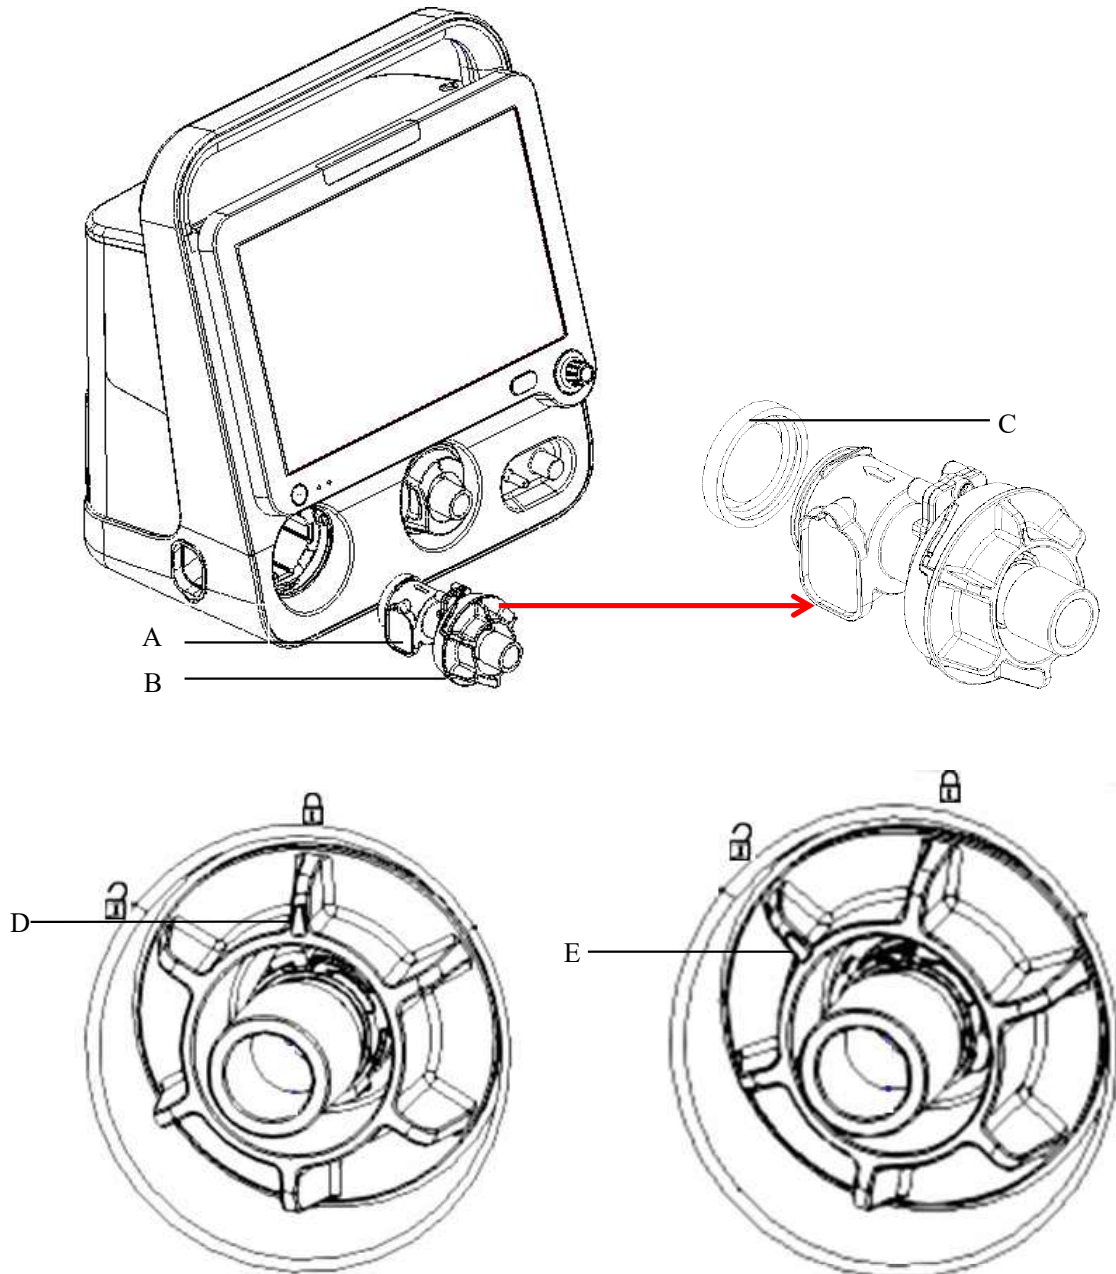

A. Expiration valve assembly

B. Expiration valve handwheel

C. Expiration valve membrane

D. Locked state of the expiration valve

E. Unlocked state of the expiration valve