

3-6 Maintenance Menu

The maintenance menu is provided to assist the service engineer in servicing the system and to upgrade or install software. This function is not able to be accessed by the user.

● **Caution:** ● To disable the maintenance functionality, it will be necessary to turn off the system.
Be sure to turn the system on again after you finish using the maintenance functionality.

3-6-1 Activating the Maintenance Menu

- 1) Press the [Probe] switch on the operation panel, and press the [Preset Setup] key in the touch panel menu.* The virtual keyboard is displayed on the touch panel.
- 2) Press the [Ctrl] key on the virtual keyboard to enable the Ctrl function on the virtual keyboard.
* When you are using a machine equipped with the full keyboard, simultaneously press the [Ctrl] and [S] keys on the full keyboard. In this case, it will not be necessary to carry out steps 3) to 7).
- 3) Press the [S] key on the virtual keyboard.
- 4) Operate the track ball and [Enter] switch, and select the password entry field.
- 5) Press the [Ctrl] key on the virtual keyboard to disable the Ctrl function on the virtual keyboard.
- 6) Type "moani" in the password entry field using the virtual keyboard.
- 7) Operate the track ball and [Enter] switch, and select the [OK] button in the dialog box.

Set-Up Window

The screenshot shows the 'Set-Up Window' interface. On the left, a vertical menu lists options: Setup (highlighted), Upgrade, Maintenance, System1, System2, Hardware Check, Prosound Log, HI VISION Log, Other, Auto Test, Time Server, Transfer Syntax, and Security. The main area on the right contains the following fields and text:

- Model: ARIETTA 750
- Serial No.: 20501005 (with an 'Edit' button next to it)
- Machine ID: 114123450
- Checker's Name: (empty text field)
- USB Media: (G:) FIU-880 (with a dropdown arrow)
- FUJIFILM (at the bottom center)
- Exit (button at the bottom right)