

User Manual

Coatron X Series Eco / Pro / Top



CE

Instructions intended for instruments REF 8110110|8110120|8110140 Basis UDI-DI 426018278CMX81152



EN ISO 15223-1 EN ISO 18113-3

For In-Vitro Diagnostic use

	User manual	Instrument Software
	1	1.01.42 (first release)
	2	1.01.43
	3 (minor correction on OPM)	1.01.43
	4	1.01.44
	5	1.01.47 + 1.02.48
	6	1.03.49
	7	1.03.50
	8	1.03.51 and higher
Copyright	© 2022 by TECO Medical Neither the User Manual digitally processed or oth	Instruments Production + Trading GmbH; nor any part thereof may be copied, perwise transferred without written
	permission from TECO Gn	nbH. The software for TECO GmbH
	products is the intellectua	al property of TECO GmbH, which
	company retains all rights	to usage of this software. The purchaser
	of a Coatron X acquires ri	ghts of use for this software.
Trademarks	Coatron is a trademark of Trading GmbH. Other pro trademarks of the respect	f TECO Medical Instruments, Production + oduct names used in this User Manual are tive companies.
Manufacturer	Instrument is produced b	Y
	TECO Medical Instrument	s, Production + Trading GmbH
	Dieselstrasse. 1	
	D-84088 Neufahrn, Germ	any
	shortened for simplicity to	o TECO GmbH
	Phone: +49 (0)87	773 70780-0
	Fax: +49 (0)87	773 70780-29
	Email: <u>info@tec</u>	<u>:o-gmbh.com</u>
	Internet: <u>http://w</u>	ww.teco-gmbh.com
Warranty	The Coatron X Coagulome after delivery or first ins different period of warr functionality or workman be registered online via <u>v</u> (- see chapter 2.9 page 22	eter is warranted for a period of one year stallation unless agreed in written for a ranty. It covers any defects in material, ship. For first installation the device must <u>www.teco-reg.com</u> 1 - "Registration")
	 The warranty expires in ca Accident, neglect of n Using unauthorized re Unauthorized service by authorized person 	ase of failures caused by naintenance & service, abuse or misuse. eagents, consumables or spare parts . Any repair or service must be performed s.

Versions

1	Intr	oduction	6
	1.1	Symbols	6
	1.2	Views of the device	7
	1.3	Consumables / Further EQUIPMENT	8
	1.4	Intended use	9
	1.4.1	1 COMPARISON of Coatron-X Series	9
	1.4.2	2 Test Methods	
	1.4.3	3 Specimen Collection	
	1.4.4	4 Principle of measurment	
	1.4.5	5 Clotting method (PT, aPTT,)	
	1.4.6	6 Chromogenic Method (Antithrombin):	
	1.4.7	7 ImmunturbidimetriC Method (D-Dimer):	
	1.5	Safety information	14
2.	Inst	tallation of the Coatron X	
	2.1	Scope of delivery	15
	2.2	Conditions of operation	16
	2.3	First Installation	17
	2.4	Switching ON and off	
	2.5	Display Protection Foil	
	2.6	External Thermal Printer	19
	2.7	External Barcode Scanner	19
	2.8	TECAM SMART	20
	2.9	Registration	21
3.	Оре	eration of the Coatron X	22
	3.1	Homescreen	22
	3.2	Input patient identification	23
	3.3	Test selection	24
	3.4	Measurement	25
	3.5	System settings	26

3	8.6	Test Settings	. 29
3	3.7	Review results	.31
4.	Bas	is coagulation tests	32
4	ł.1	Quickguide of PT Determination	. 32
4	1.2	Quickguide of PT-B Determination	.33
4	1.3	Quickguide of aPTT Determination	.33
4	1.4	QUICKguide of FIB Determination	.34
5. 6.	Tick SER	et system VICE Functions	35 37
e	5.1	System Information	.37
6	5.2	Optic Check	. 38
e	5.3	System report	. 39
e	5.4	Adjust temperature	.40
e	5.5	Firmware Update	.41
6	5.6	Overview of Mainboard	.42
e	6.7	Typical Failures	.43
7.	Res	et to factory default	44
<i>8.</i>	Woi	rking with TECAM Smart	45
9.	Clea	ining and maintenance	46
Ģ	9.1	General cleaning information	.46
ç	9.1	Cleaning	.46
ç	9.2	Decontamination	.46
Ģ	9.3	Regular mainentance	.46
10.	Тес	hnical data	47
11.	Inde	2X	48

<u>List of figures</u>

Figure 1: Top view	7
Figure 2: Rear view	7
Figure 3: Side view	7
Figure 4: Determination of turning point in clotting method1	3
Figure 5: Standard Delivery package1	5
Figure 6: System Information 2	1
Figure 7: Registration of Coatron-X 2	1
Figure 8: Homescreen Coatron X Top 2	2
Figure 9: Input Patietn ID 2	3
Figure 10: test selection Coatron X Pro/Top 2	4
Figure 11: test selection Coatron X ECO 2	4
Figure 12: Screen during measurement 2	5
Figure 13: Quickmenu Coatron X 2	6
Figure 14: System settngs Coatron X Pro/Top 2	8
Figure 15: Test Setting 1 2	9
Figure 16: Test Setting 2	0
Figure 17: Review results	1
Figure 18: QC Report	1
Figure 19: Ticket System, LOGIN	5
Figure 20: Ticket System, Voucher 3	5
Figure 21: Ticket System, Input CODe 3	6
Figure 22: Ticket System, TECAM SMART 3	6
Figure 23: System Information	7
Figure 24: Optic Check	8
Figure 25: Screenshot of XFlash tool 4	1
Figure 26: Mainboard	2
Figure 27: TECAM SMART	5

1. INTRODUCTION

This device left the factory in fault-free certified condition regarding its safety and engineering functionality. To maintain this condition and ensure risk-free operation, the operator must comply with the safety warnings and information in this User Manual. (see Chapter 1.5 page 14 – "Safety information")



Use the Coatron X only in compliance with the instructions in this User Manual. Otherwise, the manufacturer shall exclude the liability for any damages to the Coatron X, patients or operators.

1.1 SYMBOLS

The following standard symbols are used in this manual:

Symbol	Meaning	Explanation	
Courier	Info	Key on keypad.	
CAPS	Info	Screen message.	
•	Read	Indicates important information and tips.	
仓	Info	Describes reaction of Coatron X to operator input.	
	Warning	Risk of possible health damage of considerable damage to equipment, warning is not heeded.	
	Danger	Potential risk to operating personnel or equipment due to electric shock.	
	Biohazard	Equipment can be potentially infectious due to the samples and reagents used.	
	Laser Radiation	Avoid direct eye exposure	

1.2 VIEWS OF THE DEVICE



FIGURE 1: TOP VIEW

Home Screen

Coloured Touch Display

Complete area is prewarmed to 37°C

- 1 x Reagent position Ø24mm
- 1 x Reagent position Ø22mm
- 1 x Reagent position Ø22mm, stirred
- 2 x Reagent positions Ø13mm
- 20 x Cuvette incubation positions
- 4 x Cuvette measurement positions (depends on ECO/PRO/TOP version)



5V:	Power in
PC:	LIS or PC
SERVICE:	Software update
PRINTER:	Serial printer
BARCODE:	Handheld barcode scanner





FIGURE 3: SIDE VIEW

1.3 CONSUMABLES / FURTHER EQUIPMENT

	Cuvettes for Coatron X	Box of 500 or 5000 pieces including one Voucher ticket	
Consumables,	Reagent adapter	Helps to place vials with	
laboratory equipment	Ø 24,5 → 22,5 mm	different sizes on device	
	Stirring magnets P-4	Required to mix PT reagent.	
	Stirring magnets, P-4	(only on Coatron Pro and Top)	
	External	To read 1D or QR code for Patient-ID,	
	QR barcode reader	Reagent and Tickets	
	Glass Protection Foil Kit Safe display glas from scrate		
		Kit includes foil, clean tissues &	
		remover tool	
additional	Thermal printer 60mm	Print test results, Calibration data or	
technical equipment	(Optional) System information		
		Patient management, Reagent	
	TECAM Smart Software	Calibration management,	
	(Optional)	Monitoring, Research, Statistics,	
	()	Mirror print function, LIS	
		communication (ASTM-1394)	

Detailed informations are available with the product pricelist or Leaflet or website

1.4 INTENDED USE



The **Coatron X Family** is designed to carry out coagulometric tests such as PT, PTT, TT, fibrinogen, single factor tests, chromogenic and immunoturbidimetric tests (for instance Antithrombin, D-dimer etc.) on human citrated plasma. The instrument has to be used for the expected purposes and in perfect technical condition, by qualified personnel, in working conditions and maintenance operations as described in this document. It is designed for laboratory use or clinical environment and trained users. It is not intended for home use.

1.4.1 COMPARISON OF COATRON-X SERIES

The Coatron X Series includes three different versions called ECO, PRO, TOP

	ECO	PRO	ТОР	
Coatron X Series				
Reagent and Optic block	Prewarmed to 37°C			
Cuvette prewarm	10x	20x	20x	
Reagent prewarm, 24mm	1x	1x	1x	
Reagent prewarm, 22mm	2x	2x	2x	
Microtubes prewarm	2x	2x	2x	
Reagent stirrer	No	1x	lx	
Printer, RS232	Yes			
Barcode Scanner, RS232	Yes, external handheld barcode scanner for 1D or QR labels to read patient-ID, reagent information or vouchers.			
LIS, USB	Yes			
Firmware Update, USB	Yes	Yes		

Measurement	ECO	PRO		ТОР
Optic channels	1	2		4
Optic wavelength	620nm (RED)	405nm (UV)		405nm (UV)
Cuvette, total volume	Single, 75µL	Single, 75	μL	Single, 75µL
Global Clotting Assays	PT+aPTT+Fib+T	T PT+aPTT+Fik	o+TT	PT+aPTT+Fib+TT
Special Clotting Assays	-	All factor PS, LA	S	All factors PS,LA
Chromogenic Assays	-	AT, PC,HE	P	AT, PC,HEP,AF10,
Latex enhanced Assays	D-Dimer	D-Dimer Free PS		D-Dimer Free PS
Whole Blood Testing	Yes (PT INR+%)	No		No
Software features				
Reagent Dual LOT manage two different lots for each test	No	Yes		Yes
Test Calibration LOT, expiry and upto 5 points for each test	Yes	Yes		Yes
Reagent Barcode Input LOT+Expiry or Positive LOT detection	Yes	Yes		Yes
Patient Barcode Input patient ID by barcode scanner upto 16char	Yes	Yes		Yes
System Barcode Input voucher tickets by barcode scanner directly from display of smart device	Yes	Yes		Yes
Result Database save recent 180 results onboard	Yes	Yes		Yes
Double Determination Run patient twice and display mean value	No	Yes		Yes
Stopwatch function count up or down incubation time	1x	2x		4x
Result Identification Patient ID or sample ID or Auto ID	Yes	Yes		Yes
Real Time Clock	Yes	Yes		Yes
Change language EN, ESP, ITA, FR, DE - further on option	Yes	Yes		Yes
Start test at reagent addition No expensive starter pipette required	Yes	Yes		Yes
Visualize Reaction Curve Tecmoni Software required	Yes	Yes		Yes
Link to LIS over USB or network/ASTM TECAM SMART Software required	Yes	Yes		Yes

1.4.2 TEST METHODS

Following test are provided to detect of the human coagulation system, which can be bleeding or thrombosis and the monitoring of anti-coagulation drugs like Heparin or Marcumar.

Test	Name	Specimen Method	Coatron X			
Test			wiethod	Eco	Pro	Тор
PTB	Prothrombin Time	blood	clot	Yes	No	No
PT	Prothrombin Time	plasma	clot	Yes	Yes	Yes
APTT	Activated Partial Thromboplastin Time	plasma	clot	Yes	Y <mark>es</mark>	Yes
FIB	Fibrinogen	plasma	clot	Yes	Yes	Yes
TT	Thrombin Time	plasma	clot	Yes	Yes	Yes
AT	Antithrombin	plasma	chromogen	No	Yes	Yes
DD	D-Dimer	plasma	immuno	Yes	Yes	Yes
Factors	Factors II, V, VII, VIII, IX, X, XI, XII	plasma	clot	No	Yes	Yes
HEP	<mark>Heparin (anti Xa)</mark>	plasma	chromogen	No	Yes	Yes
PC	Protein C	plasma	chromogen	No	Yes	Yes
PS	Protein S	plasma	clot	No	Yes	Yes
PSF	Free Protein-S	plasma	immuno	No	Yes	Yes
LA-S	Lupus Screen	plasma	clot	No	Yes	Yes
LA-C	Lupus Confirm	plasma	clot	No	Yes	Yes

1.4.3 SPECIMEN COLLECTION

Туре:	Human citrated plasma
Collection:	Veinvein puncture, 1:10 mixed sodium citrate 3.2% (0.105M)
Centrifugation:	10min at 1500g
Storage:	Max 4h after collection at room temperature
Bilirubin:	< 50mg/dl
Hemoglobin:	< 9000mg/l
Triglyceride:	< 2500g/l
Intended specimen for	PTB (Coatron X Eco)
Туре:	Capillary blood from puncture of finger or citrated whole blood



In case of differences to the boxinserts of the reagent, always follow the instructions on the box insert.

1.4.4 PRINCIPLE OF MEASURMENT

The detection of plasma clotting is based on a photometric principle. No mechanical aids like mixing bars are required. Blood plasma is filled into a cuvette. Special reagents are added, which initiate the blood coagulation. The cuvette is transmitted by ultra violet light during the coagulation process. When the sample starts to clot a change of light absorbance is measured. The time from measurement start to change of light (turning point) is called clotting time and expressed in seconds [s].

The conversion of coagulation time into a specific test unit is one using a linear, hyperbolic, semi-logarithmic or double-logarithmic interpolation of the stored calibration points. The current mathematical model is printed out in "TEST SETUP." Values outside the calibration range are calculated by extrapolation and flagged as " * ".

Unit	Info	Decimal places	Maximum value
S	seconds	1	-
%	activity	1	250.0
U	units	0	29999
INR	Int. ratio	2	99.00
R	ratio	2	99.00
NR	polish ratio	0	250
mg/dl		0	999
g/l		2	99
IE/ml	Int. Units	2	99
mg/l		2	999
µg/ml		3	9.000
ng/ml		0	27500
µg/l		0	27500
IU/mL	Int. Units	2	99.00

R = clotting time / normal time

NR = 100 *(normal time/clotting time)

INR = Ratio ^{ISI} (International Normal Ratio)

IU/mL = IE/mL = International Units (1.00 IU/mL = 100 % activity)

1.4.5 CLOTTING METHOD (PT, APTT,..)



FIGURE 4: DETERMINATION OF TURNING POINT IN CLOTTING METHOD

The final reaction in the coagulation cascade is the transformation of fibrinogen into fibrin catalyzed by thrombin. Fibrin formation results in clouding (higher turbidimetric level) in the sample, which is measured by the photometer and stored as the extinction. The result in seconds is the time from the start of the reaction to the time of half rate of change (halfpoint).

1.4.6 CHROMOGENIC METHOD (ANTITHROMBIN):

The change of optical signal is not caused by clot reaction, but by the release of color particles (pNA) which causes a yellow color. The change of color is measured at 405nm and expressed as "dE/60sec" and proportional to the concentration or activity of analyte.

1.4.7 IMMUNTURBIDIMETRIC METHOD (D-DIMER):

The change of light is caused by Antigen – Antibody reactions, which scatter the light. The antibodies are linked to latex particles to amplify the optical reaction. The change of light is proportional to the concentration of antigen like D-Dimer and expressed as dE/120sec

1.5 SAFETY INFORMATION



No liability is assumed, if this product is not purchased from any other than the manufacturer or an authorized distributor.

A. General use

A.1 This device must be installed at professional laboratories where a quality management system is established and good laboratory practice (GLP) is applied. The laboratory must follow local regulations about operating medical products.

A.2 This device must be operated by a professional user only. It is <u>not</u> intended for point of care or home testing.

A.3 Read user manual in its entirety prior first operation.

A.4 Install device according to electrical and environmental conditions stated im chapter "Installation" of user manual.

A.5 Operate the instrument as intended and instructed in the User Manual.

A.6 Follow always product labeling and manufacturer's recommendations.

A.7 Use only materials, consumables and (spare)parts such as reagent or cuvettes, which are intended or recommended for use on this instrument. Always contact manufacturer or local authorized distributor in case of doubts.

A.8 Do not use materials after their expiry date or assigned shelf life.

B. Laboratory use

B.1 Check correct function of instrument by performing quality control before running a series of patient samples or after test calibration.

B.2 Do not operate the instrument after spilling reagent or liquids into the analyser. Contact local authorized distributor for servicing.

B.3 Never use cuvettes more than once. Do not wash cuvettes. They are for single use only.

C. Risk of infection

C.1 Consider all surfaces and materials, which might be in contact with plasma or other biological liquid as potentially infectious.

C.2 Avoid direct contact with potential infectious materials or surfaces by wearing appropriate protective clothing.

C.3 Follow the laboratory hygienic procedures during and after completion of work.

- **D.** Maintenance and Service
- **D.1** Only an authorized customer service may carry out any servicing.
- **D.2** Decontaminate instrument before doing any servicing or shipment.
- **D.3** Recycle instrument according to WEEE or local regulations for electronic equipment.

2. INSTALLATION OF THE COATRON X

2.1 SCOPE OF DELIVERY

Contents of standard delivery package:

- 1 Pc Coatron X
- 1 Pc Power Supply
- 200 Pcs Single cuvettes
- 5 Pcs Reagent container, Ø22,5mm
- 5 Pcs Reagent tubes, Ø11mm
- 1 Pc User Manual (not on picture below)
 - 1 Pc Brochure with Safety Information (not on picture below)
- 1 Pc Display protection foil



FIGURE 5: STANDARD DELIVERY PACKAGE

2.2 CONDITIONS OF OPERATION

Ambient conditions:

Operating Temperature		
Humidity		
Elevation above NN sea level		
Free of dust		
Impact resistance		
Not allowed		

15 to 30 °C < 70% rel. humidity < 3,000m Grade 2 According to IEC/EN 61010-1, 8.2.2 Vibrations, direct sun light and direct exposure to air condition.

Electrical conditions:

100-240 VAC, 47 - 63Hz, no earthing required (Class-2)

Electrostatic Discharge (ESD):

No special requirements for ESD protection (shoes etc.)

Storage conditions:

0 - 50°C, max. 12 months in original package.

Transport conditions:

No special conditions required. The general regulations for transport can be used.

Hygienic conditions:

Validate your hygienic management system according to international applied Good Laboratory Practice (GLP) or similar quality standard. Any waste material must be considered as potentially infectious. Direct contact must be avoided. Protective gloves during operation, service or cleaning are required.

Device environment:

No special requirements. Instruments is suitable for or use in domestic and industrial establishments.

2.3 FIRST INSTALLATION

Inspect the packaging of the **Coatron X** and accessories for any visible external damage. If the packaging is damaged, contact the transport company so that any damage to the device or accessories can be assessed.

The instrument is ready to use and don't need a specific procedure.

First installation procedure:

- 1. Unpack and place instrument in conformity with conditions of operation (see previous chapter).
- 2. Install assessory (Protection foil, printer, barcode, Tecam see next chapters)
- 3. Plug in power 5V.
- 4. Wait until green Status (approx. 15 min). The instrument is now ready to use.
- 5. Register instrument online for start of warranty period.
- 6. Activate 500 cuvettes (see chapter-5 "ticket system").



Keep the original packaging material for purposes of later transport



maximum length of cables to external devices like printer, barcode or LIS must be less than 3m to keep compliance with EMC

2.4 SWITCHING ON AND OFF

Switching on

Connect with power supply

Important Information:

The instrument requires about 15 minutes to heat up the optic block to 37°C. Afterwards it is ready for measurement, indicated by a green dot in the top right corner of the display. If the status symbol does not turn green, even after wating for 25 minutes, press the status symbol to see the device status to identify the problem.

Switching off

The device supports no power switch. It must be disconnected from power. To do this, unplug the power adapter from the socket on the device first and then disconnect the power supply.

Standby

The system switches to standby after 2 minutes of idle operation. In standby mode, the display brightness is reduced to save display life time and reduce power consumption. The next touch anywhere on the display disables the standby mode.

Sleep

Open menu and touch the "sleep" button: 🕛

The menu bar is displayed on top of screen and only available, if no measurement is ongoing. The power consumption during sleep is 0,2W.

Wakeup

To wake the device up from sleep, touch the display.

The system can be disconnected under any operation situations. There is no risk of system damage

2.5 DISPLAY PROTECTION FOIL

Requirements:

Туре:	Touchsensitive Protection foil, clean tissue wet and dry, Pick-off
Size:	same as Display (4,3")

Installation:

Ready to fix on display, as described in the Inlay (clean display with clean tissues wet and dry and fix protection foil carefully)

2.6 EXTERNAL THERMAL PRINTER

Requirements:

Туре:	Serial RS232 Printer
Power:	external supply, 24V 1.5A
Cable:	2 x Sub D9, female, straight, max length 3m
Interface:	RS232, 9600 Baud, 8, 1, No

Installation:

The printer is ready to plug in. No settings are required.



Do not plug power supply of printer (24V) to Coatron-X. It will destroy the instrument! Double check before you plug-in.

2.7 EXTERNAL BARCODE SCANNER

Requirements:

Туре:	Serial handheld scanner
Power:	5V DC over cable, PIN-9
Cable:	Included to scanner
Interface:	RS232 9600 Baud, 8, 1, No
Setting:	No handshake or protocol. Barcode must be finished with carriage
	return.

Installation:

The scanner is ready to plug in. no settings are required.

2.8 TECAM SMART

Requirements:

License:	TECAM SMART fingerprint and activation code.
Cable:	USB, type A to B, max 3m
Interface:	USB
Setting:	no handshake or protocol. Barcode must be finished with carriage
	return.

Installation:

- a) Disconnect the device from PC.
- b) Run setup.exe.
- c) Confirm when asked to install Coatron X driver.
- d) Connect device with PC.
- e) Start TECAM

Further information available in chapter "7" or online help file of TECAM.

2.9 REGISTRATION

The instrument must be registered online for warranty or service issues

1) Open weblink <u>www.teco-reg.com</u>

or scan QR Code \rightarrow

2) Enter **SIN + PIN** of device

Both can be seen on instrument license plate (Type label) or during startup or on info screen (touch green or red LED on home screen)



FIGURE 6: SYSTEM INFORMATION



FIGURE 7: REGISTRATION OF COATRON-X



3. OPERATION OF THE COATRON X

3.1 HOMESCREEN

After boot or home button following screen is displayed

(1) (2)	(3) (4	l)	(5)
12/31 23:59		[US]	37°C 🔴
РТ	РТ	РТ	РТ
00:00	00:00	00:00	00:00
PID:	PID:	PID:	PID:
OPTIC-1	OPTIC-2	OPTIC-3	OPTIC-4
(7)	(6	3)	7

FIGURE 8: HOMESCREEN COATRON X TOP

UI Element	Element Name	Use Function
(1)	Date & Time	Edit date
(2)	Current test	Change test
(3)	Stopwatch	Start/Reset stopwatch or countdown
(4)	Menu or Home	Open menu or return to main
(5)	Status Dot	Show device status/Open system information
(6)	Multistart	Activate all channels
	Optic-Button	Channel-1 is idle. Touch to enter new PID and activate
	Active	Channel is active. Touch or add reagent to start
		Ongoing measurement. While green state it is allowed
(7)	Blinking green	to touch, mix or move cuvette.
		Ongoing measurement. Don't move nor touch cuvette.
	Blinking orange	Touch button to stop measurement
	Current result	Touch to enter new PID

Other functionality:

[LIS]	Visible, if connected with LIS
Green LED	System is ready for measurement
Red LED	Indicate system problems. No measurement is possible.
37.0°C	Temperature on reagent block.
Grayed buttons	Use function is not possible during measurement.
Reduced brightness	Screensaver mode. Touch to reactivate.
Long touch	Repeat current function
Green	Green = Ready to measure, no problems
Yellow	Yellow = Ready to measure, minor problems
Red	Red = Not ready to measure, major problems

3.2 INPUT PATIENT IDENTIFICATION

PID: 1234 -1 +1 3 1 2 5 6 4 **Hi-Sense** 9 7 8 < OK ESC 0 С

Call: Homescreen/Optic button

FIGURE 9: INPUT PATIETN ID

Button	UI Element	Use Function
Numeric keys	0-9, C, X	Change or delete PID.
Increment	-1 / +1	Increment PID. Use long touch feature for easy change.
Hi-Sense	Hi-Sense	Enable very high detection sensitivity. Useful for high diluted or lipemic samples or "+++" results.
Additional:		
Long touch	-	Press button > 2sec.
Sample barcode	-	Set PID to barcode.

3.3 TEST SELECTION



< OK Print Settings >

FIGURE 11: TEST SELECTION COATRON X ECO

Button	UI Element	Use Function
Test kovs	PT – F12	Select test.
Test keys	>> <<	Change test table
On / Off	On / Off	Activate two LOTs per test (not available
		for Coatron X Eco).
LOT 1/2	IOT 1 / IOT 2	Load calibration of LOT 1 or LOT 2 from memory.
(not visible for DOACs)	2011/2012	
ОК	< OK	Confirm test for current channel.
All	All	Confirm test for all channels.
Settings	Settings >	Change test calibration.
Print	Print	Print current test testup.
Scan reagent		Select current test and lot.
barcode	-	A long beep indicates an invalid barcode or LOT.
SETUP PT	Test Information	Calibration data of current lot and test.
	Box	Red values indicate invalid data.

About reagent barcode:

The barcode on reagent label can be used to switch to correct Test and LOT. Before use of barcode, the test LOT + Calibration must be entered in calibration menu (see chapter test setting)

3.4 MEASUREMENT



FIGURE 12: SCREEN DURING MEASUREMENT

Button (7) during measurment	
PID	Patient identification number (max 16 numbers).
Result	PT = 12.5s, 115% 0,91 INR.
Flag	f = very low fibrinogen (weak clot).
	F = very high fibrinogen (strong clot).
	* = Result is out of calibration.
	X = double value deviate more than 15%.
Err	T = temperature not 36 - 38°C.
	E = reagent expired.
	S = light intensity very low; caused by turbid reagent
	and or high lipemic or icteric samples.
mOD	Current optical absorbance. A change of value > 50mOD indicates an ongoing clot reaction.
Timer	Current time of measurement.
Grey blinking	Optic is ready for start of measurement
Green blinking	Measurement is started,
J. J	but cuvette can be mixed or touched.
Orange blinking	Stop mixing and don't touch cuvette anymore

3.5 SYSTEM SETTINGS



FIGURE 13: QUICKMENU COATRON X

Button	Use Function
Auto PID	Enable/Disable the Auto PID feature.
Double determination (not visible for Coatron ECO)	Enable/Disable Double determination
Countown	Switch between Stopwatch and Countdown mode.
Results	Open the result history.
Setup	Open the system setup.
ل	Put the device into sleep mode.
ок / 🕇	Return to the home screen.

Auto PID:

Using the Auto PID mode enables the user to let the device choose a consecutively numbered ID for every measurement. By setting the ID manually you set the start ID. Every new channel activation automatically sets the ID to the next higher number.



Auto PID mode must be enabled to use the Multistart feature!

Double determination:

When using double determination mode, the channels 1 / 2 (Coatron X Pro) respectively channels 1 / 2 and 3 / 4 (Coatron X Top) are combined to perform a test using the same ID twice. Both results are combined by calculating the mean value.

Countdown:

Use the stopwatches in countdown mode. The period of countdown is defined by incubation time of test (see "test settings"). When Countdown mode is enabled, the stopwatches count down give alarm 5sec before zero.

Results:

Pressing the Results button opens the result history screen.

Setup:

Pressing the Setup button opens the system settings.

<u>(</u>):

Pressing the Sleep Button sends the device into the sleep mode. To wake the device up, touch anywhere on the screen.

OK Button / 🕇 :

Pressing the OK or Home Button returns to the home screen.

∩		
Date	< 31.12.2016 >	>
Time	< 12:00 >	
Language	< DE >	
Mixer	< Normal >	
<u>Temp</u> .	< 37.0° >	
< OK	Info >	

Call: Homescreen / Menu / Setup

FIGURE 14: SYSTEM SETTNGS COATRON X PRO/TOP

Setting/Buttons	Use Function							
Date	Set system date, use long touch on "<" ">" to scroll through the							
	values faster.							
	Shor	t touch on dat	e cha	inge the form	at (EU / US)			
	Long	touch on date	e rese	et to defaut da	ate			
Time	Set t	ne system clo	ck. Lo	ng Touch the	time to reset to default.			
Language	Selec	t the system l	angu	age DE/EN/ES	P/ITA/FR/RO/PL.			
	EN,	English,	FI,	Suomi,				
	DE,	Deutsch,	HR,	Hrvatski,				
	ESP,	Espanol,	LV,	Latviesu,				
	ITA,	Italian,	LT,	Lietuviu,				
	FR,	Francais,	PT,	Portugues,				
	RO, Romana, SE, Svenska,							
	PL, Polski, SK, Slovensky,							
	DA,	Dansk,	SI,	Slovenscina,				
	NL, Nederlands, CS, Cestina,							
	SR Srpski HU, Magyar,							

Mixer	Some reagents like PT sediment and need to be stirred Select
(not visible for Coatron ECO)	here the mixer intensity (Low/Normal/High). Insert vial and
	magnetic stirbar into middle position. Change speed until stirbar
	ensures proper mixing.
Temp	Correct the actual current temperature of the reagent block.
	Long touch the temperature value will reset to default. Detailed
	information can be read in chapter "Adjust temperature".
ОК / 🕇	Return to the home screen.
Info	Open system information.
< / >	In or decrement value. Use long touch to scroll

3.6 TEST SETTINGS

Call: Homescreen / Test button / Settings



FIGURE 15: TEST SETTING 1

Setting/Buttons	UI Element	Use Function		
LOT	LOT Number field	Press the LOT text field to enter or change LOT number.		
Expiry	Expiry date field	Press the expiry date value to select the field		
Units	mg/dl	Press to change unit		
	0-999	Result limited to unit range (min, max)		
	63 - 500	Result limited to calibrated range		
Incubation	Incubation time	Press the incubation value to select the field.		
	field			
Stop	Stop time field	Press the stop time value to select the field.		
In/Decrement	+ or -	Change the value of the selected field.		
Numeric keys	0 – 9 and C	Keys for LOT entry. C=Clear		
ОК	< OK	Save settings and exit screen.		
ESC	ESC	Exit to test selection without saving.		
Admin	Admin	Open advanced test settings. Only visible for administrator		
		user.		
Settings	Settings >	Open test calibration settings (Screen test settings 2)		
Barcode:	LOT barcode entry	Scan reagent barcode to input LOT and expiry.		

LOT:

Enter the LOT of the used reaganet for the selected test. If dual LOT is used, use the test selection screen to choose LOT 1 or LOT 2. Both LOT numbers have individual test settings.

Expiry:

Enter the expiry date of the reagent for the selected test (and LOT).

Units:

Value: Select the units used for the test results. The available unit is predefined for each test. Range: Limit results to unit or calibration range. Results out of range are reported as ">Max" or "<Min".

Incubation:

Required waiting time until adding final reagent and start measurement. The time is used for countdown.

Stop:

Some samples do not clot. Afer stop time instrument breask measurement and report "+++" (no clot detect)

Call:	: Homescreen / Test button / Settings / Settings						
<<	Setup PT						
1.	[%] 100	[s]		Norma ISI:	al (s):	13.0 1.00	
2: 3:	50 25	13.0 17.0 28.0		D	EL		+
4: 5:	13 0	55.0 0.0		0.5x	2x		++
F	R ² = 0.917	7 Y=1/X					
<	ОК	ESC		CAL		Res	et

FIGURE 16: TEST SETTING 2

Setting/Buttons	UI Element	Use Function
Calibration curve values	Value fields	Press a calibration value to select the field.
Increment	± _ ±±	Change values in small or big steps.
Decrement	+, -, ++,	Use long touch to repeat change
Double/Half	0.5x 2x	Half or duplicate values
Delete	DEL	Delete the selected value.
Reset	Reset	Reset all values to default.
Calibrators	CAL	Shift all calibration points according to serial dilution
		(1:1 1:2 1:4)
ОК	< OK	Save settings and exit screen.
ESC	ESC	Exit screen without saving.

Calibration curve:

Input of Calibration points. Minimum 2 points, maximum 5 points.

Normal:

Reference value for normal clotting time like for PT (MNPT). Only shown, if unit is selected.

ISI:

International sensititivity index of PT reagent. Value is stated on reagent label.

R²:

Linearity of calibration depending on mathematic							
R ² <0.5	not linear	Y=LIN	linear interpolation				
R ² <0.9	moderate linear	Y=1/X	reciprocal linear interpolation				
R ² >0.9	high linear	Y=logXY	double logarithm interpolation				

3.7 REVIEW RESULTS

The device holds automatically the recent 180 results into EEPROM memory. The most recent result is shown first. If the result history exceeds the memory, then the oldest measurement result is overwritten.

Cally	Homoscroop		/ Doculto
Call:	Homescreen	/ ivienu	/ Results

		#001 PID: 123	45678	ERR= 2016/12/31	TSE 12:00	
	<	PT	12.5 > 100 1.00	s % INR		>
	Filte	r 💽				
Pri	int	QC	Reset	DEL		ESC

FIGURE 17: REVIEW RESULTS

Setting/Buttons			Use Fun	Use Function					
< >			Scroll the results.						
Filter (on,of	ff)		Scroll on	ly curre	ent PID+Test				
Print			Print the	shown	result.				
00			Print & c	lisplav r	nax. 14 values	of current PID+Test			
			including	g mean	and C.V. value.				
FIB: PII	D=20190	929, n=7	QC REP0 26.09.20	DRT 019					
Mean: C.V.: FIGURE 18: QC	16.6s 2.1% C REPORT	162 mg/dl 2,9%	System: SIN : Test: PID: 	16.8s 17.1s 16.9s 16.2s 16.5s 16.4s 16.1s 16.6s	Coatron X 01040 01234 FIB 20190929 159 mg/dl 154 mg/dl 157 mg/dl 166 mg/dl 163 mg/dl 164 mg/dl 168 mg/dl				
			C.V. :	2.1%	2.9%				
Reset			Reset th	e result	view to most r	ecent result.			

Neset	Reset the result view to most recent result.
DEL	Delete current result
ESC	Exit screen.

4. BASIS COAGULATION TESTS



This section describes only rudimental how to run basic clotting tests on Coatron. Correct procedure may be different for specific reagents. Read and follow always the procedure in boxinsert of reagent kit.

4.1 QUICKGUIDE OF PT DETERMINATION

How to run a PT measurement:

- 1. Switch on instrument and wait for green state (~ 15min until 37°C).
- 2. Reconstitute PT reagent and wait 30-60 min before next step.
- 3. Place PT vial into reagent block + stirring bar and let incubate for at least 5min.
- 4. Change test of channel 1 to "PT" by pressing on the current test.
- 5. Place empty cuvette into optic.
- 6. Pipet 25µL of sample into cuvette.
- 7. Press "00:00" to start the stopwatch and wait 30 seconds.
- 8. Press specific "OPTIC" and enter a PID or scan a sample barcode.
- 9. Add 50μL PT reagent, when "Active" is blinking. The measurement will start automatically when adding the reagent.
- 10. Wait for result or touch optic button to abort.

Multi-Activation (not for Coatron ECO)

- 1. Open menu and set Auto PID = On.
- 2. Place empty cuvettes into each channel and pipet 25µL of sample to each cuvette.
- 3. Press button multistart.
- 4. Add 50µl PT in to each cuvette from left to right.

How to calibrate a PT

- 1. Reconstitute calibrator and wait 15-30min before continue with next step
- 2. Calibrators

The target value of calibrator is state at certificate. I assume 100% as example IBS, Owrens or NaCl₂ solution can be used as sample diluent

- a. 100%: Pipet 100µl calibrator into empty tube
- b. 50%: Pipet 100µL 100% calibrator + 100µL diluent into empty tube
- c. 25%: Pipet 100µL 50% calibrator + 100µL diluent into empty tube
- d. 12.5%: Pipet 100µL 25% calibrator + 100µL diluent into empty tube
- 3. Run all 4 calibrators like patients and write down the clotting time (double determination is recommended)
- 4. Enter PT settings and enter
 - a. correct LOT, Exp (read Barcode of vial label)
 - b. set UNITS to "INR + %"
 - c. Input Normal Time (=100% result) + ISI (see vial)
 - d. Input % calibration

4.2 QUICKGUIDE OF PT-B DETERMINATION

How to run a PT-B measurement from finger blood:

- 1. Switch on instrument and wait for green state (~ 15min until 37°C).
- 2. Change test to "PTB" by pressing on the current test.
- 3. Reconstitute PT-B with component-1 (Diluent) and wait 30-60 min before next step.
- 4. Add component-2 (CaCl₂) to PT-B and wait again for 30-60 min before next step.
- 5. Place empty cuvette into optic or pre-incubation.
- 6. Pipet 150µL of PT-B into cuvette. The cuvette must be used within the next 10min.
- Close PT-B vial and store in the refrigerator until next use. The reagent is stable for 30 days.
- 8. Press "OPTIC-1" and enter a PID or scan a sample barcode.
- 9. When "active" is blinking, pierce the finger and pipet 15μL capillary blood from finger into cuvette.
- 10. Measurement should start. It is important to mix in the cuvette. For this lower the pipet into cuvette and pump 10-15x up and down. Stop mixing latest when countdown is zero.

How to calibrate a PTB

- 1. Reconstitute calibrator with 1.7mL and wait 15-30min
- 2. Calibrators

The target value of calibrator is state at certificate. I assume 100% as example IBS, Owrens or NaCL solution can be used as sample diluent

- a. 100%: Pipet 100µl calibrator into empty tube
- b. 25%: Pipet 100µL 100% calibrator + 500µL diluent into empty tube
- 3. Run all calibrators like patients and write or print the clotting time
- 4. Enter PTB settings and enter
 - a. correct LOT, Exp
 - b. set UNITS to "INR + %"
 - c. Input Normal Time (=100% result) + ISI (see vial)
 - d. Input % calibration

4.3 QUICKGUIDE OF APTT DETERMINATION

How to run an aPTT measurement:

- 1. Switch on instrument and wait for green state (~ 15min until 37°C).
- 2. Change test to "APTT" by pressing on the current test.
- 3. Place CaCl into instrument let incubate for at least 5min.
- 4. Place empty cuvette into optic or pre-incubation.
- 5. Pipet 25µL of sample into cuvette.
- 6. Pipet 25µL of cold aPTT reagent into cuvette.
- 7. Press "00:00" to start the stopwatch and wait 180 seconds.
- 8. Short before end of incubation press "OPTIC-1" and enter a PID or scan a sample barcode.
- 11. Add 25μ L CaCl, when "Active" is blinking. The measurement will start automatically.
- 12. Wait for result or touch optic button to abort.

4.4 QUICKGUIDE OF FIB DETERMINATION

How to run a FIB measurement:

- 1. Switch on instrument and wait for green state (~ 15min until 37°C).
- 2. Change test to "FIB" by pressing on the current test.
- 3. Reconstitute FIB reagent and wait 30-60 min before next step.
- 4. Place FIB vial not into reagent block. Room temperature is ok.
- 5. Place empty cuvette into optic.
- 6. Pipet $10\mu L$ of sample into cuvette.
- 7. Pipet 90µL of IBS buffer into cuvette.
- 8. Press "00:00" to start the stopwatch and wait 30 seconds.
- 9. Press "OPTIC-1" and enter a PID or scan a sample barcode.
- 10. Add 50µL FIB reagent, when "Active" is blinking. The measurement will start automatically when adding the reagent.
- 11. Wait for result or touch optic button to abort.

How to calibrate a FIB

- 1. Reconstitute calibrator and wait 15-30min before continue with next step
- Calibrators
 The target value of calibrator is state at certificate. I assume 300mg/dL as example
 - a. 600mg/dL: Pipet 50µl calibrator + 200µL IBS buffer into empty tube
 - b. 300mg/dL: Pipet 50µl calibrator + 4500µL IBS buffer into empty tube
 - c. 150mg/dL: Pipet 50µl calibrator + 950µL IBS buffer into empty tube
 - d. 75mg/dL: Pipet 50µl calibrator + 1950µL IBS buffer into empty tube
- 3. Run all 4 calibrators
 - a. Add $50\mu L$ of calibrator into cuvette
 - b. Add 25µL of FIB reagent to start measurement. Write clotting times to paper or print,
- 4. Enter FIB settings and enter
 - a. correct LOT, Exp
 - b. set UNITS to "mg/dL"
 - c. Input mg/dl calibration

5. TICKET SYSTEM

1) Login to ticket system

webpage: www.teco-reg.com

* START ? Sin X0000X X0000X	Coatron X Version: V01.00.41 www.teco-reg.com SIN: 11040 01234 PIN: 12345 67890 Det=241 Remaining te	<u>sts</u> = 0		COMM = OK SWCORE = OK EEPROM = OK SENSOR = OK TEMP = II BATTERY = OK OPTIC = OK
Pin XXXXX XXXXX			ERR=TEMPERA	TURE
Login	ОК		Print	Optik >

Enter SIN and PIN of instrument! This information can be found on instrument license plate (Type label) or on info screen.

FIGURE 19: TICKET SYSTEM, LOGIN

2) Input Voucher



cuvette box

Transfer Ticket code to instrument

FIGURE 20: TICKET SYSTEM, VOUCHER

of voucher



3) Transfer ticket code to instrument

Open info screen (touch blinking RED LED) and then "Remaining tests=0". The code can be transfered by manual input, barcode scanner or TECAM SMART software.

FIGURE 21: TICKET SYSTEM, INPUT CODE

4) Using TECAM SMART software

(1) TECAM SMART V7.04 A Main Results Extra Help	dmin			7	×
1,0 0,9 0,8 5 0,7 G 0,6 A 0,5				Ticket Information G67G 961H 3666 Send	3118 Paste
u 0,4 0 0,3 0 0,3 0,2 0,1 0,0			time [s]		Edit
PID.	Name	Test	Flag	Get Ticket	Cancel

FIGURE 22: TICKET SYSTEM, TECAM SMART

- a) Use your mobile device and scan QR code or "Get ticket", if TECAM is connected to internet
- b) Follow dialogue according to chapter (1)
- c) Copy Paste the code and "send" to instrument

6. SERVICE FUNCTIONS

Only for authorized and trained persons. Unqualified modifications can cause troubles and misfunction of the system!

6.1 SYSTEM INFORMATION

Call: Homescreen / green or red LED



FIGURE 23: SYSTEM INFORMATION

UI Element	Element Name	Use Function
(1)	-	System version information
(2)	ОК	Return to homescreen
(3)	Remaining tests	Number of activates cuvettes. Touch to activate new cuvettes
(4)	Print	Print out of system information
(5)	ERR message	Show current error
(6)	Optik	Check optic system
(7)	-	System error information

System information

Version of software, URL link to register or ticket system, system ident number (SIN), product ident number (PIN). SIN+PIN is required for login to ticket system.

Remaining tests=0:

Latest at zero the system will stop operation and require to activate new cuvettes.

YELLOW warnings

Minor problems	
Reagent expired	Check expiry date of test
Remaining tests < 100	Activate cuvettes soon

RED warnings

System is not ready to measure	
COMM= communication to LIS	SWCORE = software memory overflow
EEPROM= EEPROM/memory error	SENSOR = temperature sensor
TEMP= temperature not 36-38°C	BATTERY = CR2032 on mainboard below 3V
OPTIC= optical system out of range	

6.2 OPTIC CHECK

Call: Homescreen / green or red LED / Optic



Butt	ton	Caption	Use Function	
(1)-((4)	OPTIC xx	Reset QC value	
(5)		I=mA	Display and chan	ge intensity of LED
(6)		ОК	Return to homes	creen
(7)		MAX	Set all LED to ma	x. intensity (42mA)
(8)		Print	Print system repo	ort (see next chapter)
(9)		+/-	Change temperature	
(10)	10) Reset Rese		Reset all channel	s and re-calibrate optic
Infori	mations on scree	en	Fault condition	Troubleshoot
LO	optic signal, wł	nen LED is off	> 2900	Replace optic board
HI	optic signal, wł	nen LED is on	< 25000	Remove cuvette and touch "RESET"
QC	QC noise of optic signal		> 30	Touch button "OPTIC"
mA	power of LED (intensity)	not [3 - 12mA}	Remove cuvette and touch "RESET"
TMP	temperature in	°C	not [36.0 - 38.0°C]	wait 15min

REF signal of temperature sensor not [48000 - 52000] adjust temperatur or replace sensor

6.3 SYSTEM REPORT

Call: Homescreen / green or red LED / Print

SYSTEM REPO	RT	
08.10.2019		Date of report
System: Version: SIN : PIN:	Coatron X V01.03.49 (OEM-1D) 01040 01234 12345 67890	name of system software version and OEM Index system ident number product ident number
TEMP:	37.0°C 50981 (target=51000)	temperature of optic and digital value of thermosensor
Optic: Lo Hi 1:2698 28822 2:2698 29822 3:2698 30822 4:2698 29822	MA Qc 5 1 OK 6 1 OK 7 1 OK 6 1 OK 6 1 OK	Optical values Lo= LED off Hi= LED on mA= LED power Qc= noise of optic OK= no fault !!= fault condition
PT= 123 aPTT= 102 FIB= 100 DD= 0 AT= 0		count of performed tests
TOTAL 325		

Fault condition are described in chapter "optic check"

6.4 ADJUST TEMPERATURE

Call: Homescreen / Menu / Temperature

- 1. Switch on device and wait approx. 15min until system show 37°C on screen.
- 2. Fill a reagent tube/vial with 2 ml water and place it in a reagent position. Place a digital thermometer in the reagent tube and let warm-up for approx. 10 min.

3. Press menu

Change current system temperature to value of thermometer. Wait 10min and repeat procedure.

Typical problems:

Malfunction / Error	Possible cause	Measures
System heat not up to 37°C	Sensor calibration is out of range	Reset to factory default as described in chapter "Hidden Function"
System show 0.00°C	Sensor is out of range	Ambient temperature must be 0 – 45°C.
	Sensor or optic LED board is defect	Replace LED board.

6.5 FIRMWARE UPDATE

Only for authorized and trained persons. Sudden interruption of power or data communication during update procedure will cause device not to boot anymore. In this case, the instrument can be restored only by JTAG interface.

- 1. Download flashdisk.exe from manufacturer website. Contact local distributor to receive correct URL address.
- 2. Flashdisk.exe is a selfrunning Winzip archive. A double click will start the update dialogue. Some antivirus software may block selfrunning archiv. In this case extract the file to your desktop and execute "XFlash.exe"

T TECO X-Flash 1.03	
Coatron X Update: Firmware Version 01.01.43	
Turn on your Coatron X device.	
Software Changes of Coatron X	*
Release 1.01.43 21.3.2018	
CR1: Heating during standby removed CR2: Input of cuvette ticket with alphanumeric keyboard CR3: Mirror print function to TECAM SMART	E
Release 1.01.42 19.3.2018	-
Start Update	

FIGURE 25: SCREENSHOT OF XFLASH TOOL

- 3. Confirm "Start Update"
- 4. Remove USB cable from instrument and confirm
- 5. Connect USB cable to instrument USB "Service" (=second USB port from left)

XFlash will now identify the instrument and display "CONTINUE". Abort XFlash, if no instrument is found and install device driver "FT232.exe" manually. The file is included in the flashdisk archive.

- 6. Confirm "Start Update". After this command the firmware will be transmitted to instrument. There is no way to interrupt. After around 120s the update will be finished.
- 7. Remove power and afterward USB cable from service port. Now connect power to instrument. It should boot and show correct firmware version.



6.6 OVERVIEW OF MAINBOARD

FIGURE 26: MAINBOARD

Testpin Function:

TP1 = Systick Interval, must toogle each 1ms

TP2 = indicate reading of SD24

TP3 = draw homescreen

TP4 = Write to EEprom

TP5 = Read from to EEprom

Other = not used

Status LED:

= everything OK
= EEPROM error
= Battery < 3.0V
= Temp sensor

defect optic unit and/or mainboard battery expired Optic not connected

6.7 TYPICAL FAILURES

Malfunction / Error	Possible cause	Measures	Ву
System not ready	different	Open system info and	User
		check red errors	
Remaining tests = 0	No cuvette activated	Create a ticket	User
ERR=Comm	Mainboard defect	replacement	Authorized service
ERR=SWCORE	Software failure or bug	Update firmware	User
ERR=Sensor	Temp sensor defect	Replacement of optic	Authorized service
ERR=Temp	Temperature out of 36-	Wait 15min	User
	38°C		
ERR=Optic	Optic channel blocked or	Remove cuvette from	Authorized service
	LED defect	optic or clean optic or	
		replace optic	
ERR=Battery	Battery low power	Replacement	Authorized service

False results	Possible cause	Measures
	True, patient anti coagulated or bleeding	Remove cuvette and check with needle for clot
No or false clot	Reagent defect	Check reagent with eyes for flakes or clots. Run control plasma to verify. Prepare new vial. Check diluent/water
detected	Instrument missed clot	Increase MAX time
	Low fibrinogen or optical interference (lipemic, bilirubin, haemolytic)	Repeat but activate hi-sense option
False result (INR, %, mg/dl,)	Method not correct calibrated	Check calibration data and correct LOT

Invalid cuvette ticket	Possible cause	Measures
LOT invalid	The voucher ticket already has	Use a new voucher
	been used on system.	www.teco-reg.com
S/N invalid	The SIN number of voucher	Enter the voucher ticket code only on
	ticket information is not equal	the correct target device
	to S/N of instrument	
Code16 invalid	System does not accept	Re-use voucher @ (<u>www.teco-reg.com</u>)
	Code16	to obtain Code20 voucher tickets.
Invalid	System does not accept	Visit <u>www.teco-medical.com\support</u>
	voucher ticket for an unknown	and "report a problem". Provide
	reason	information about VIN , SIN and
		Code20.

7. RESET TO FACTORY DEFAULT

System factory reset procedure:

SIN: 12345 67890 PIN: 09876 54321 Varian: 1 01 42	(zone-1)	Factory	(zone-2) Default
Version: 1.01.42	(zone-3)		
		**	***
0 ₀ 0	ОК	ESC	Ticket Code >

WELCOME SCREEN +

FACTORY DEFAULT

How to reset to factory default:

- 1. Press 3sec to spinner during boot up
- 2. Select "OK" Switch on device and switch to home screen
- 3. Confirm the reset

Date, temperature and test calibration must be adjusted after a factory reset!!

Default values:

- Temperature sensor = 51000
- Mixer = 1;
- Language = EN;
- Double determination = OFF;
- Auto PID = ON;
- Countdown = OFF;
- All results stored on board are deleted
- All test calibration data are reset to default

Test calibration:

How to reset to factory input a PT calibration:

- 1. Switch on device and switch to home screen
- 2. Touch any test button
- 3. Change test to "PT" and touch "Setup" or scan barcode of PT vial
- 4. Enter LOT, expiry and select Units to "% + INR"

8. WORKING WITH TECAM SMART

Detailed information about installation and operation be be read in the online manual of TECAM. This is just a quick overview.

TECAM software is a small local LIS and combines laboratory data management, quality control and research purpose in one. It connects the Coatron to the "big" LIS and and manange results in an own local database. Flexible filters allow QC with Levey-Jennings graph and Westgard analysis. Each result can be traced back to reagent lot and calibration.

Features	Smart
Receive result from analyser	The results can be reported and manage in a locl database
Receive calibration curve from anaylser	Visualize and manage calibration data for all reagents and LOT.
Receive reaction curve	Visualize the optical reaction for research, result verification or failure anaylsis
Patient information	Connect Patient-ID with name and other information.
LIS communication	Talk to LIS with ASTM-1394 standard protocol Receive from LIS: Patient information Send to LIS: Results
Statistical analyze (QC)	Power filters allow quality evey-Jennings graph and Westgard analysis for controls as well as for patients
integrated TECMONI	This is a powerful research tool to visualize raaction curve in real time. It is a great tool for reagent development or adapting nee tests to instrument
Mirror print	Instead of expensive portable thermo printer, use TECAM as printer
Ticket system	Activation of cuvette in its easiest way. Connect to ticket system, receive ticket and send to instrument



FIGURE 27: TECAM SMART

9. CLEANING AND MAINTENANCE

9.1 GENERAL CLEANING INFORMATION

- Clean with a lint free cotton cloth or stick
- Never pure any liquid into optic, working area or touch display
- Keep the device free of dust and moisture.
- If the device is soiled with liquids, remove the soiling with an absorbent cloth.
- If a liquid has accidentally been spilt or pipetted into a measurement channel, remove power immediately and clean the measurement channel with pipette and a lint-free cloth. Check the function of the optics in the menu SERVICE



Regard all surfaces and materials, which might be in contact with plasma or other biological liquid as potentially contaminated with infectious material.



Avoid any direct contact with decontaminants or disinfections.

9.1 CLEANING

- Use microfiber tissue only and no liquid to clean the screen
- Clean and wipe up all spills around the working area with 5-10% diluted bleach detergent or water.

9.2 DECONTAMINATION

- Use 30% diluted bleach and commercial disinfectant (e.g. Bacillol®AF)
- Decontaminate working area. Don't apply liquid on display.

9.3 REGULAR MAINENTANCE

• No maintenance required

10. TECHNICAL DATA

Analyzer		
Display		capacitive touch sensitive TFT 4.3" 480x272
Measurement syste	m	1-4 independent measurement channels wavelength of LED 405 nm / 620 nm
Cuvette		single channel cuvette for optical detection
Positions (prewarm	ed)	5 reagent positions at 36.5 – 37.5 °C 20 cuvette positions at 36.5 – 37.5°C
Reaction volumes		Minimum total volume is 75 μl
Power supply		
Input Power		100 – 240VAC/50-60Hz/600-300mA
Output Power		5V DC, 5A
Batterie (mainboard	(k	Lithium CR2032 3V
Power consumption	۱	max. = 14W sleep < 0.5W
Dimensions		
Size (W x D x H)		225 x 150 x 90 mm
Weight		1.04 kg (without power supply)
Ambient conditions	5	
See chapter "Install	ation"	
Noise output		
Operating noise		max. 50 dBA
I <mark>nterfaces</mark>		
RS232 (Barcode)		Sub-D9, female; 9600 Baud/8/1/N; Pin-9 powered with 5V DC. For external handheld barcode scanner, serial printers
RS232 (Printer)		Sub-D9 female; 9600 Baud/8/1/N; For serial printers
USB (Service, Firmw	are Update)	Type-B, female, 115200 Baud/8/1/N
USB (LIS)		Type-B, female, 115200 Baud/8/1/N; For LIS communication
Typical performance	e data	
Test	CV.	Range
PT	<3%	0-30 INR
APTT	<3%	15 – 420s
FIB	<7%	50-999mg/dL

11. INDEX

+++	30
admin	29
Ambient conditions	47
auto pid	26
barcode 23, 2	4, 29
Barcode	19
Barcode Scanner	47
Bilirubin	11
CAL	30
Calibratrion	29
CLEANING	46
Clot	13
countdown 2	7, 30
Cuvette	47
date	28
Decontamination	46
double	27
ECO PRO TOP	9
Err E	25
Err S	25
Err T	25
error	37
expiry	29
Factury Default	44
Filter	31
FirmWare Update	41
FIRST installation	17
flag *	25
flag f	25
flag F	25

flag X	25
gray	22
green22	, 25
Hemoglobin	11
hi-sense	23
home	27
Homescreen	22
incubation27	, 30
Info Screen	37
Intended Use	9
invalid ticket	43
ISI +normal	30
Keypad	6
language	28
LIS	22
long touch	22
lot	29
LOT1,2	24
mainboard	42
Maintenance	46
measurement screen	25
mixer	28
mOD	25
Optic	38
orange22	, 25
Printer	19
PROTECTION FOIL	19
QC	31
red22	, 37
Registration	21

results27
Safety information14
Scope of delivery15
screensaver22
sleep27
Sleep
Specimen11
standby27
Standby18
stop
switchin on/off18
Symbols6
system report39
system settings26
Tecam Smart45
TECAM Smart
TECAM SMART20
temperature 22, 28, 40
Test selection24
Test settings29
Thrombin13
ticket
Ticket35
Triglyceride11
units
VIEW7
Voucher35
Wavelength47
yellow22, 37