 
 



TV Wall Mount



 Download Assembly Instructions with Text

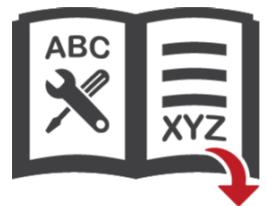


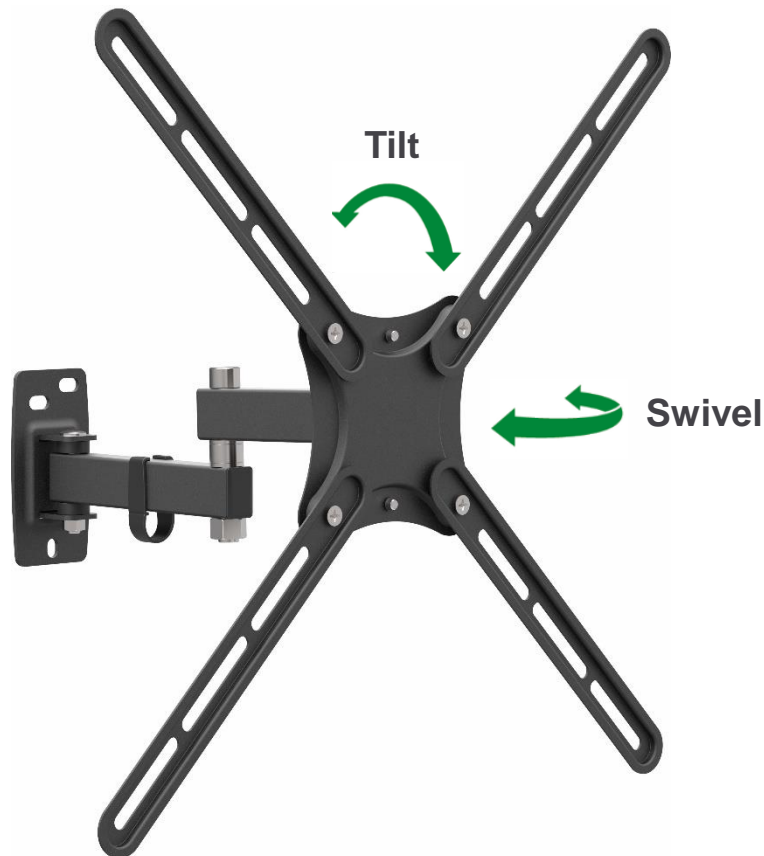


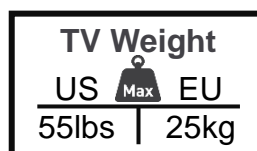



For more information: **barkanmounts.com**

 If you are satisfied with the product, please give us a 5 stars ★★★★★ rating on the website you bought it from. If you are not satisfied please contact us at <https://www.barkanmounts.com/support> and we will solve the problem for you.

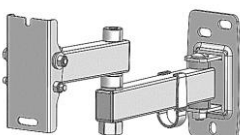

  **Safety instructions and installation warnings (provided separately)
must be read in full, prior to assembly.**


Included Parts not to scale

A Bracket  x1	B TV Plate  x1	C Adaptor  x4	
Z4  x4	Z7  x4	Z8  x4	Z9  x4
W1  x3	W2  x3	W3  x3	




#	M	L mm	L inch	pcs
Z1	6	16	5/8	4
Z2	6	25	1	4
Z3	4	20	3/4	4
Z5	8	25	1	4
Z6	8	45	1 3/4	4

 Required Tools

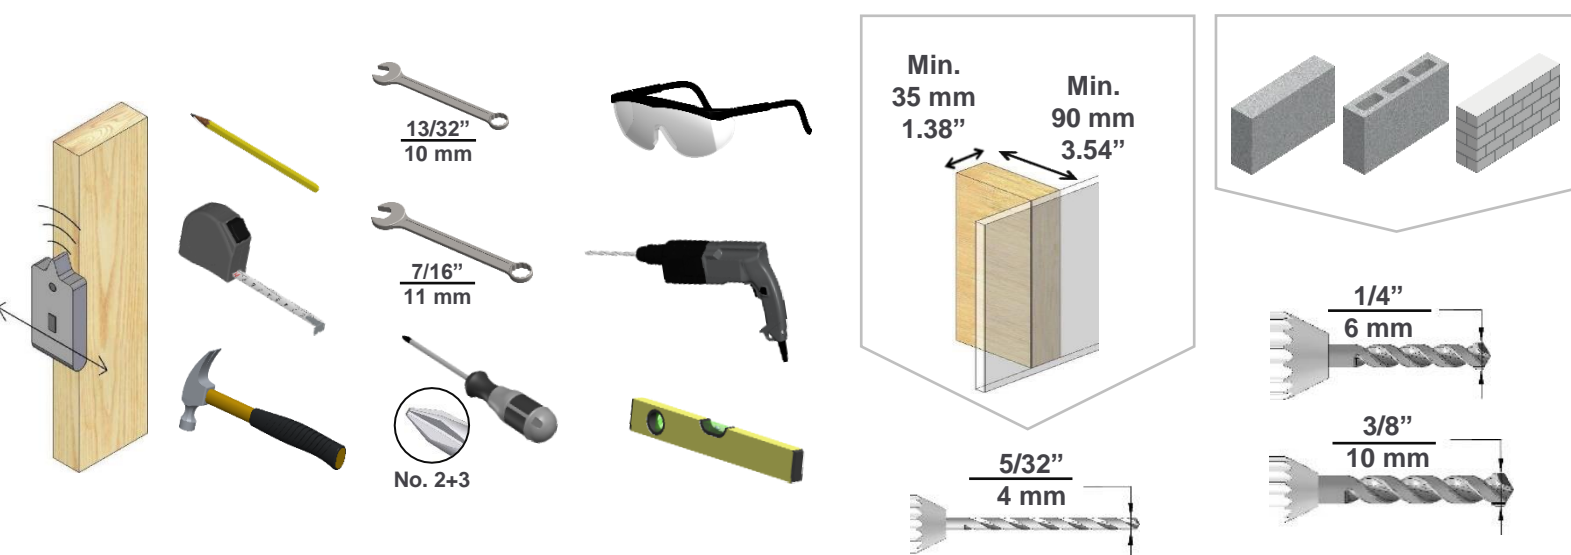


 Connect the TV plate to the back of the TV

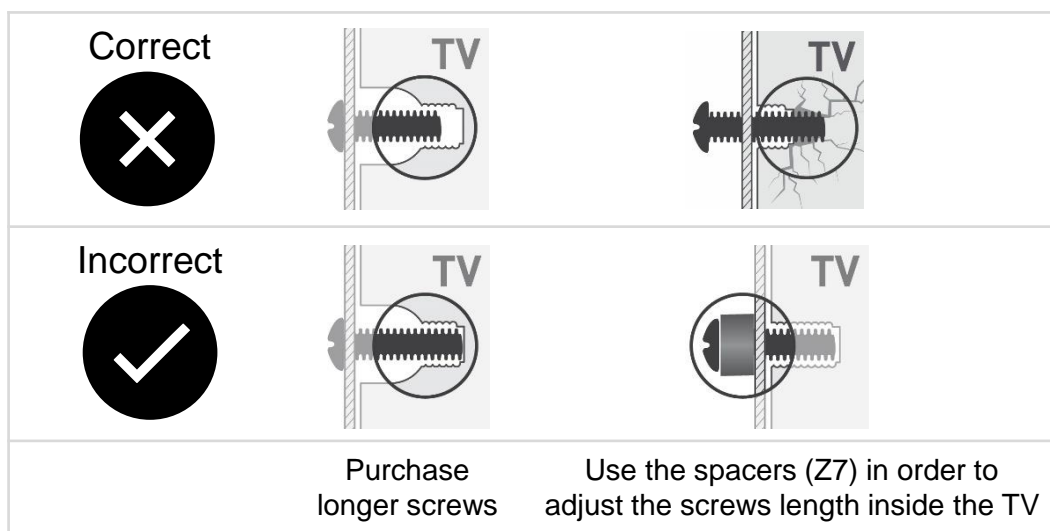


1

 Continue according to your TV mounting hole pattern

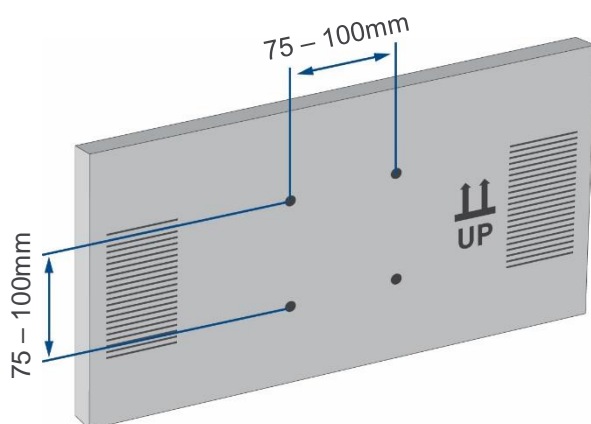


1a

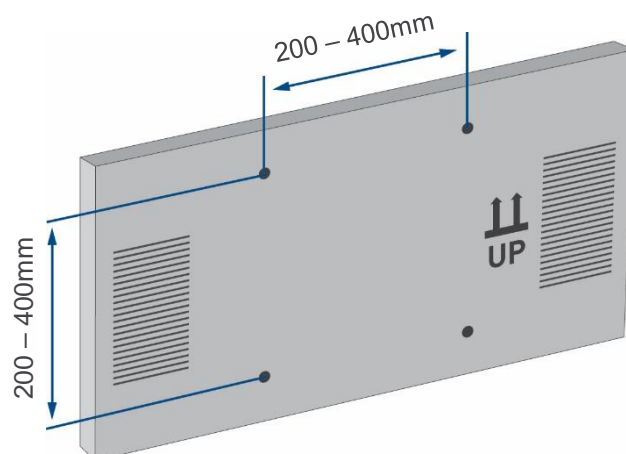 

1b

 1a 75x75 mm up to 100x100 mm hole pattern




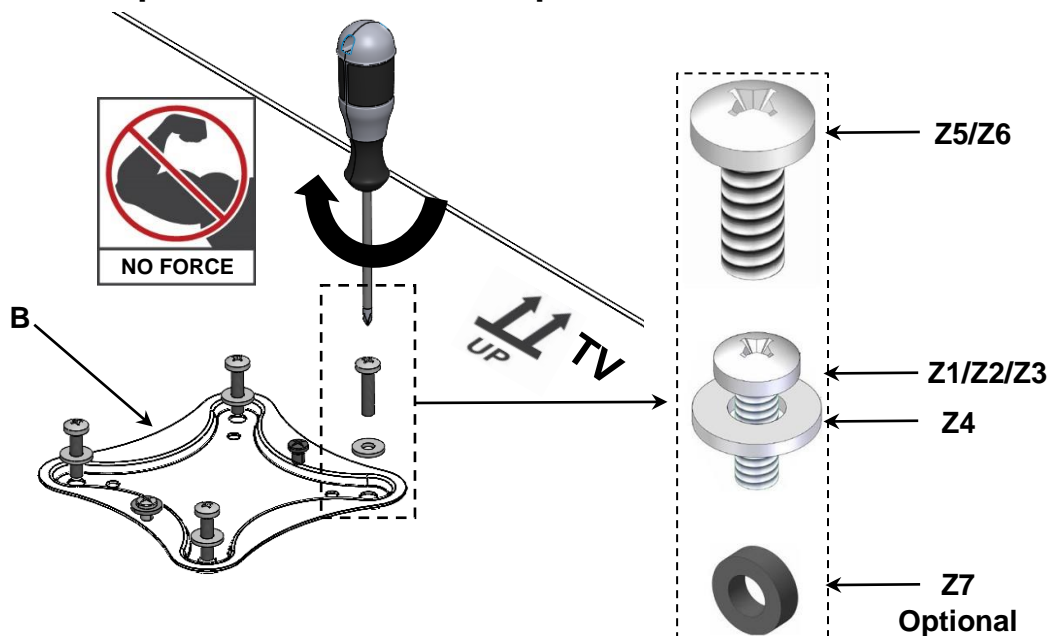


2

1b


Hole pattern 100x200 mm up to 400x400 mm:

    Connect the 4 Adaptors to the TV Plate with Z8 screws and Z9 nut.

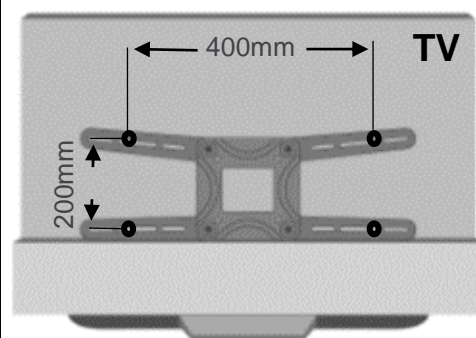
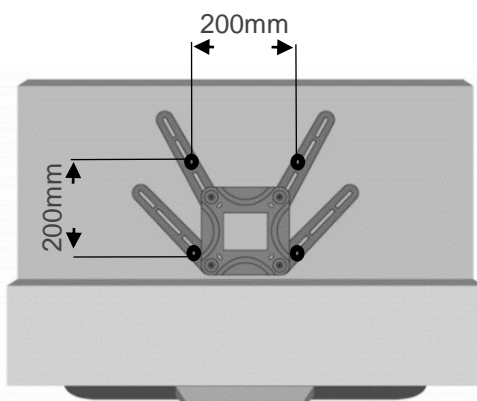
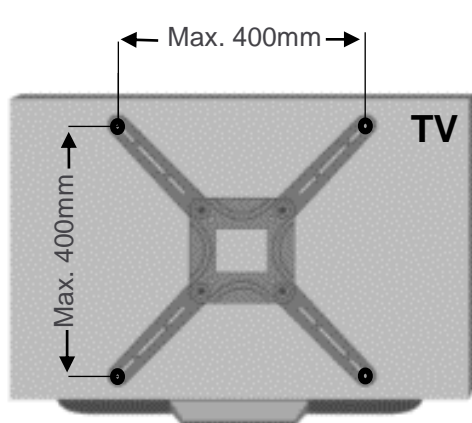
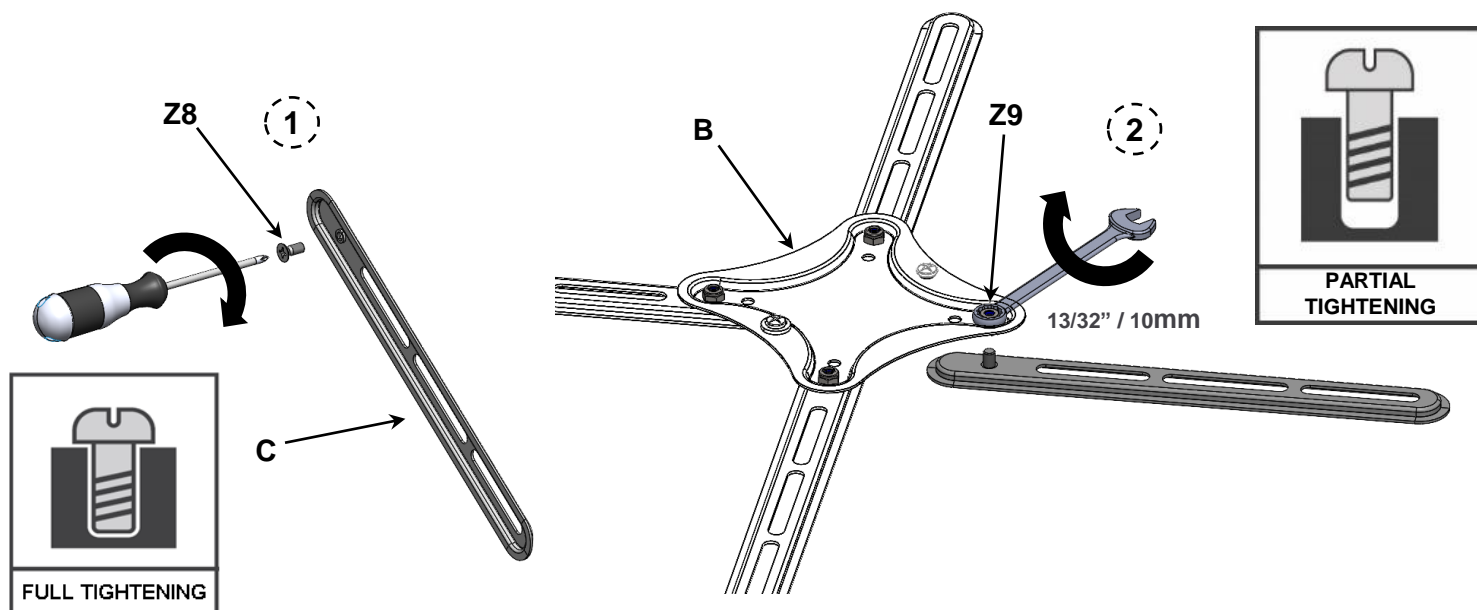


For more positioning options please go to the last page

 Connect the TV Plate with the Adaptors to the TV in all 4 mounting holes

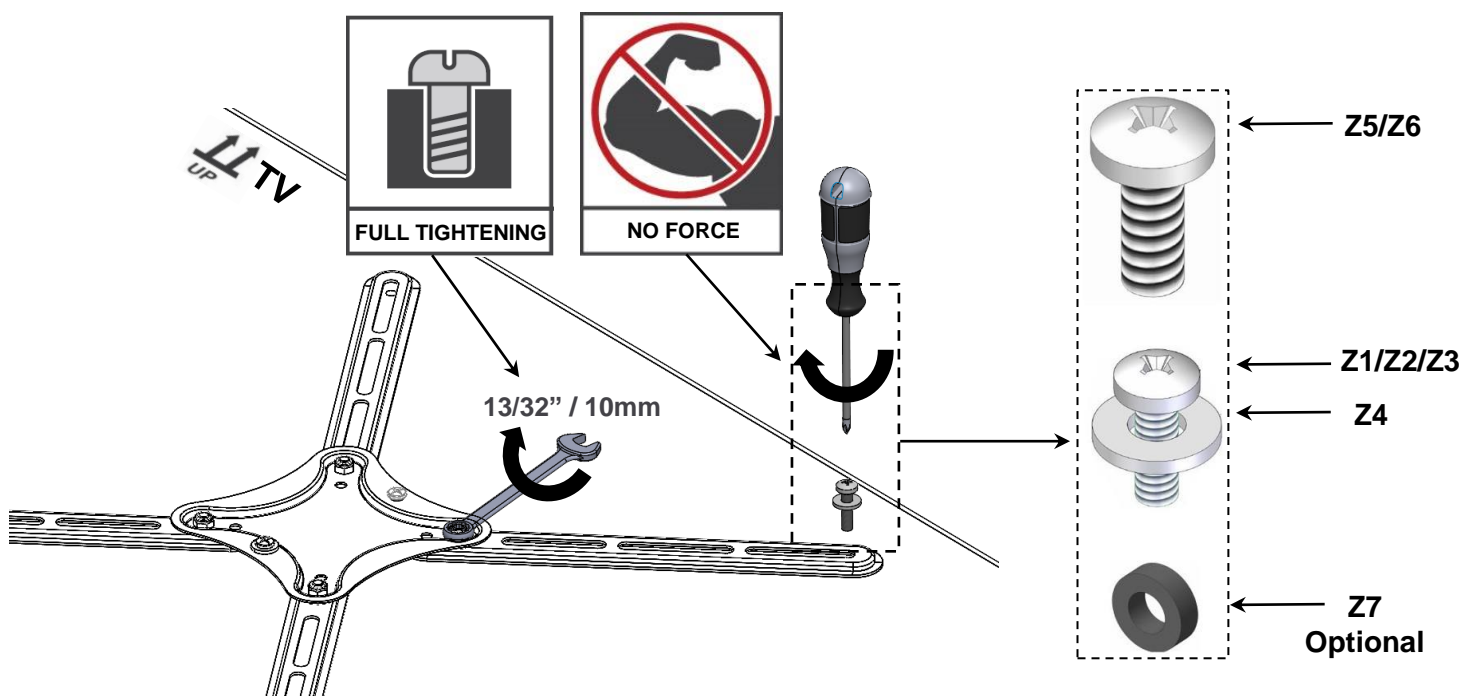

    Measure the distance between the location of the TV's mounting holes' center and the bottom of the TV, in order to set the required height of the TV

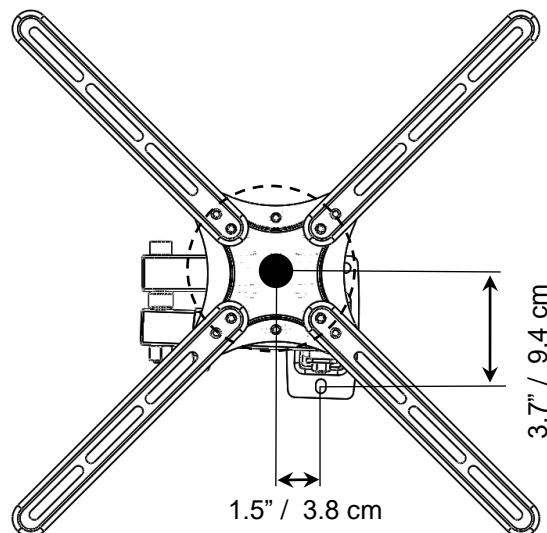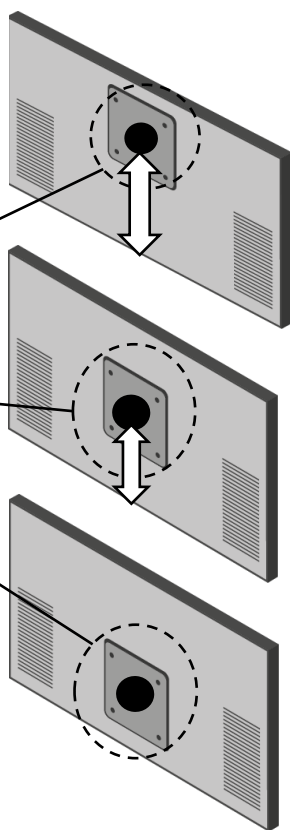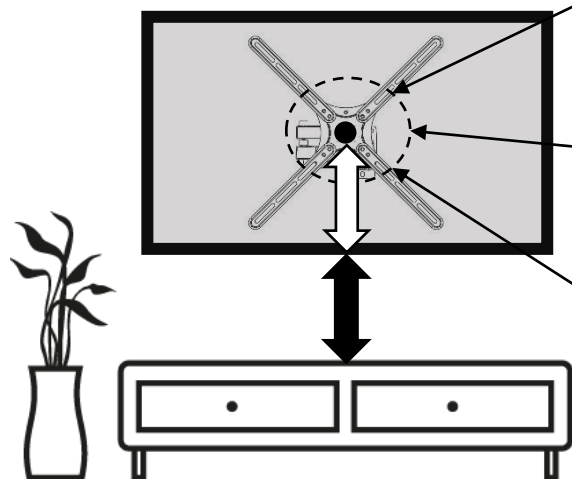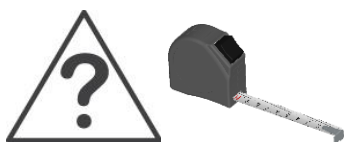





<https://www.barkanmounts.com/faq>

3

Min.
35 mm
1.38"


Min.
90 mm
3.54"

    Follow the steps according to your wall type

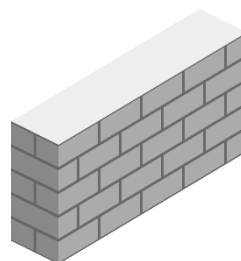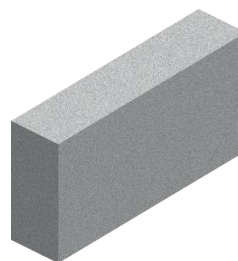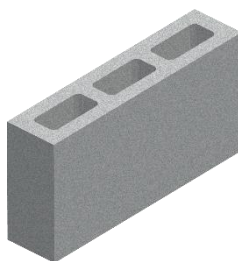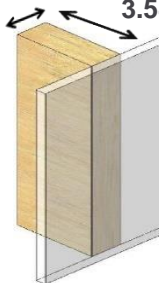


Mark the holes on the wall according to the required height

 3a

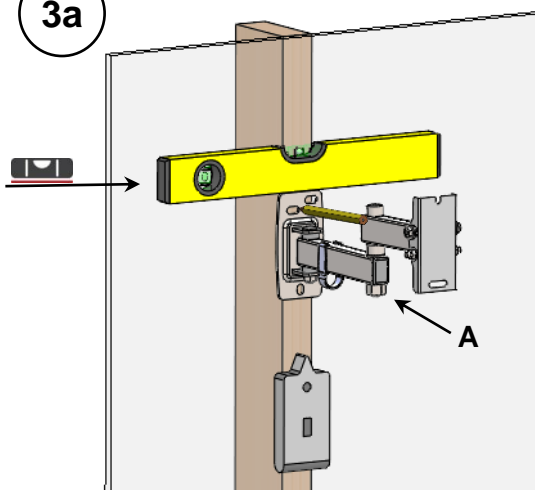


Use a Stud Finder


 
3b

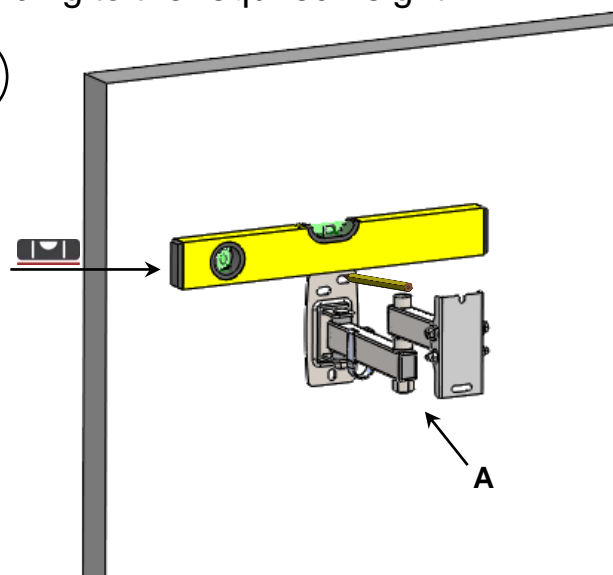

 3a Make sure all holes are drilled inside the studs

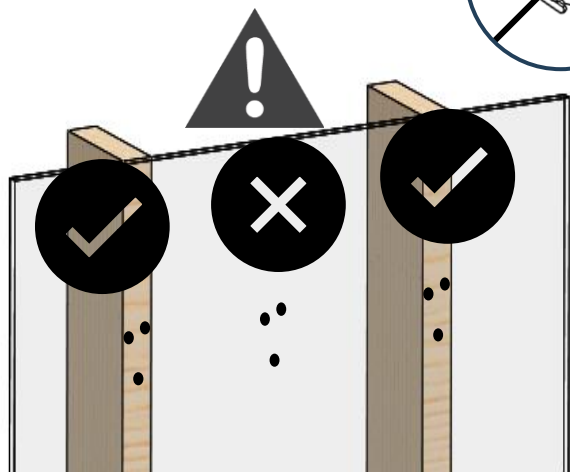


Drill with 5/32" \ 4mm drill bit


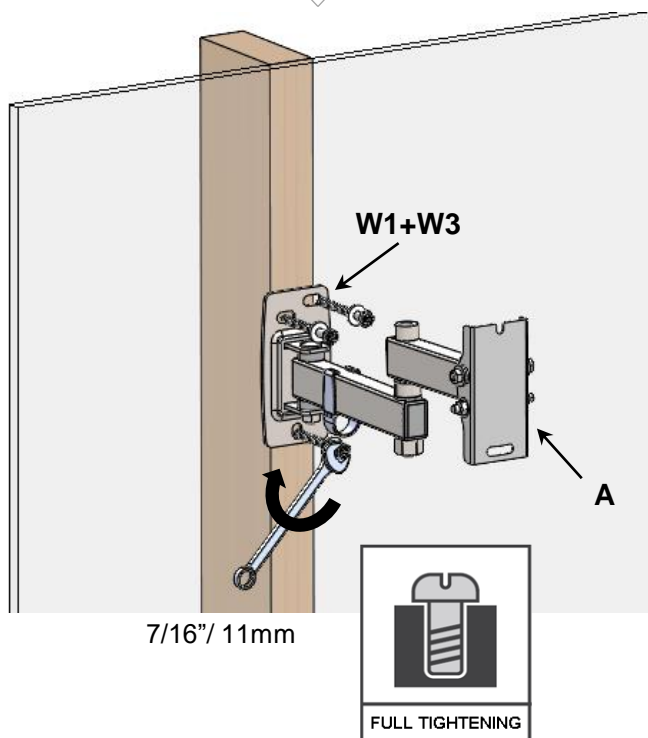 
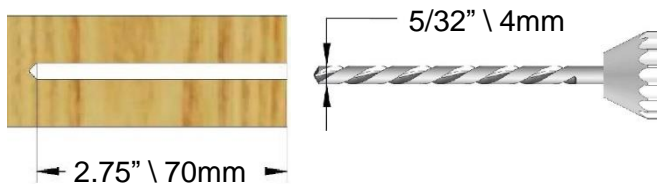 


3b


 
First use 1/4" \ 6mm drill bit

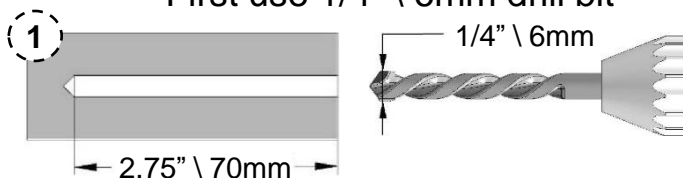

Afterwards use 3/8" \ 10mm drill bit




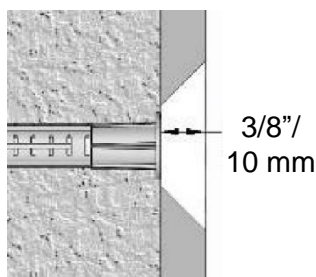 
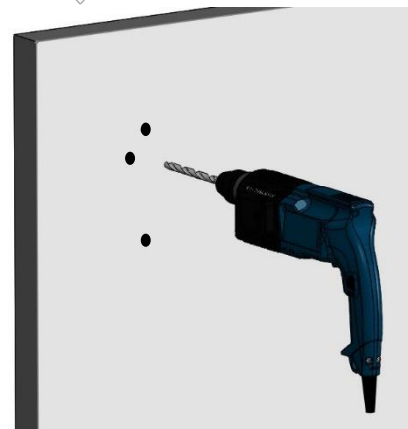 
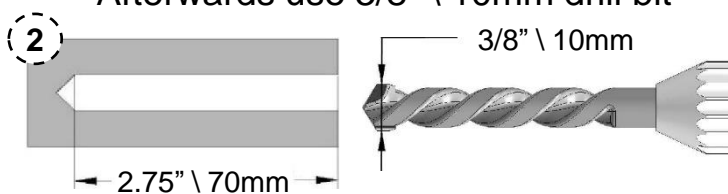 


  The anchor must be sunk at least 3/8"/10 mm into the plaster coating

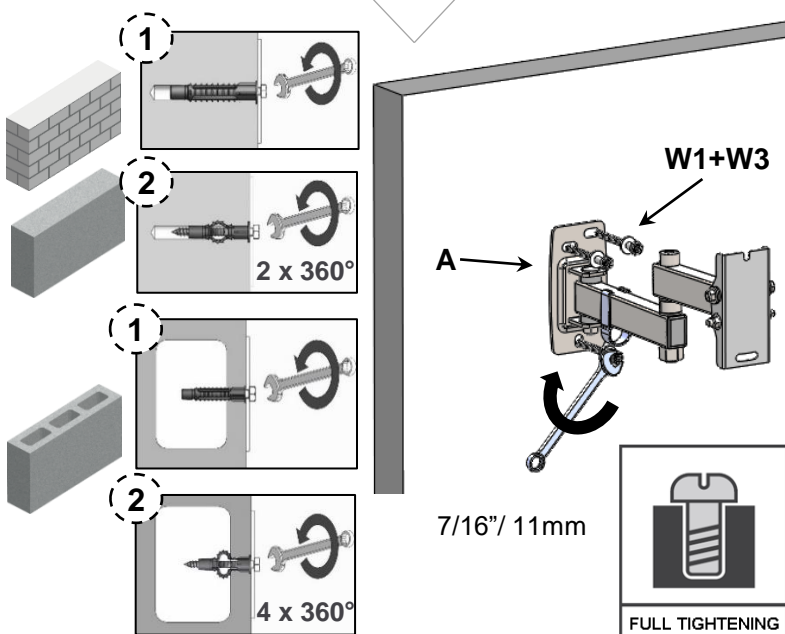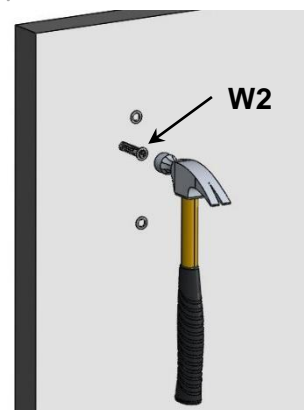

4 Weight test

      
Apply force on the upper part of the Bracket and make sure it is well connected

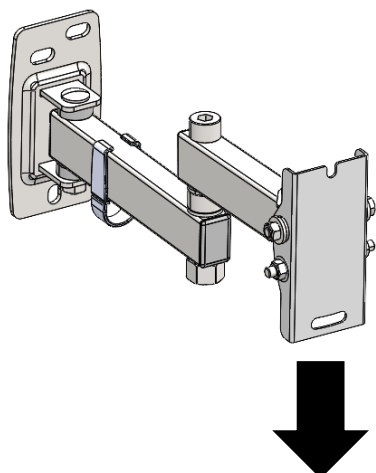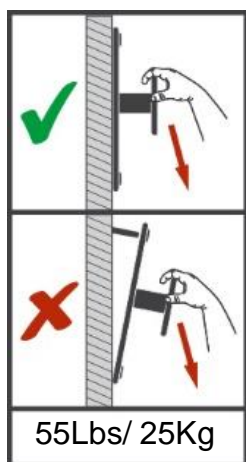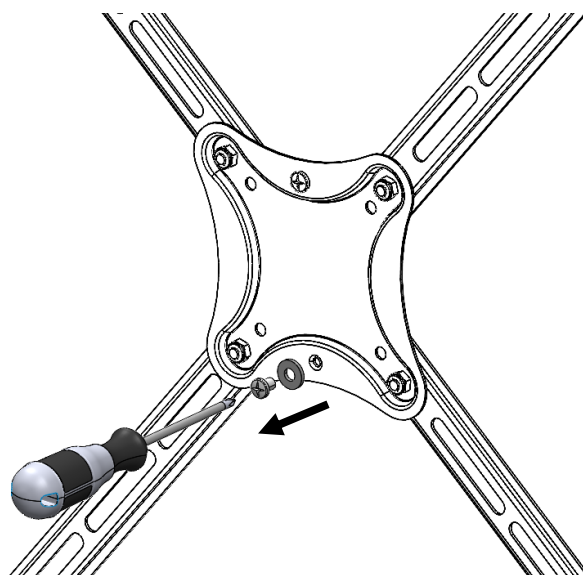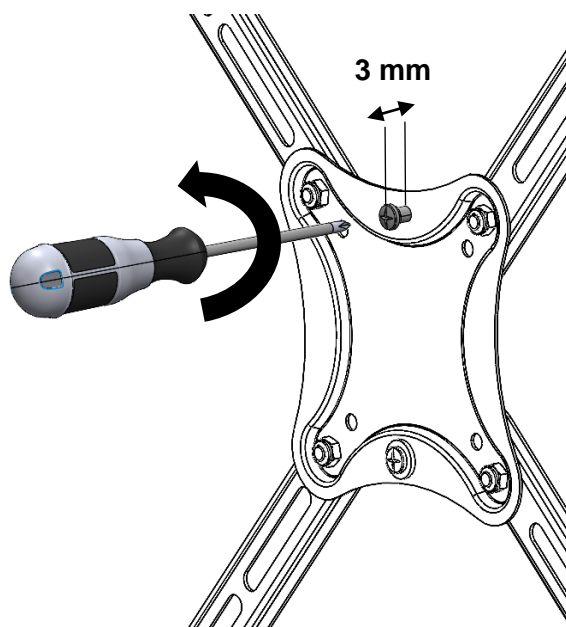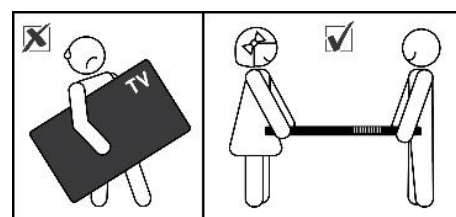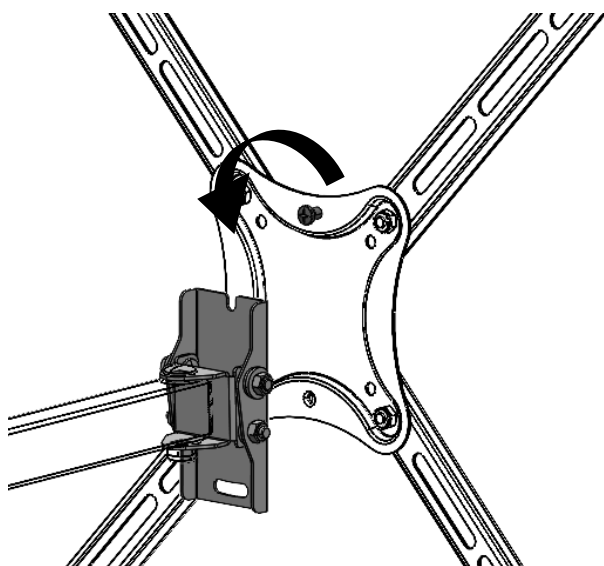**5 Remove the bottom screw and washer****6 Release the upper screw 3mm out****7 Hang the TV with the TV Plate carefully on the Bracket.**


Make sure the TV plate's upper screw is positioned properly in the designated bracket slot

8 Connect the TV with the TV Plate to the Bracket

 Tighten screw #1 and assembled screw #2 with the washer

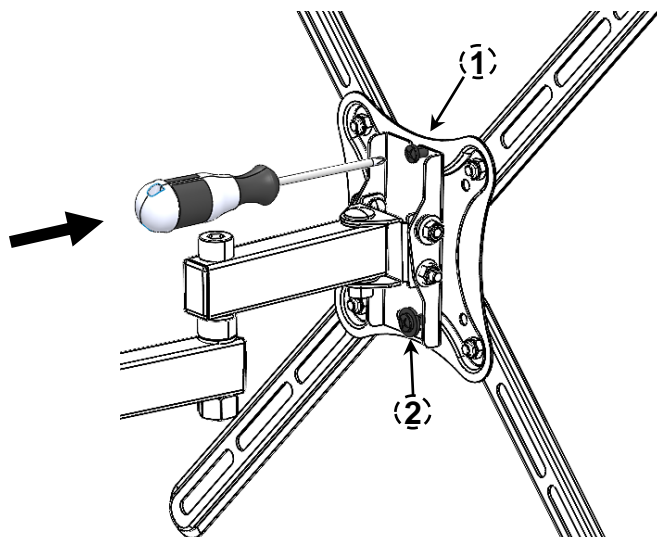



9 Adjust the friction of the tilt

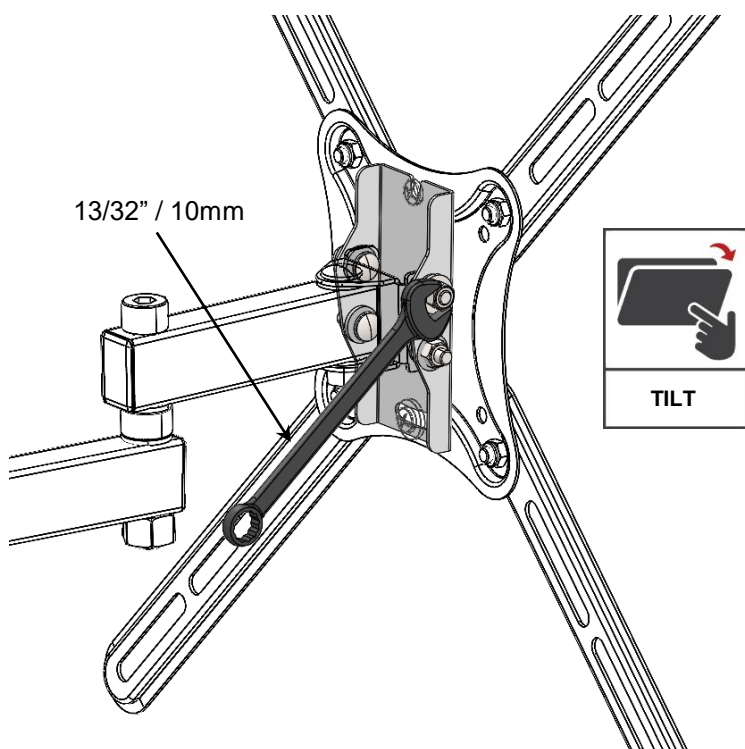 

10 Level the TV according to your needs



 
 
Move the TV - by pulling/pushing the Bracket (A). Be careful when you move the TV by the screen.

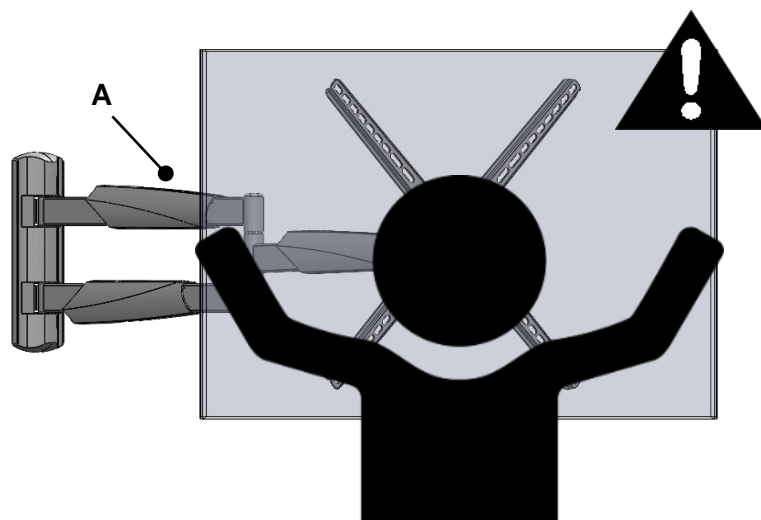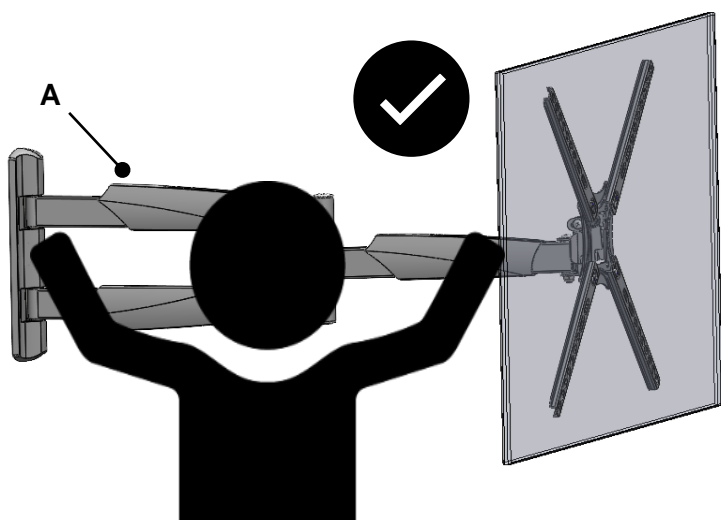

Biannual safety inspection



  Secured to wall

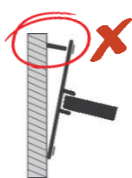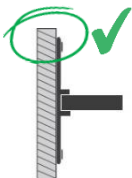

Tightened bolts



Lubricated hinges



 
BACKSCREEN CONNECTION POSITIONING OPTIONS

All TV backscreen connections are in millimeters (Width x Height).


There are a few sizes of TV plates available.

The backscreen connections in position 1 are included in some of the different TV plates, according to their size, and do not require the use of the 4 adapters (marked in blue).


1 75x75, 100x100,
100x200, 200x100, 200x200

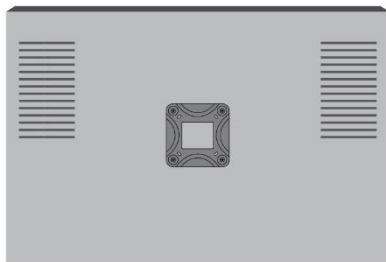


2 200x100, 300x200,
400x200, 600x200

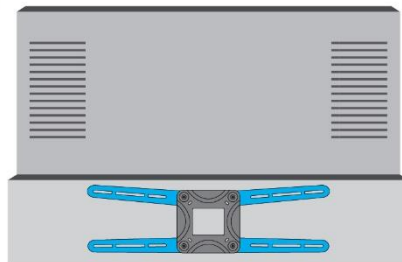 

 
3 200x100, 300x200, 300x300,
400x200, 400x300, 600x200, 600x300

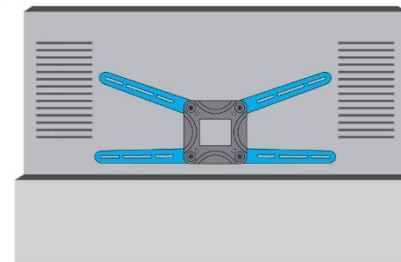

 
4 100x100, 200x200, 300x300
*Less stable than option 5

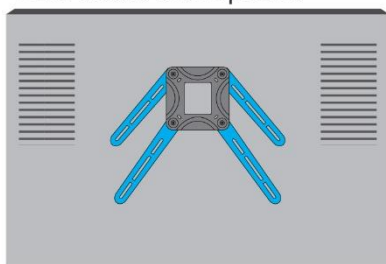


5 100x100, 200x200, 300x300

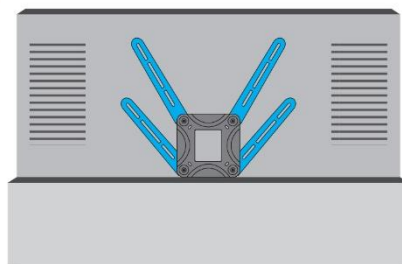 


6 100x200, 200x300

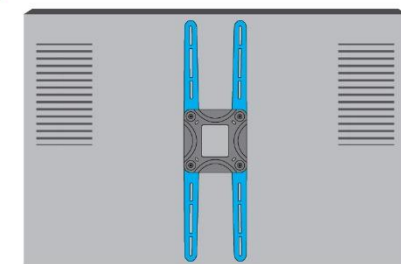 

 7 100x100, 200x200, 300x300,
300x400, 400x400, 600x400

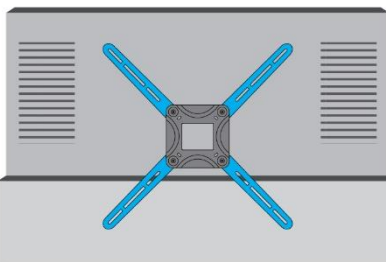

 8 200x100, 300x200,
400x200, 400x300, 600x400

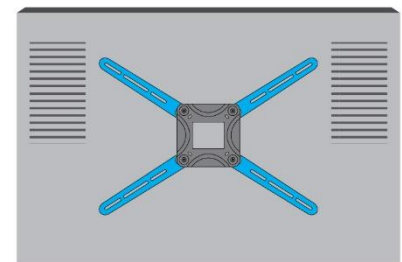

If your backscreen connections are not included in any of the positions, please contact us

www.barkanmounts.com/support

