

inner side of the roller, the printer will automatically enter after sensing the paper, and finally hang the origami recycling tank.

Turn on the power supply of the printer, press the paper feeding key to see if the paper is crooked. If the paper is found to be distorted, loosen the printer head buckle, adjust the position of the paper, and lock the printer buckle again.

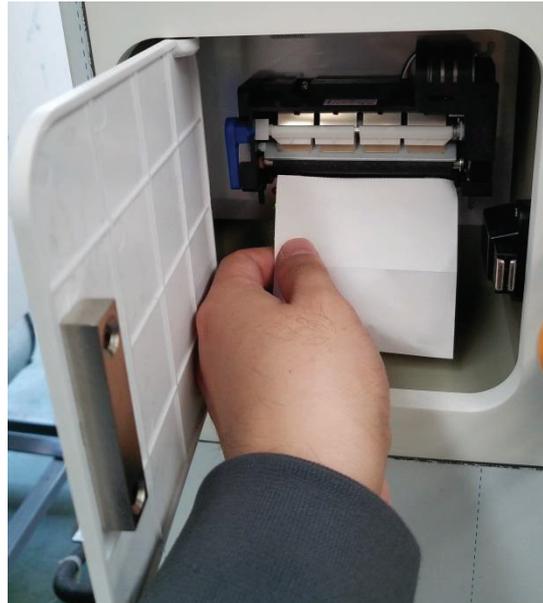


Fig. 8-4 Schematic Diagram of Printer Paper Change

2) Cleaning and maintenance

After the **thermal printer** is used for a long time, some dirt will be left on the thermal strip and roller, which will affect the use and service life of the printer if it is not cleaned in time. We suggest that you do a good job of cleaning from time to time. Remove the origami recycling tank, loosen the printer head buckle, dip a little alcohol with a cotton swab, and gently wipe the printer thermal head and roller.

8.5. 5 System parameter initialization

The data and clock inside the controller are maintained by battery power inside the controller.

When the touch screen prompts the alarm message "[109] PARAMETER