

Rotation Around the Horizontal Axis

1. While pressing the  button on the operation panel, hold the grip and rotate the column.
2. When reaching the intended position, release the  button. This will lock the Tube Stand.



Do NOT rotate the tube more than 180 deg (tube facing upward).
Doing so may cause the cables to be pulled and damaged.
