


R-SW touch screen control panel

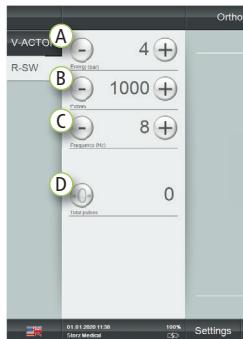

- (A) Setting the intensity level
- (B) Setting the number of pulses
- (C) Setting the frequency
- (D) Resetting the pulse counter/ display of pulses administered


R-SW handpiece control panel



- (E) Trigger button
- (F) Reduce intensity level
- (G) Increase intensity level
- (H) Reduce frequency
- (I) Increase frequency
- (J) Intensity display/pulse limit/ pulse counter/frequency


Reset pulse counter by pressing both (F) and (H).

V-ACTOR® (optional) touch screen control panel

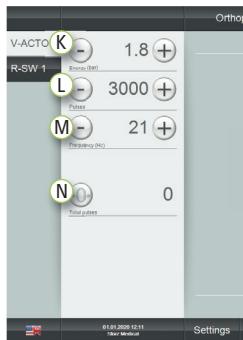

- (K) Setting the intensity level
- (L) Setting the number of pulses
- (M) Setting the frequency
- (N) Resetting the pulse counter/ display of pulses administered

Main screen

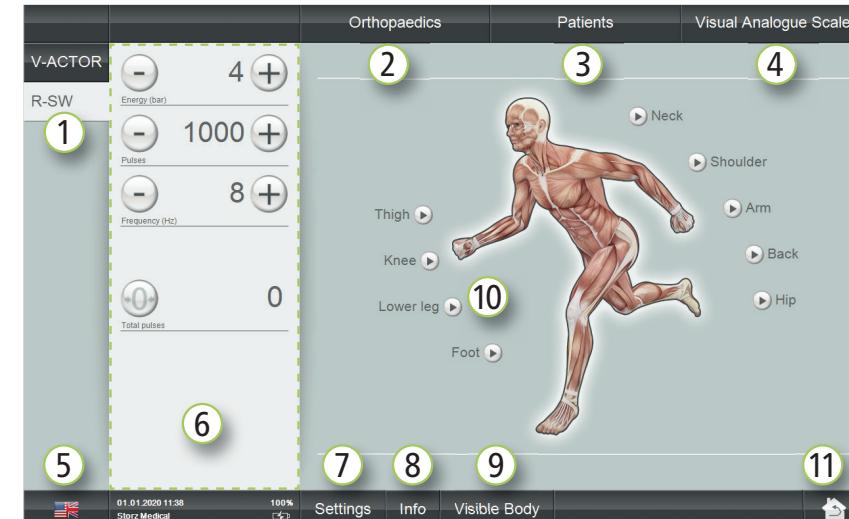

- (1) Operating modes (selectable only with handpieces connected), active mode is highlighted in white
- (2) Indication selection/management
- (3) Patient records/management
- (4) Visual Analogue Scale
- (5) Language selection
- (6) Control panel
- (7) System settings
- (8) Info (version and device data)
- (9) Visible Body® (digital anatomy atlas)
- (10) Indications selection/management via treatment zones
- (11) Return to main screen

R-SW key handpiece functions

(only when a touch screen is not attached)

- Pressing both (G) and (I) takes you to the main menu.
- Pressing (F) and (G) switches between menu items (Pulse limit/Information).
- Pressing (I) takes you to the respective menu.



Pulse limit menu

- Press (F) or (G) to reduce or increase the pulse limit (increments of 50) and then confirm the nominal pulse value by pressing (I).
- Press (H) for the main menu.



Information menu

- Press (F) or (G) to switch between the information menu items.
- Press (H) for the main menu.


System information items are listed in the user manual.

Getting started

- Start by pressing the On/Off button (E) located on the front of the device. The start-up process takes up to 2 minutes.
- You can operate the device with either the handpiece or via the touch screen control panel (optional).
- Please confirm the flashing display on the handpiece by pressing the trigger button (E).

Recommended indications (touch screen)

- Press the home button (H) for the main screen.
- Select indication (2).
- Follow the on-screen instructions.

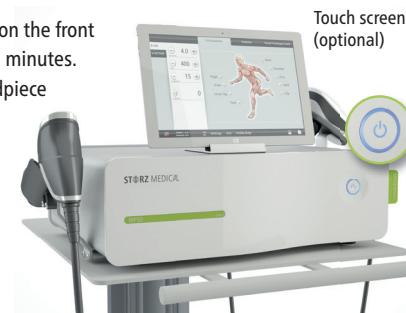

Step 1

V-ACTOR®

- Pulses 3000 per session
- Intensity 1.8 – 3.0 bar
- Frequency 21 – 50 Hz

Step 2a

R-SW with D-ACTOR® transmitter

- Pulses 4000 per session
- Intensity 0.3 – 2.5 bar_{eff}
- Frequency 14 – 16 Hz

Step 2b

PERI-ACTOR®

- Pulses 2000 per session
(3 x per muscle chain)
- Intensity 0.3 – 2.5 bar_{eff}
- Frequency 16 – 21 Hz

Step 2c

Alternative/complementary to Step 2a

SPINE-ACTOR®

- Pulses 2000 per session
- Intensity 0.3 – 2.5 bar_{eff}
- Frequency 12 – 16 Hz

Step 3

R-SW with radial transmitter

Treatment recommendations		Step 1: V-ACTOR®
Indications	Vibration head	V25
Achillodynia		D20-S/D20-T*
Plantar fasciitis/heel spur	V25/V40	D20-S
Tibial stress syndrome	V25/V40	D20-S
TP/SWA – calf muscles	V25/V40	D20-S/D20-T*
Patellar tendinitis	V25/V40	D20-S/D20-T*
TP/SWA – thigh muscles	V10/V25/V40	D20-S/D35-S*
Trochanteric tendinopathy	V25/V40	D20-S/D20-T*
TP/SWA – lumbago	V25/V40	D20-S/D20-T*
TP/SWA – dorsalgia	V25	D20-S
TP/SWA – cervical syndrome	V25	D20-S
Calcific tendinitis	V25/V40	D20-S/D20-T*
Lateral/medial epicondylitis	V25/V40	D20-S
TP/SWA – cervical spine muscles (atlas)	V25	D20-S
TP/SWA (Trigger points/Shock wave acupuncture)		

Step 2a: R-SW

Step 2b: PERI-ACTOR®

Step 2c: SPINE-ACTOR®

Step 3: R-SW

Pulses/ session	Intensity (bar _{eff})	Frequency (Hz)	Transmitter
2500	0.3 – 2.5	12 – 16	R15/C15*
2500	0.3 – 2.5	12 – 16	R15/DI15*
2500	0.3 – 2.5	12 – 16	R15/F15*
2500	0.3 – 2.5	12 – 16	R15/DI15*
2500	0.3 – 2.5	12 – 16	R15/C15*
2500	0.3 – 2.5	12 – 16	R15/DI15*
2500	0.3 – 2.5	12 – 16	R15/DI15*
2500	1.0 – 2.5	12 – 16	R15/A6*
2500	0.3 – 2.5	12 – 16	R15/C15*
2500	0.3 – 2.5	12 – 16	R15/T10*
2500	0.3 – 2.5	12 – 16	R15/DI15*
2500	0.3 – 2.5	12 – 16	R15/F15*
400 – 600	0.3 – 0.8	8	ATLAS

* (optional)