


8.1.2 Stray Radiation in the Significant Zone of Occupancy

The significant zone of occupancy to be used by the operator and medical staff for examination/medical treatment shall be defined as follows: The examinations requiring a work in the significant zone of occupancy are myelography, ERCP, urography, videofluorography, etc.

Horizontal Position

The significant zones of occupancy are as follows:

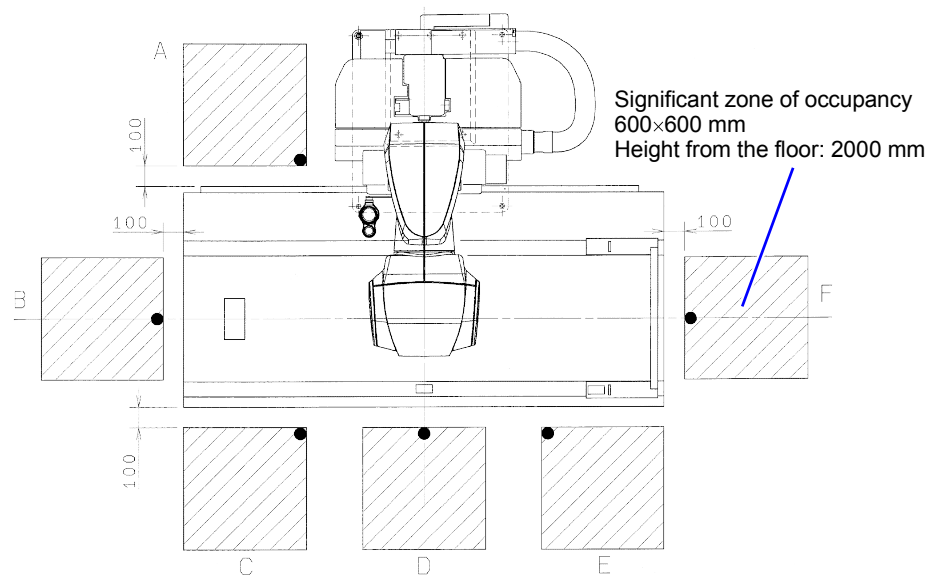

The following graph shows the stray radiation doses measured at the points marked with (●) in the figure above.

