


Volume Adjustment

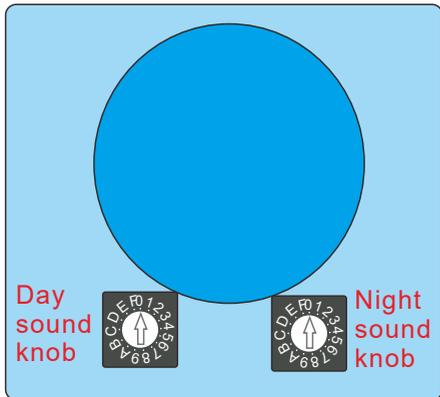

Day and night volume adjustment

Default day volume: E

Default night volume: 9

Our products can adjust the volume of day and night by turning the knob. The default factory volume is E in the day and 9 in the evening. If the factory volume is not suitable for you, you can adjust it by unpacking the housing adjustment knob. The position of the volume adjustment knob is shown in the figure above.


Generally, users are not recommended to modify the volume. If it is necessary to modify it, be sure to install the assembly sequence after the adjustment is completed to prevent water from entering the product. Thank you.

Blind pedestrian bell button User Manual





- Thank you for using our company blind pedestrian bell button.
- In order to ensure the comfort of the customer, please install it correctly according to the contents of this Installation Manual.
- The Company reserves to modify permissions of the "manual" in content and without notice. When a new version of the "User Manual" is used, the old version will be automatic stop used.
- If any questions, please contact the company, we will be happy to provide you with more detailed answers.

Product Size

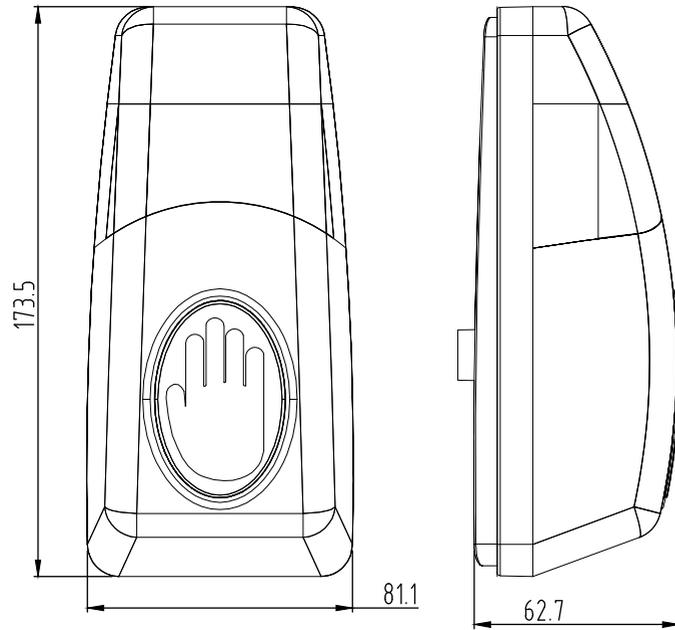


Installation Instructions

Installation overall structure

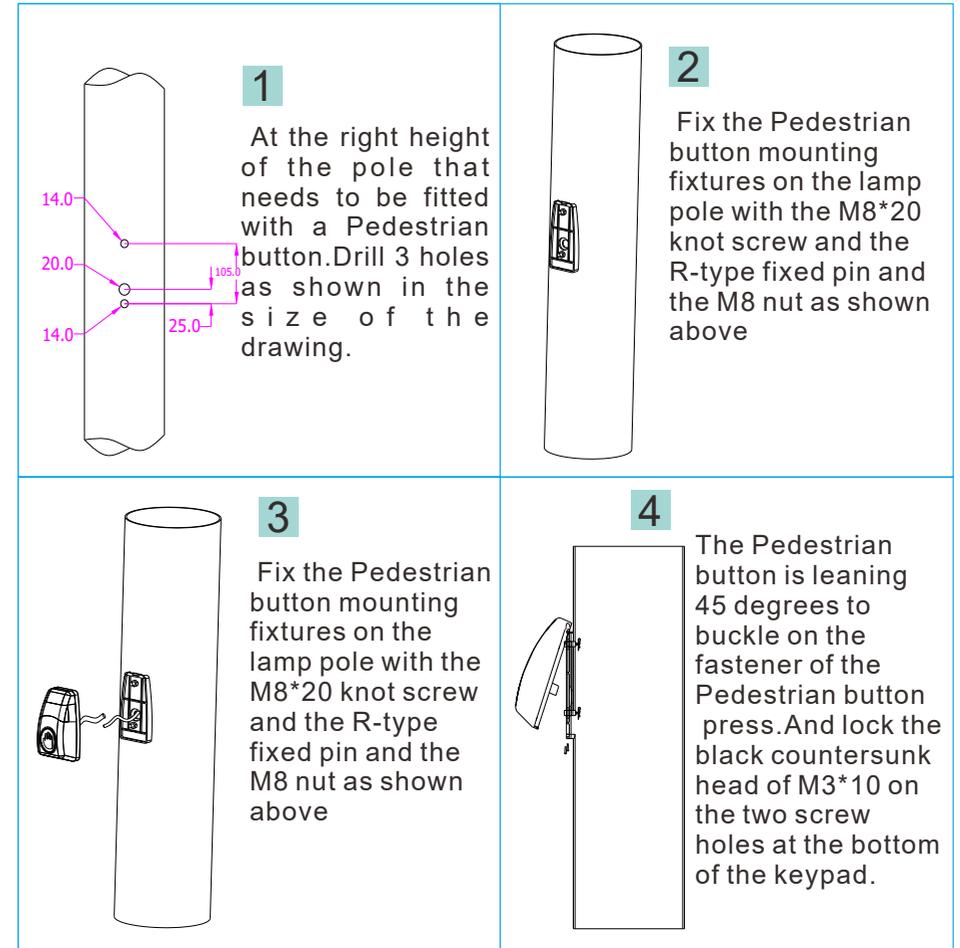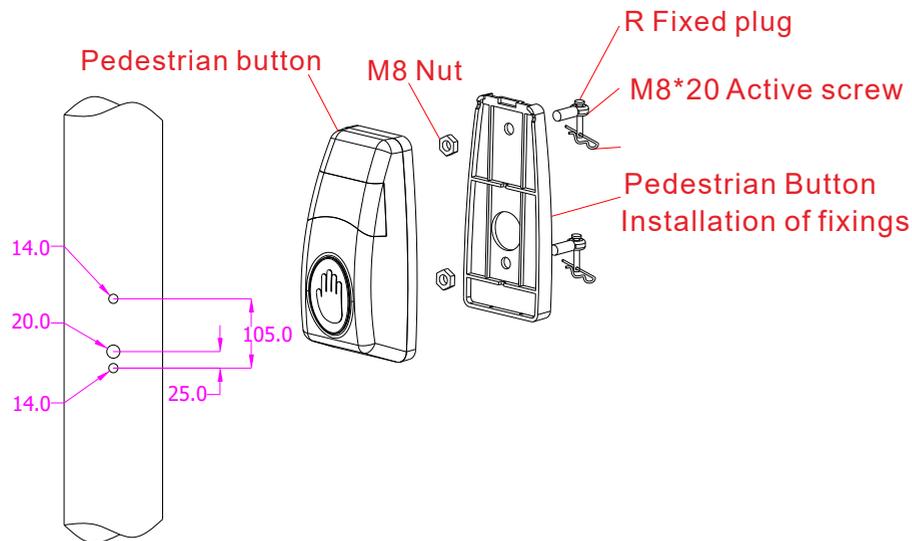

Wiring Diagram

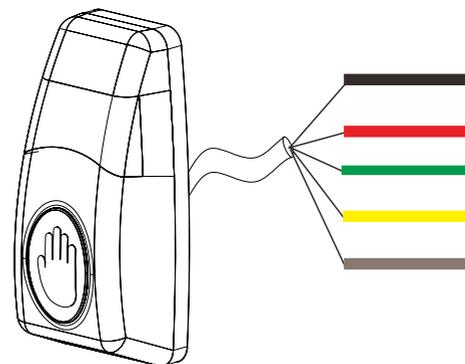

Wire color	PTB-20BS-V12
Black color	N Line
Red color	Red signal
Green color	Green signal
Yellow color	Relay NO.
Brown color	Relay COM