

TEST REPORT

22-0405IT

Issued on December 16th 2022

CLIENT

NURTEKS HALI SAN. TIC. AS.

PRODUCT NAME

IRON GRASS

TOTAL CYCLES

80000 CYCLES

Laboratory tests

Labosport Italia S.r.l

Via Monza, 80 – 23870 CERNUSCO LOMBARDONE (LC)
Tel. +39 039 896.26.84 – Tel. +39 039 990.88.77
Fax +39 039 968.51.68

www.labosport.it
labosport@labosport.it
Pag 1 di 10
RP311-001 del 24/11/2022



TEST LIST AND TESTING CONDITIONS	3
IMPORTANT INFORMATION	3
SUBJECT	3
REFERENCE DOCUMENTS	3
STORAGE TIMES.....	3
SAMPLING.....	3
LOCATION OF PERFORMANCE OF THE TESTS	3
APPLICANT	3
ACQUISITION DATA	3
GENERAL DESCRIPTION OF THE METHOD	3
TEST RESULTS (PICTURES).....	4
IMAGES AT 0 CYCLES.....	4
IMAGES AT 5000 CYCLES.....	4
IMAGES AT 10000 CYCLES.....	4
IMAGES AT 15000 CYCLES.....	5
IMAGES AT 20000 CYCLES.....	5
IMAGES AT 25000 CYCLES.....	5
IMAGES AT 30000 CYCLES.....	6
IMAGES AT 35000 CYCLES.....	6
IMAGES AT 40000 CYCLES.....	6
IMAGES AT 45000 CYCLES.....	7
IMAGES AT 50000 CYCLES.....	7
IMAGES AT 55000 CYCLES.....	7
IMAGES AT 60000 CYCLES.....	8
IMAGES AT 65000 CYCLES.....	8
IMAGES AT 70000 CYCLES.....	8
IMAGES AT 75000 CYCLES.....	9
IMAGES AT 80000 CYCLES.....	9
COMPARISON 0 CYCLES – 80000 CYCLES.....	9
STRUMENTS USED.....	10
ADDITIONS, DEVIATIONS OR EXCLUSIONS FROM THE TEST METHOD.....	10
COMMENTS RELATED TO TESTS.....	10
ADDITIONAL INFORMATIONS.....	10

TEST LIST AND TESTING CONDITIONS

FIFA Test Method 15 – Procedure for the determination of wear on artificial turf (Lisport XL)

Conditioning of the sample non required.

Test performed at a temperature of $23\text{ °C} \pm 5\text{ °C}$.

IMPORTANT INFORMATION

Reproduction of this test report is only authorized in its entirety.

The results are intended to be valid only for the surfaces tested as received.

The laboratory declines all responsibility for all information provided by the customer.

SUBJECT

Determination of wear on artificial turf provided by the customer as an indicator in the section “Test list and testing conditions”.

REFERENCE DOCUMENTS

FIFA Quality Programme for Football Turf - Handbook of Test Methods V3.1 - October 2015 Edition

FIFA Test Method 15 – Procedure for the determination of wear on artificial turf (Lisport XL)

STORAGE TIMES

Documents are stored for 4 years and samples 1 month from the issue of the Test report.

SAMPLING

The sampling is carried out by the customer.

LOCATION OF PERFORMANCE OF THE TESTS

The tests are carried out at Labosport Italia Srl premises.

APPLICANT

Company **NURTEKS HALI SAN. TIC. AS.**
Address Yesilkoy Mahallesi, Ataturk Caddesi EGS Business Park No:12 B2
Blok Kat: D:179-182
Bakırköy Istanbul

Country Turkey

ACQUISITION DATA

Order received on June 16th 2022
First sample received on June 17th 2022
Last sample received on June 17th 2022
Beginning of tests July 01st 2022
Ending of tests November 17th 2022


GENERAL DESCRIPTION OF THE METHOD

The test specimen has been fixed to the floor to ensure that there is no movement during the wear simulation, was filled with 8 kg/m^2 of sand and 15 kg/m^2 of black SBR and abraded for 80000 cycles by Lisport XL.


Every 1000 cycles the machine was stopped, re-fill any dislodged infill and the sample was lightly brushed. Take photographs of the fiber every 5000 cycles.

TEST RESULTS (PICTURES)

IMAGES AT 0 CYCLES

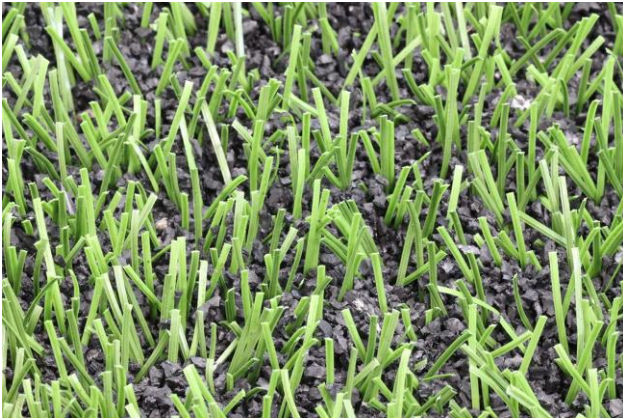


IMAGES AT 5000 CYCLES

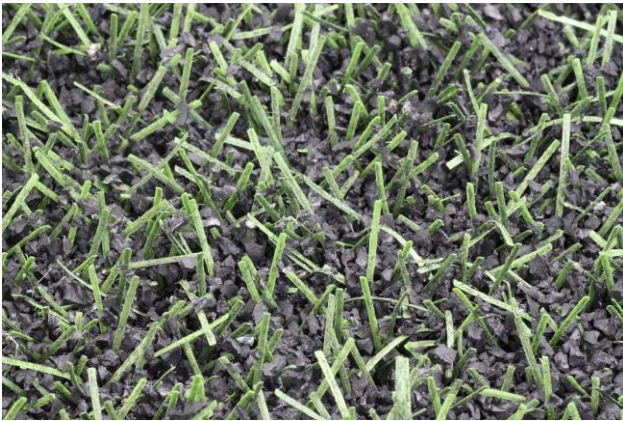


IMAGES AT 10000 CYCLES



IMAGES AT 15000 CYCLES

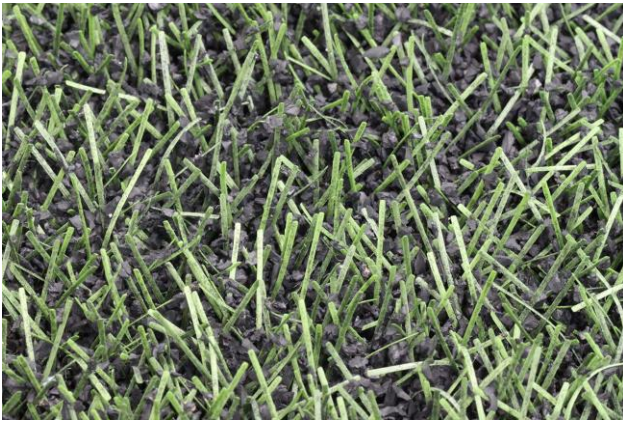


IMAGES AT 20000 CYCLES

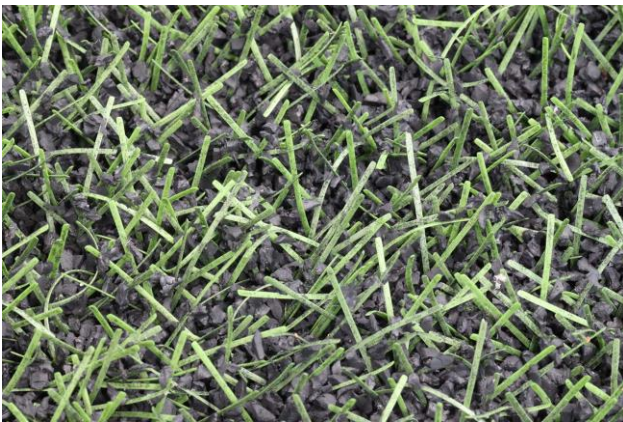

IMAGES AT 25000 CYCLES



IMAGES AT 30000 CYCLES

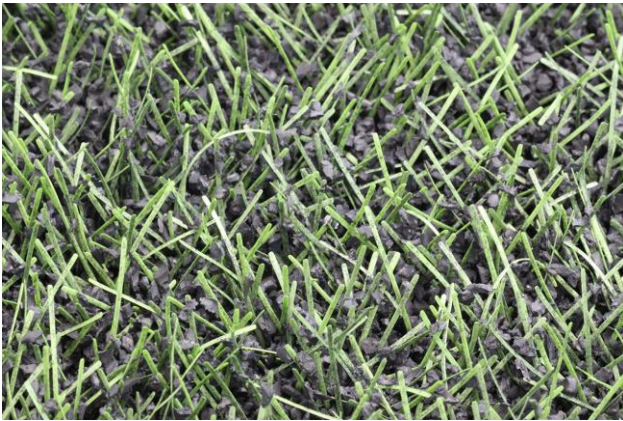

IMAGES AT 35000 CYCLES





IMAGES AT 40000 CYCLES




IMAGES AT 45000 CYCLES



IMAGES AT 50000 CYCLES

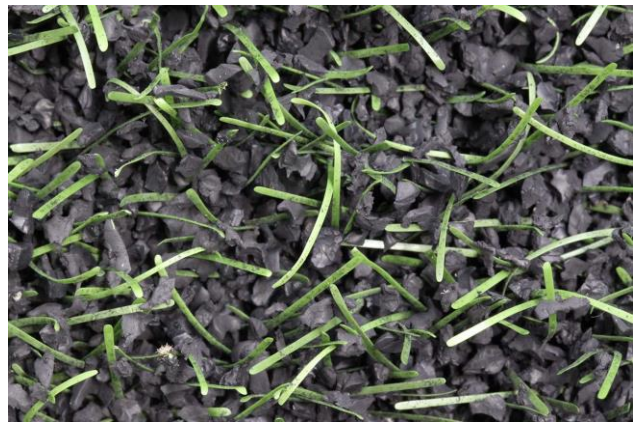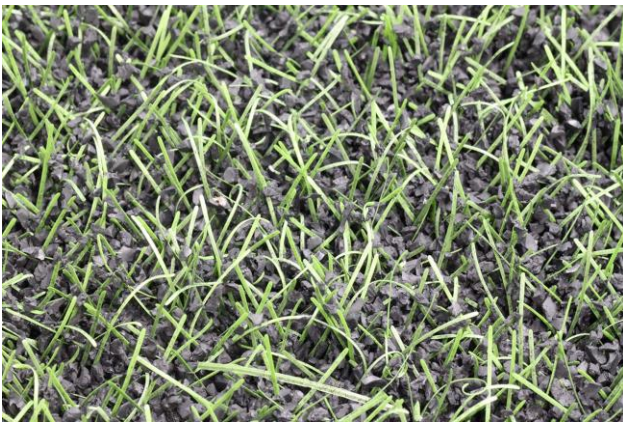

IMAGES AT 55000 CYCLES

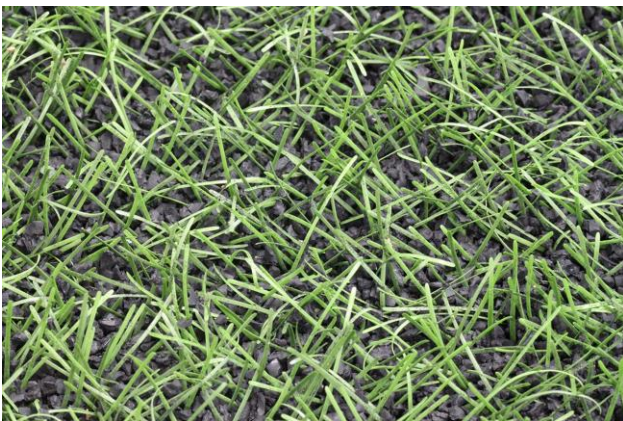


IMAGES AT 60000 CYCLES




IMAGES AT 65000 CYCLES



IMAGES AT 70000 CYCLES

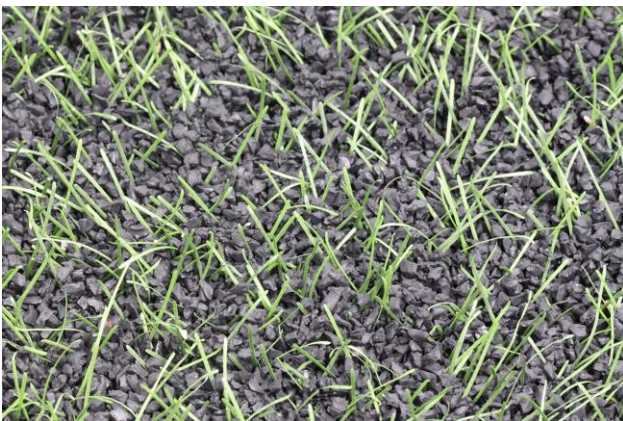

IMAGES AT 75000 CYCLES

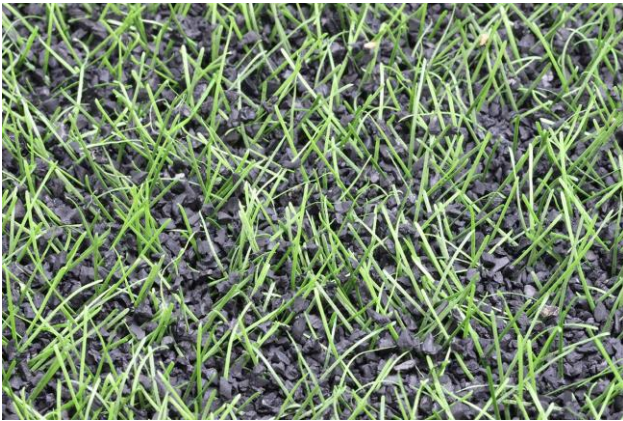

IMAGES AT 80000 CYCLES



COMPARISON 0 CYCLES – 80000 CYCLES



0 cycles



80000 cycles

STRUMENTS USED

FIFA Test Method 15 – Procedure for the determination of wear on artificial turf (Lisport XL)

Equipment	Manufacturer	Model	Technical sheet
Lisport XL	Labosport International	Lisport XI	STR321

ADDITIONS, DEVIATIONS OR EXCLUSIONS FROM THE TEST METHOD

None.

COMMENTS RELATED TO TESTS


None.

ADDITIONAL INFORMATION

None.



Laboratory Director
Roberto Armeni

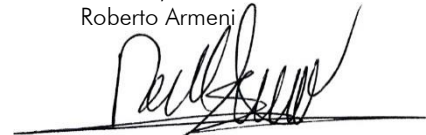

----- End of the Test Report -----