


## Manual for Acoustic Pedestrian Device

Model: MZ-Y-FM01

### Product Photo

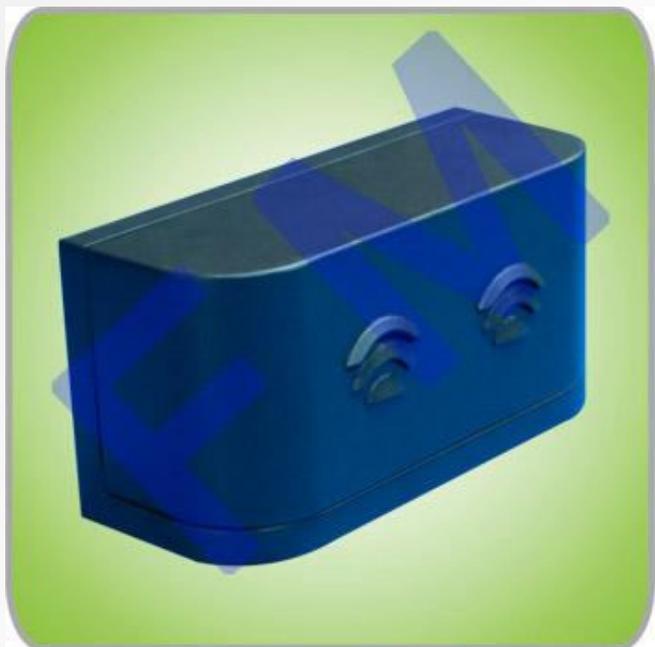


### Advantages

- Multi operation periods with built-in high-precision clock chip, free from interruption of power-down mode and less than 2.5-minute yearly operation error
- Connected to control box for instant parameter adjustment
- Using CE power supply with AC85V~AC264V wide range working voltage
- Adopting highly efficient CLASS D power amplifier circuit
- Available to adjust the volume among 81 grades by control box and when the volume is 0, power amplifier will work in silence without any noise
- Able to pre-store different settings and then send them to be received at the same time
- With guide-way design and convenient installation
- connected to control box by USB interface and easy for setup
- Up to IP65


### Basic Parameters

Maximum Peak Work Power	$\leq 18W$	Free to add voice prompt messages according to needs	
Maximum Average Work Power	$\leq 8w$		
Work Temperature	$-40^{\circ}C \sim 80^{\circ}C$	IP Grade	IP65
Setting Mode	By Control Box	Volume	0-80
Period	1-9		

## Structure

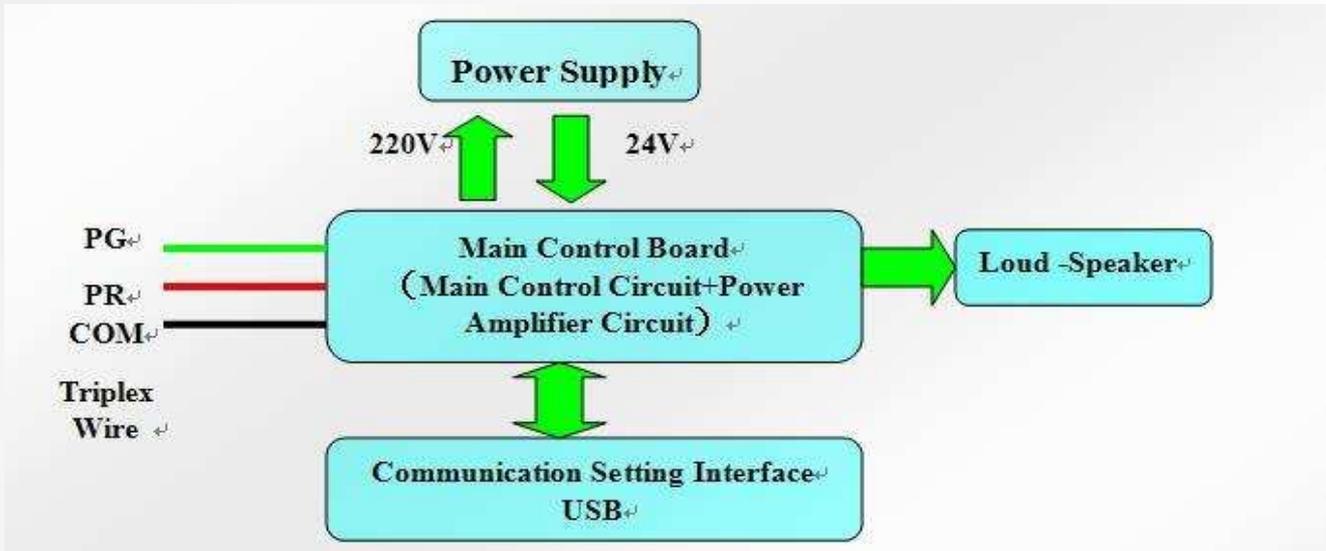

## Wiring

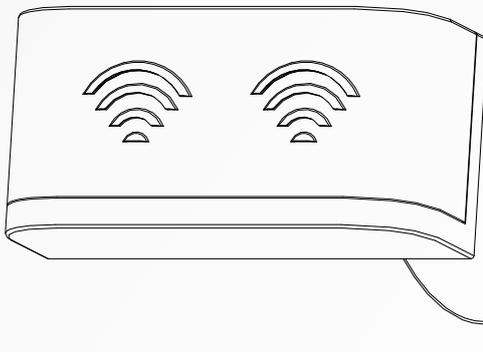

Triplex Wire (Black: Common, Red: Red Light, Green: Green Light)

## Packing List

Item	Box	Bracket	M10*40 Screw, Nut, Flat Gasket, Spring Gasket	Manual	Certificate
Q'ty	1	1	2	1	1

## Packaging

Model No.	Box Size (m)	Q'ty (Pcs)	N.W. (Kg)	G.W. (Kg)	Material	Volume (m <sup>3</sup> )
MRZ-300*120*150-Q1	0.33*0.17*0.18	1	3.16	3.48	K = K	0.01