



Chemila, spol. s r.o. Za Dráhou 4386/3, 695 01 Hodonín, CZ, Phone/Fax +420518340919, chemila@chemila.cz
Chemical and Microbiological Laboratory, Testing Laboratory No. 1273 certified by Czech Accreditation Institute.

Copy No.: 1
Issue No.: 1

Test report No. D166-3/2013

DETERMINATION OF BACTERICIDAL (EN 13727) AND YEASTICIDAL (EN 13624) ACTIVITY OF THE PRODUCT **QUATRODES FORTE**

Sample ID: D166/2013

Sample name: **Quatrodes Forte**

Client: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz, Poland

Producer: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz, Poland

Sampling point: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz, Poland


Page: 1

From pages: 11

Incoming date:
8.11.2013

Delivery date:
9.6.2014

Hodonín, 9.6.2014

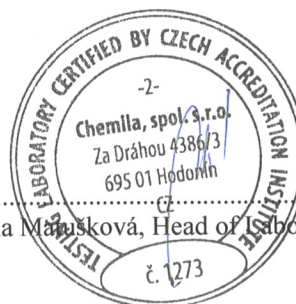

Zuzana Maňusková, Head of laboratory

The report may be reproduced only as a whole, in parts only upon written permission of the laboratory. The test results relate only to the samples stated in the Test Report. The Lab does not take any guarantee for the identity of samples not taken by the lab personnel.

Description: Testing the efficacy of chemical disinfectants and antiseptics

Sample ID: D166/2013
Rep No: 43
Sample name: **Quatrodos Forte**
Sampled: by client
Sampling point: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz
Client: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz

Sampling date: 6.11.2013
Sample delivered: 8.11.2013
Testing date: 16.5.2014-6.6.2014
Delivered amount: 250 ml
Batch No: A-25-PAZ-33
Page: 2

Subject of testing:

Determination of bactericidal and yeasticidal activity of the product.

Identification of the sample:

Name of the product:	Quatrodos Forte
Batch number:	A-25-PAZ-33
Date of manufacture:	25.10.2013
Expiry date:	04.2016
Manufacturer:	Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz, Poland
Incoming date:	8.11.2013
Storage conditions:	stated by the manufacturer
Active ingredients, 100 g contains:	
CAS 2372-82-9 N-(3-Aminopropyl)-N-dodecylpropane-1,3-diamine	3,76 g
CAS 94667-33-1 N,N-Didecyl-N-methyl-poly(oxethyl)ammonium propionate	3,39 g

Experiment conditions:

Testing of disinfecting efficiency of chemical disinfecting and antiseptic agents by suspension method SOP-M-19-00 (EN 13727+A1)

Period of analysis:	27.5. – 28.5.2014
Test temperature:	20 °C ± 1 °C
Test method:	dilution neutralization method
Neutralization medium:	Dey-Engley Neutralizing Broth M 1062
Product diluent:	hard water
Appearance of the products:	yellow liquid
Test concentration:	0.5%
Contact time:	15 min
Interfering substances:	0.3 g/l BSA (clean conditions) 3 g/l BSA and 3 ml/l sheep erythrocytes (dirty conditions)
Test organisms:	<i>Pseudomonas aeruginosa</i> ATCC 15442 <i>Staphylococcus aureus</i> ATCC 6538 <i>Enterococcus hirae</i> ATCC 10541
Incubation conditions:	37 °C ± 1 °C, 24 hours

Test procedure:

1. Preparation of the test suspension
2. Preparation of product test solutions
3. Quantitative suspension test
4. Incubation and calculation
5. Expression and interpretation of results

Note:

Bactericidal activity – the capability of a product to produce a reduction in the number of viable bacterial cells of relevant organisms under defined conditions by at least 5 orders (10^5) (for hygienic hand wash at least a 3 lg reduction).

The standard:

EN 13727+A1 Chemical disinfectants and antiseptics – Quantitative suspension test for the evaluation of bactericidal activity in the medicinal area - Test method and requirements (phase 2, step 1) November 2013

Description: Testing the efficacy of chemical disinfectants and antiseptics

Sample ID: D166/2013
 Rep No: 43
 Sample name: **Quatrodos Forte**
 Sampled: by client
 Sampling point: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz
 Client: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz

Sampling date: 6.11.2013
 Sample delivered: 8.11.2013
 Testing date: 16.5.2014-6.6.2014
 Delivered amount: 250 ml
 Batch No: A-25-PAZ-33
 Page: 3

The Number of CFU in the tested product: 0 CFU/ml

1. Testing the efficacy of chemical disinfectant **Quatrodos Forte** on *Pseudomonas aeruginosa* ATCC 15442

Tab No. 1.1.1 Verification of methodology, clean conditions

Validation of suspension (N _{V0})				Validation of selected experimental conditions (A)				Neutralizer toxicity control (B)				Dilution neutralization control (C) Product conc.: 0.5%			
V _{c1}	42	Φ _{N_{V0}} = 43		V _{c1}	37	Φ _A = 42.5		V _{c1}	41	Φ _B = 42		V _{c1}	43	Φ _C = 40	
V _{c2}	44			V _{c2}	48			V _{c2}	43			V _{c2}	37		
30 ≤ Φ _{N_{V0}} ≤ 160				Φ _A ≥ 0.5 Φ _{N_{V0}}				Φ _B ≥ 0.5 Φ _{N_{V0}}				Φ _C ≥ 0.5 Φ _{N_{V0}}			
x	yes		no	x	yes		no	x	yes		no	x	yes		no
Validation of suspension (N _{VB})				V _{c1}	43	V _{c2}	44	Φ _{N_{VB}} = 43.5				30 ≤ Φ _{N_{VB}} (N _{VB} /1000) ≤ 160			
												x yes no			

Tab No. 1.1.2 Verification of methodology, dirty conditions

Validation of suspension (N _{V0})				Validation of selected experimental conditions (A)				Neutralizer toxicity control (B)				Dilution neutralization control (C) Product conc.: 0.5%			
V _{c1}	42	Φ _{N_{V0}} = 43		V _{c1}	39	Φ _A = 40.5		V _{c1}	41	Φ _B = 42		V _{c1}	40	Φ _C = 42	
V _{c2}	44			V _{c2}	42			V _{c2}	43			V _{c2}	44		
30 ≤ Φ _{N_{V0}} ≤ 160				Φ _A ≥ 0.5 Φ _{N_{V0}}				Φ _B ≥ 0.5 Φ _{N_{V0}}				Φ _C ≥ 0.5 Φ _{N_{V0}}			
x	yes		no	x	yes		no	x	yes		no	x	yes		no
Validation of suspension (N _{VB})				V _{c1}	43	V _{c2}	44	Φ _{N_{VB}} = 43.5				30 ≤ Φ _{N_{VB}} (N _{VB} /1000) ≤ 160			
												x yes no			

Tab No. 1.2 Test suspensions

Test suspension N	N	V _{c1}	V _{c1}	Test suspension N ₀ lg N ₀ = lg N/10 = lg 7.61 7.17 ≤ lg N ₀ ≤ 7.70
Φ = 40.5 x 10 ⁷ = lg 8.61	10 ⁻⁶	> 330	> 330	
8.17 ≤ lg N ≤ 8.70	10 ⁻⁷	39	42	
				x yes no

Tab No. 1.3 Testing the efficacy of chemical disinfectant **Quatrodos Forte** on *Pseudomonas aeruginosa* ATCC 15442

Test concentration (%) / contact time (min) / conditions	Dilution after test procedure	V _{c1}	V _{c2}	lg N _a = lg (Φ _a x 10)	lg R (lg N ₀ = lg 7.61)
0.5/15/clean	10 ⁰	<14	<14	< 2.15	≥ 5.46
0.5/15/dirty	10 ⁻¹	132	150	4.15	3.46

Note: V_c = value is the number of cfu per ml, Φ = average V_{c1} a V_{c2} (1. + 2. duplicate V_c values), N = the number of cfu/ml of the bacterial test suspension, N₀ = the number of cfu/ml of the bacterial test suspension at the beginning of the contact time = 0, N_v = the number of cfu/ml of the bacterial test suspension for validation N_{V0} = the number of cfu/ml of the bacterial test suspension for validation in the test mixture, A, B, C at the beginning of the contact time = 0, N_{VB} = the number of cfu/ml of the bacterial test suspension for the neutralizer control, N_a = the number of survivors per ml in the test mixture, A, B, C = the number of survivors per ml in control tests (A – experimental conditions validation, B – neutralizer toxicity validation, C – method validation)
 R = N₀/ N_a = the reduction in viability, or lg R = lg N₀ – lg N_a

Description: Testing the efficacy of chemical disinfectants and antiseptics

Sample ID: D166/2013
 Rep No: 43
 Sample name: **Quatrodos Forte**
 Sampled: by client
 Sampling point: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz
 Client: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz

Sampling date: 6.11.2013
 Sample delivered: 8.11.2013
 Testing date: 16.5.2014-6.6.2014
 Delivered amount: 250 ml
 Batch No: A-25-PAZ-33
 Page: 4

2. Testing the efficacy of chemical disinfectant **Quatrodos Forte** on *Staphylococcus aureus* ATCC 6538

Tab No. 2.1.1 Verification of methodology, clean conditions

Validation of suspension (N _{V0})			Validation of selected experimental conditions (A)			Neutralizer toxicity control (B)			Dilution neutralization control (C) Product conc.: 0.5%		
V _{c1}	51	Φ _{N_{V0}} = 46	V _{c1}	45	Φ _A = 43	V _{c1}	49	Φ _B = 44.5	V _{c1}	47	Φ _C = 47
V _{c2}	41		V _{c2}	41		V _{c2}	40		V _{c2}	47	
30 ≤ Φ _{N_{V0}} ≤ 160			Φ _A ≥ 0.5 Φ _{N_{V0}}			Φ _B ≥ 0.5 Φ _{N_{V0}}			Φ _C ≥ 0.5 Φ _{N_{V0}}		
x	yes	no	x	yes	no	x	yes	no	x	yes	no
Validation of suspension (N _{VB})			V _{c1}	45	V _{c2}	47	Φ _{N_{VB}}	46	30 ≤ Φ _{N_{VB}} (N _{VB} /1000) ≤ 160		
									x	yes	no

Tab No. 2.1.2 Verification of methodology, dirty conditions

Validation of suspension (N _{V0})			Validation of selected experimental conditions (A)			Neutralizer toxicity control (B)			Dilution neutralization control (C) Product conc.: 0.5%		
V _{c1}	51	Φ _{N_{V0}} = 46	V _{c1}	43	Φ _A = 44.5	V _{c1}	49	Φ _B = 44.5	V _{c1}	42	Φ _C = 45
V _{c2}	41		V _{c2}	46		V _{c2}	40		V _{c2}	48	
30 ≤ Φ _{N_{V0}} ≤ 160			Φ _A ≥ 0.5 Φ _{N_{V0}}			Φ _B ≥ 0.5 Φ _{N_{V0}}			Φ _C ≥ 0.5 Φ _{N_{V0}}		
x	yes	no	x	yes	no	x	yes	no	x	yes	no
Validation of suspension (N _{VB})			V _{c1}	45	V _{c2}	47	Φ _{N_{VB}}	46	30 ≤ Φ _{N_{VB}} (N _{VB} /1000) ≤ 160		
									x	yes	no

Tab No. 2.2 Test suspensions

Test suspension N	N	V _{c1}	V _{c1}	Test suspension N ₀		
Φ = 47 x 10 ⁷ = lg 8.67	10 ⁻⁶	> 330	> 330	lg N ₀ = lg N/10 = lg 7.67		
8.17 ≤ lg N ≤ 8.70	10 ⁻⁷	47	47	7.17 ≤ lg N ₀ ≤ 7.70		
				x	yes	no

Tab No. 2.3 Testing the efficacy of chemical disinfectant **Quatrodos Forte** on *Staphylococcus aureus* ATCC 6538

Test concentration (%) / contact time (min) / conditions	Dilution after test procedure	V _{c1}	V _{c2}	lg N _a = lg (Φ _a x 10)	lg R (lg N ₀ = lg 7.67)
0.5/15/clean	10 ⁰	<14	<14	< 2.15	≥ 5.52
0.5/15/dirty	10 ⁰	<14	<14	< 2.15	≥ 5.52

Note: V_c = value is the number of cfu per ml, Φ = average V_{c1} a V_{c2} (1. + 2. duplicate V_c values), N = the number of cfu/ml of the bacterial test suspension, N₀ = the number of cfu/ml of the bacterial test suspension at the beginning of the contact time = 0, N_V = the number of cfu/ml of the bacterial test suspension for validation N_{V0} = the number of cfu/ml of the bacterial test suspension for validation in the test mixture, A, B, C at the beginning of the contact time = 0, N_{VB} = the number of cfu/ml of the bacterial test suspension for the neutralizer control, N_a = the number of survivors per ml in the test mixture, A, B, C = the number of survivors per ml in control tests (A – experimental conditions validation, B – neutralizer toxicity validation, C – method validation)
 R = N₀/ N_a = the reduction in viability, or lg R = lg N₀ – lg N_a

Description: Testing the efficacy of chemical disinfectants and antiseptics

Sample ID: D166/2013
 Rep No: 43
 Sample name: **Quatrodos Forte**
 ampled: by client
 Sampling point: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz
 Client: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz

Sampling date: 6.11.2013
 Sample delivered: 8.11.2013
 Testing date: 16.5.2014-6.6.2014
 Delivered amount: 250 ml
 Batch No: A-25-PAZ-33
 Page: 5

3. Testing the efficacy of chemical disinfectant **Quatrodos Forte** on *Enterococcus hirae* ATCC 10541

Tab No. 3.1.1 Verification of methodology, clean conditions

Validation of suspension (N_{V0})		Validation of selected experimental conditions (A)		Neutralizer toxicity control (B)		Dilution neutralization control (C) Product conc.: 0.5%						
V_{c1}	29	$\Phi_{N_{V0}} = 31$	V_{c1}	25	$\Phi_A = 30.5$	V_{c1}	27	$\Phi_B = 27$	V_{c1}	33	$\Phi_C = 30$	
V_{c2}	33		V_{c2}	36		V_{c2}	27		V_{c2}	27		
$30 \leq \Phi_{N_{V0}} \leq 160$		$\Phi_A \geq 0.5 \Phi_{N_{V0}}$		$\Phi_B \geq 0.5 \Phi_{N_{V0}}$		$\Phi_C \geq 0.5 \Phi_{N_{V0}}$						
x	yes		x	yes		x	yes		x	yes		no
Validation of suspension (N_{VB})		V_{c1}	28	V_{c2}	33	Φ_{NVB}	30.5	$30 \leq \Phi_{NVB}(N_{VB}/1000) \leq 160$				
								x	yes			no

Tab No. 3.1.2 Verification of methodology, dirty conditions

Validation of suspension (N_{V0})		Validation of selected experimental conditions (A)		Neutralizer toxicity control (B)		Dilution neutralization control (C) Product conc.: 0.5%						
V_{c1}	29	$\Phi_{N_{V0}} = 31$	V_{c1}	31	$\Phi_A = 31.5$	V_{c1}	27	$\Phi_B = 27$	V_{c1}	30	$\Phi_C = 27.5$	
V_{c2}	33		V_{c2}	32		V_{c2}	27		V_{c2}	25		
$30 \leq \Phi_{N_{V0}} \leq 160$		$\Phi_A \geq 0.5 \Phi_{N_{V0}}$		$\Phi_B \geq 0.5 \Phi_{N_{V0}}$		$\Phi_C \geq 0.5 \Phi_{N_{V0}}$						
x	yes		x	yes		x	yes		x	yes		no
Validation of suspension (N_{VB})		V_{c1}	28	V_{c2}	33	Φ_{NVB}	30.5	$30 \leq \Phi_{NVB}(N_{VB}/1000) \leq 160$				
								x	yes			no

Tab No. 3.2 Test suspensions

Test suspension N	N	V_{c1}	V_{c1}	Test suspension N_0				
$\Phi = 266 \times 10^6 = \lg 8.42$	10^{-6}	266	271	$\lg N_0 = \lg N/10 = \lg 7.42$				
$8.17 \leq \lg N \leq 8.70$	10^{-7}	27	22	$7.17 \leq \lg N_0 \leq 7.70$				
				x	yes			no

Tab No. 3.3 Testing the efficacy of chemical disinfectant **Quatrodos Forte** on *Enterococcus hirae* ATCC 10541

Test concentration (%) / contact time (min) / conditions	Dilution after test procedure	V_{c1}	V_{c2}	$\lg N_a = \lg (\Phi_a \times 10)$	$\lg R$ ($\lg N_0 = \lg 7.42$)
0.5/15/clean	10^0	<14	<14	< 2.15	≥ 5.27
0.5/15/dirty	10^0	<14	<14	< 2.15	≥ 5.27

Note: V_c = value is the number of cfu per ml, Φ = average V_{c1} a V_{c2} (1. + 2. duplicate V_c values), N = the number of cfu/ml of the bacterial test suspension, N_0 = the number of cfu/ml of the bacterial test suspension at the beginning of the contact time = 0, N_V = the number of cfu/ml of the bacterial test suspension for validation N_{V0} = the number of cfu/ml of the bacterial test suspension for validation in the test mixture, A, B, C at the beginning of the contact time = 0, N_{VB} = the number of cfu/ml of the bacterial test suspension for the neutralizer control, N_a = the number of survivors per ml in the test mixture, A, B, C = the number of survivors per ml in control tests (A – experimental conditions validation, B – neutralizer toxicity validation, C – method validation)
 $R = N_0 / N_a$ = the reduction in viability, or $\lg R = \lg N_0 - \lg N_a$

Description: Testing the efficacy of chemical disinfectants and antiseptics

Sample ID: D166/2013
Rep No: 43
Sample name: **Quatrodos Forte**
Sampled: by client
Sampling point: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz
Client: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz

Sampling date: 6.11.2013
Sample delivered: 8.11.2013
Testing date: 16.5.2014-6.6.2014
Delivered amount: 250 ml
Batch No: A-25-PAZ-33
Page: 6

4. Evaluation of bactericidal activity of the product **Quatrodos Forte**

Tab No. 4.1 The efficacy of chemical disinfectant **Quatrodos Forte** on test strains – bactericidal activity

Bactericidal activity of the product (EN 13727)						
Strain	Test temperature [°C]	Contact time [min]	Product test concentrations [%]	Interfering substances - conditions	lg R EN 13727	lg R
<i>Pseudomonas aeruginosa</i> ATCC 15442	20	15	0.5	clean	≥ 5	> 5
<i>Staphylococcus aureus</i> ATCC 6538	20	15	0.5	clean	≥ 5	> 5
<i>Enterococcus hirae</i> ATCC 10541	20	15	0.5	clean	≥ 5	> 5
<i>Pseudomonas aeruginosa</i> ATCC 15442	20	15	0.5	dirty	≥ 5	< 5
<i>Staphylococcus aureus</i> ATCC 6538	20	15	0.5	dirty	≥ 5	> 5
<i>Enterococcus hirae</i> ATCC 10541	20	15	0.5	dirty	≥ 5	> 5

Note: V_c = value is the number of cfu per ml, Φ = average V_{c1} a V_{c2} (1. + 2. duplicate V_c values), N = the number of cfu/ml of the bacterial test suspension, N_0 = the number of cfu/ml of the bacterial test suspension at the beginning of the contact time = 0, N_V = the number of cfu/ml of the bacterial test suspension for validation N_{V0} = the number of cfu/ml of the bacterial test suspension for validation in the test mixture, A, B, C at the beginning of the contact time = 0, N_{VB} = the number of cfu/ml of the bacterial test suspension for the neutralizer control, N_a = the number of survivors per ml in the test mixture, A, B, C = the number of survivors per ml in control tests (A – experimental conditions validation, B – neutralizer toxicity validation, C – method validation)
 $R = N_0 / N_a$ = the reduction in viability, or $\lg R = \lg N_0 - \lg N_a$

Prepared by: Hana Konevalíková, Lab Technician

Description: *Testing the efficacy of chemical disinfectants and antiseptics*

Sample ID: D166/2013
Rep No: 43
Sample name: **Quatrodex Forte**
Sampled: by client
Sampling point: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz
Client: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz

Sampling date: 6.11.2013
Sample delivered: 8.11.2013
Testing date: 16.5.2014-6.6.2014
Delivered amount: 250 ml
Batch No: A-25-PAZ-33
Page: 7

Experimental conditions:

Period of analysis:	16.5. – 19.5.2014
Test temperature:	20 °C ± 1 °C
Test method:	dilution neutralization method
Neutralization medium:	Dey-Engley Neutralizing Broth M 1062
Product diluent:	hard water
Appearance of the products:	yellow liquid
Test concentration:	0.5%
Contact time:	15 min
Interfering substances:	0.3 g/l BSA (clean conditions) 3 g/l BSA and 3 ml/l sheep erythrocytes (dirty conditions)
Test organisms:	<i>Candida albicans</i> ATCC 10231
Incubation conditions:	30 °C ± 1 °C, 48 hours and additional period of 24 or 48 hours

Test procedure:

1. Preparation of test suspension
2. Preparation of product test solutions
3. Quantitative suspension test
4. Incubation and calculation
5. Expression and interpretation of results

Note:

Fungicidal activity – the capability of a product to produce a reduction in the number of viable fungi belonging to reference strains under defined conditions by at least 4 orders (10^4).

Yeasticidal activity – the capability of a product to produce a reduction in the number of viable vegetative yeast cells belonging to reference strain *Candida albicans* under defined conditions by at least 4 orders (10^4) (for hygienic hand wash at least a 2 lg reduction).

$R = N_0 / N_a$ = the reduction in viability, or $\lg R = \lg N_0 - \lg N_a$

The standard:

EN 13624 Chemical disinfectants and antiseptics – Quantitative suspension test for the evaluation of fungicidal or yeasticidal activity in the medical area - Test method and requirements (phase 2, step 1) September 2013

Description: Testing the efficacy of chemical disinfectants and antiseptics

Sample ID: D166/2013

Rep No: 43

Sample name: **Quatroles Forte**

Sampled: by client

Sampling point: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz

Client: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz

Sampling date: 6.11.2013

Sample delivered: 8.11.2013

Testing date: 16.5.2014-6.6.2014

Delivered amount: 250 ml

Batch No: A-25-PAZ-33

Page: 8

5. Testing the efficacy of chemical disinfectant **Quatroles Forte** on *Candida albicans* ATCC 10231

Tab No. 5.1.1 Verification of methodology, clean conditions

Validation of suspension (N_{V0})			Validation of selected experimental conditions (A)			Neutralizer toxicity control (B)			Dilution neutralization control (C) Product conc.: 0.5%		
V_{c1}	46	$\Phi_{N_{V0}} = 48$	V_{c1}	48	$\Phi_A = 46.5$	V_{c1}	50	$\Phi_B = 46$	V_{c1}	41	$\Phi_C = 47$
V_{c2}	50		V_{c2}	45		V_{c2}	42		V_{c2}	53	
$30 \leq \Phi_{N_{V0}} \leq 160$			$\Phi_A \geq 0.5 \Phi_{N_{V0}}$			$\Phi_B \geq 0.5 \Phi_{N_{V0}}$			$\Phi_C \geq 0.5 \Phi_{N_{V0}}$		
x	yes	no	x	yes	no	x	yes	no	x	yes	no
Validation of suspension (N_{VB})											
V_{c1}	41	V_{c2}	55	Φ_{NVB}	48	$30 \leq \Phi_{NVB}(N_{VB}/1000) \leq 160$					
x			yes			no			no		

Tab No. 5.1.2 Verification of methodology, dirty conditions

Validation of suspension (N_{V0})			Validation of selected experimental conditions (A)			Neutralizer toxicity control (B)			Dilution neutralization control (C) Product conc.: 0.5%		
V_{c1}	46	$\Phi_{N_{V0}} = 48$	V_{c1}	42	$\Phi_A = 43.5$	V_{c1}	50	$\Phi_B = 46$	V_{c1}	44	$\Phi_C = 43.5$
V_{c2}	50		V_{c2}	45		V_{c2}	42		V_{c2}	43	
$30 \leq \Phi_{N_{V0}} \leq 160$			$\Phi_A \geq 0.5 \Phi_{N_{V0}}$			$\Phi_B \geq 0.5 \Phi_{N_{V0}}$			$\Phi_C \geq 0.5 \Phi_{N_{V0}}$		
x	yes	no	x	yes	no	x	yes	no	x	yes	no
Validation of suspension (N_{VB})											
V_{c1}	41	V_{c2}	55	Φ_{NVB}	48	$30 \leq \Phi_{NVB}(N_{VB}/1000) \leq 160$					
x			yes			no			no		

Tab No. 5.2 Test suspensions

Test suspension N	N	V_{c1}	V_{c1}	Test suspension N_0 (time = 0)
$\Phi = 48.5 \times 10^6 = \lg 7.69$	10^{-5}	> 330	> 330	$\lg N_0 = \lg N/10 = \lg 6.69$
$7.17 \leq \lg N \leq 7.70$	10^{-6}	47	50	$6.17 \leq \lg N_0 \leq 6.70$
				x
				yes
				no

Tab No. 5.3 Testing the efficacy of chemical disinfectant **Quatroles Forte** on *Candida albicans* ATCC 10231

Test concentration (%) / contact time (min) / conditions	Dilution after test procedure	V_{c1}	V_{c2}	$\lg N_a = \lg (\Phi_a \times 10)$	$\lg R$ ($\lg N_0 = \lg 6.69$)
0.5/15/clean	10^0	<14	<14	< 2.15	≥ 4.54
0.5/15/dirty	10^0	<14	<14	< 2.15	≥ 4.54

6. Evaluation of yeasticidal activity of the product **Quatroles Forte**

Tab No. 6.1 The efficacy of chemical disinfectant **Quatroles Forte** on test strains – yeasticidal activity

Strain	Fungicidal activity of the product (EN 13624)					
	Test temperature [°C]	Contact time [min]	Product test concentrations [%]	Interfering substances - conditions	$\lg R$ EN 13624	$\lg R$
<i>Candida albicans</i> ATCC 10231	20	15	0.5	clean	≥ 4	> 4
<i>Candida albicans</i> ATCC 10231	20	15	0.5	dirty	≥ 4	> 4

Note: V_c = value is the number of cfu per ml, Φ = average V_{c1} a V_{c2} (1. + 2. duplicate V_c values), N = the number of cfu/ml of the fungicidal test suspension, N_0 = the number of cfu/ml of the fungicidal test suspension at the beginning of the contact time (time „0“), N_a = the number of survivors per ml in the test mixture at the end of the contact time and before the neutralizer toxicity method, N_v = the number of cfu/ml of the fungicidal test suspension for validation, N_{v0} = the number of cfu/ml of the fungicidal test suspension in the mixture A,B,C at the beginning of the contact time (time „0“), A,B,C = the number of survivors per ml in control tests (A – experimental conditions control, B – neutralizer toxicity validation, C – method validation)

$R = N_0 / N_a$ nebo $\lg R = \lg N_0 - \lg N_a$ the reduction in viability.

Prepared by: Hana Konevalíková, Lab Technician

Description: *Testing the efficacy of chemical disinfectants and antiseptics*

Sample ID: D166/2013
Rep No: 43
Sample name: **Quatrodes Forte**
Sampled: by client
Sampling point: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz
Client: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz

Sampling date: 6.11.2013
Sample delivered: 8.11.2013
Testing date: 16.5.2014-6.6.2014
Delivered amount: 250 ml
Batch No: A-25-PAZ-33
Page: 9

Experiment conditions:

	Testing of disinfecting efficiency of chemical disinfecting and antiseptic agents by suspension method SOP-M-19-00 (EN 13727+A1)
Period of analysis:	5.6. – 6.6.2014
Test temperature:	20 °C ± 1 °C
Test method:	dilution neutralization method
Neutralization medium:	Dey-Engley Neutralizing Broth M 1062
Product diluent:	hard water
Appearance of the products:	yellow liquid
Test concentration:	1.0%
Contact time:	15 min
Interfering substances:	3 g/l BSA and 3 ml/l sheep erythrocytes (dirty conditions)
Test organisms:	<i>Pseudomonas aeruginosa</i> ATCC 15442
Incubation conditions:	37 °C ± 1 °C, 24 hours

Test procedure:

1. Preparation of the test suspension
2. Preparation of product test solutions
3. Quantitative suspension test
4. Incubation and calculation
5. Expression and interpretation of results

Note:

Bactericidal activity – the capability of a product to produce a reduction in the number of viable bacterial cells of relevant organisms under defined conditions by at least 5 orders (10^5) (for hygienic hand wash at least a 3 lg reduction).

The standard:

EN 13727+A1 Chemical disinfectants and antiseptics – Quantitative suspension test for the evaluation of bactericidal activity in the medicinal area - Test method and requirements (phase 2, step 1) November 2013

Description: Testing the efficacy of chemical disinfectants and antiseptics

Sample ID: D166/2013
 Rep No: 43
 Sample name: **Quatrodos Forte**
 Sampled: by client
 Sampling point: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz
 Client: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz

Sampling date: 6.11.2013
 Sample delivered: 8.11.2013
 Testing date: 16.5.2014-6.6.2014
 Delivered amount: 250 ml
 Batch No: A-25-PAZ-33
 Page: 10

7. Testing the efficacy of chemical disinfectant **Quatrodos Forte** on *Pseudomonas aeruginosa* ATCC 15442

Tab No.7.1 Verification of methodology, dirty conditions

Validation of suspension (N _{V0})			Validation of selected experimental conditions (A)			Neutralizer toxicity control (B)			Dilution neutralization control (C) Product conc.: 1.0%			
V _{c1}	41	Φ _{N_{V0}} = 37	V _{c1}	36	Φ _A = 38	V _{c1}	33	Φ _B = 36	V _{c1}	34	Φ _C = 38.5	
V _{c2}	33		V _{c2}	40		V _{c2}	39		V _{c2}	43		
30 ≤ Φ _{N_{V0}} ≤ 160			Φ _A ≥ 0.5 Φ _{N_{V0}}			Φ _B ≥ 0.5 Φ _{N_{V0}}			Φ _C ≥ 0.5 Φ _{N_{V0}}			
x	yes	no	x	yes	no	x	yes	no	x	yes	no	
Validation of suspension (N _{VB})			V _{c1}	41	V _{c2}	35	Φ _{N_{VB}} = 38		30 ≤ Φ _{N_{VB}} (N _{VB} /1000) ≤ 160			
								x			yes	no

Tab No. 7.2 Test suspensions

Test suspension N	N	V _{c1}	V _{c1}	Test suspension N ₀		
Φ = 34.5 x 10 ⁷ = lg 8.54	10 ⁻⁶	> 330	> 330	lg N ₀ = lg N/10 = lg 7.54		
8.17 ≤ lg N ≤ 8.70	10 ⁻⁷	34	35	7.17 ≤ lg N ₀ ≤ 7.70		
				x	yes	no

Tab No. 7.3 Testing the efficacy of chemical disinfectant **Quatrodos Forte** on *Pseudomonas aeruginosa* ATCC 15442

Test concentration (%) / contact time (min) / conditions	Dilution after test procedure	V _{c1}	V _{c2}	lg N _a = lg (Φ _a x 10)	lg R (lg N ₀ = lg 7.54)
1.0/15/dirty	10 ⁰	<14	<14	< 2.15	≥ 5.39

8. Evaluation of bactericidal activity of the product **Quatrodos Forte**

Tab No. 8.1 The efficacy of chemical disinfectant **Quatrodos Forte** on test strains – bactericidal activity

Strain	Bactericidal activity of the product (EN 13727)					lg R EN 13727	lg R
	Test temperature [°C]	Contact time [min]	Product test concentrations [%]	Interfering substances - conditions			
<i>Pseudomonas aeruginosa</i> ATCC 15442	20	15	1.0	dirty		≥ 5	> 5

Note: V_c = value is the number of cfu per ml, Φ = average V_{c1} a V_{c2} (1. + 2. duplicate V_c values), N = the number of cfu/ml of the bacterial test suspension, N₀ = the number of cfu/ml of the bacterial test suspension at the beginning of the contact time = 0, N_V = the number of cfu/ml of the bacterial test suspension for validation N_{V0} = the number of cfu/ml of the bacterial test suspension for validation in the test mixture, A, B, C at the beginning of the contact time = 0, N_{VB} = the number of cfu/ml of the bacterial test suspension for the neutralizer control, N_a = the number of survivors per ml in the test mixture, A, B, C = the number of survivors per ml in control tests (A – experimental conditions validation, B – neutralizer toxicity validation, C – method validation)

R = N₀/N_a = the reduction in viability, or lg R = lg N₀ – lg N_a

Prepared by: Hana Konevalíková, Lab Technician

Description: *Testing the efficacy of chemical disinfectants and antiseptics*

Sample ID: D166/2013

Rep No: 43

Sample name: **Quatrodes Forte**

Sampled: by client

Sampling point: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz

Client: Medi-Sept Sp. z o.o., Konopnica 159c, 210 30 Motycz

Sampling date: 6.11.2013

Sample delivered: 8.11.2013

Testing date: 16.5.2014-6.6.2014

Delivered amount: 250 ml

Batch No: A-25-PAZ-33

Page: 11

Interpretation:

Results of tests are in Tabs.

According to EN 13727 the tested product **Quatrodes Forte**, batch No. A-25-PAZ-33, in the concentration 0.5%, diluted in hard water, and the contact time 15 min under clean conditions at temperature $20\text{ }^{\circ}\text{C} \pm 1\text{ }^{\circ}\text{C}$ by the dilution-neutralization method **decreased** the number of alive microbes *Pseudomonas aeruginosa* ATCC 15442, *Staphylococcus aureus* ATCC 6538, *Enterococcus hirae* ATCC 10541 by at least 5 (lg) orders.

According to EN 13727 the tested product **Quatrodes Forte**, batch No. A-25-PAZ-33, in the concentration 0.5%, diluted in hard water, and the contact time 15 min under dirty conditions at temperature $20\text{ }^{\circ}\text{C} \pm 1\text{ }^{\circ}\text{C}$ by the dilution-neutralization method **decreased** the number of alive microbes *Staphylococcus aureus* ATCC 6538, *Enterococcus hirae* ATCC 10541 by at least 5 (lg) orders.

According to EN 13624 the tested product **Quatrodes Forte**, batch No. A-25-PAZ-33 in the concentration 0.5%, diluted in hard water, and the contact time 15 min under clean and dirty conditions at temperature $20\text{ }^{\circ}\text{C} \pm 1\text{ }^{\circ}\text{C}$ by the dilution-neutralization method **decreased** the number of alive microbes *Candida albicans* ATCC 10231 by at least 4 (lg) orders.

According to EN 13727 the tested product **Quatrodes Forte**, batch No. A-25-PAZ-33, in the concentration 1.0%, diluted in hard water, and the contact time 15 min under dirty conditions at temperature $20\text{ }^{\circ}\text{C} \pm 1\text{ }^{\circ}\text{C}$ by the dilution-neutralization method **decreased** the number of alive microbes *Pseudomonas aeruginosa* ATCC 15442 by at least 5 (lg) orders.

Conclusion:

The product **Quatrodes Forte** is capable of reducing the number of viable bacterial cells of the relevant organism when used in the concentration 0.5% in the contact time 15 min under clean conditions and in the concentration 1.0% in the contact time 15 min under dirty conditions, and consequently, may be called bactericidal.

The product **Quatrodes Forte** is capable of reducing the number of viable vegetative yeast cells of the relevant organism when used in the concentration 0.5% in the contact time 15 min under clean and dirty conditions, and consequently, may be called yeasticidal.

9.6.2014, Hodonín

Ing. Jana Litrová, Leader of Study

