


Installation, Operation  
and Maintenance  
Manual



SR 4610, SR 4620



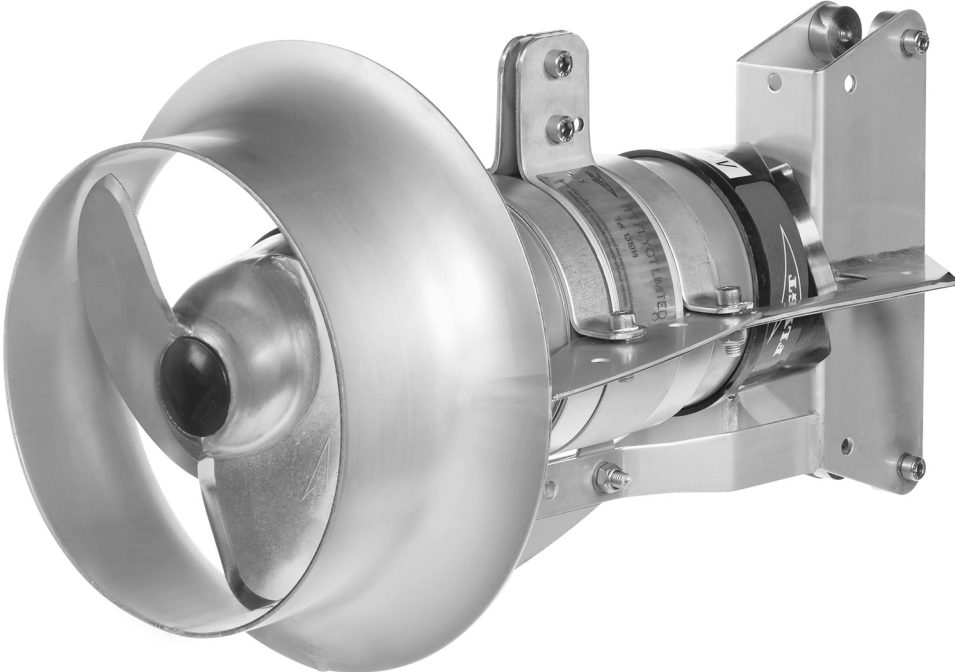

# Table of Contents

<b>Introduction and Safety</b> .....	3
Introduction.....	3
Safety.....	3
Safety terminology and symbols.....	3
Environmental safety.....	4
User safety.....	5
Ex-approved products.....	6
Product warranty.....	7
<b>Transportation and Storage</b> .....	8
Inspect the delivery.....	8
Inspect the package.....	8
Inspect the unit.....	8
Transportation guidelines.....	8
Precautions.....	8
Position and fastening.....	8
Lifting.....	8
Temperature ranges for transportation, handling and storage.....	9
Handling at freezing temperature.....	9
Unit in as-delivered condition.....	9
Lifting the unit out of liquid.....	9
Storage guidelines.....	10
Storage location.....	10
Long-term storage.....	10
<b>Product Description</b> .....	11
General description.....	11
The data plate.....	13
Approvals.....	13
Product denomination.....	15
<b>Installation</b> .....	17
Install the mixer.....	17
Install on a cantilever bar.....	18
Install on a single guide bar.....	24
Install on a bottom fixing plate.....	26
Position the mixer.....	27
Position parameters.....	27
Propeller clearance.....	27
Set the horizontal angle.....	28
Set the vertical angle.....	31
Electrical installation.....	33
Requirements.....	33
Earthing (Grounding).....	34
Sensor-connection alternatives.....	35
Cable charts.....	37
<b>Operation</b> .....	41
Noise level.....	41
Distance to wet areas.....	41
Start the mixer.....	41

<b>Maintenance</b> .....	43
Requirements.....	43
Maintenance intervals.....	43
Inspection.....	44
Major overhaul.....	45
Service in case of alarm.....	45
Inspect the stator housing.....	45
Change the oil.....	46
Drain the oil.....	46
Fill the oil.....	47
Change the propeller.....	48
Remove the jet ring, guiding claw, and propeller.....	48
Assemble the propeller, jet ring, and guiding claw.....	49
<b>Troubleshooting</b> .....	52
Troubleshooting.....	52
The mixer does not start.....	52
The mixer starts-stops-starts in rapid sequence.....	53
The mixer runs but the motor protection trips.....	53
<b>Technical Reference</b> .....	54
Motor data.....	54
Application limits.....	54

# Introduction and Safety

## Introduction

### Purpose of this manual

The purpose of this manual is to provide necessary information for:

- Installation
- Operation
- Maintenance




---

#### CAUTION:

Read this manual carefully before installing and using the product. Improper use of the product can cause personal injury and damage to property, and may void the warranty.

---



---

#### NOTICE:

Save this manual for future reference, and keep it readily available at the location of the unit.

---

## Safety




---

#### WARNING:

- The operator must be aware of safety precautions to prevent physical injury.
  - Any pressure-containing device can explode, rupture, or discharge its contents if it is over-pressurized. Take all necessary measures to avoid over-pressurization.
  - Operating, installing, or maintaining the unit in any way that is not covered in this manual could cause death, serious personal injury, or damage to the equipment. This includes any modification to the equipment or use of parts not provided by Xylem. If there is a question regarding the intended use of the equipment, please contact an Xylem representative before proceeding.
  - This manual clearly identifies accepted methods for disassembling units. These methods must be adhered to. Trapped liquid can rapidly expand and result in a violent explosion and injury. Never apply heat to impellers, propellers, or their retaining devices to aid in their removal.
  - Do not change the service application without the approval of an authorized Xylem representative.
- 




---

#### CAUTION:

You must observe the instructions contained in this manual. Failure to do so could result in physical injury, damage, or delays.

---




## Safety terminology and symbols

### About safety messages

It is extremely important that you read, understand, and follow the safety messages and regulations carefully before handling the product. They are published to help prevent these hazards:

- Personal accidents and health problems
- Damage to the product
- Product malfunction

**Hazard levels**

Hazard level	Indication
 <p><b>DANGER:</b></p>	A hazardous situation which, if not avoided, will result in death or serious injury
 <p><b>WARNING:</b></p>	A hazardous situation which, if not avoided, could result in death or serious injury
 <p><b>CAUTION:</b></p>	A hazardous situation which, if not avoided, could result in minor or moderate injury
<p><b>NOTICE:</b></p>	<ul style="list-style-type: none"> <li>• A potential situation which, if not avoided, could result in undesirable conditions</li> <li>• A practice not related to personal injury</li> </ul>

**Hazard categories**

Hazard categories can either fall under hazard levels or let specific symbols replace the ordinary hazard level symbols.

Electrical hazards are indicated by the following specific symbol:



**Electrical Hazard:**

These are examples of other categories that can occur. They fall under the ordinary hazard levels and may use complementing symbols:

- Crush hazard
- Cutting hazard
- Arc flash hazard

**The Ex symbol**

The Ex symbol indicates safety regulations for Ex-approved products when used in atmospheres that are potentially explosive or flammable.



**Environmental safety**

**The work area**

Always keep the station clean to avoid and/or discover emissions.

**Waste and emissions regulations**

Observe these safety regulations regarding waste and emissions:

- Appropriately dispose of all waste.
- Handle and dispose of the processed liquid in compliance with applicable environmental regulations.

- Clean up all spills in accordance with safety and environmental procedures.
- Report all environmental emissions to the appropriate authorities.



---

**WARNING:**

Do NOT send the product to the Xylem manufacturer if it has been contaminated by any nuclear radiation. Inform Xylem so that accurate actions can take place.

---

### Electrical installation

For electrical installation recycling requirements, consult your local electric utility.

### Recycling guidelines

Always recycle according to these guidelines:

1. Follow local laws and regulations regarding recycling if the unit or parts are accepted by an authorized recycling company.
2. If the first guideline is not applicable, then return the unit or parts to your Xylem representative.

### User safety

#### General safety rules

These safety rules apply:

- Always keep the work area clean.
- Pay attention to the risks presented by gas and vapors in the work area.
- Avoid all electrical dangers. Pay attention to the risks of electric shock or arc flash hazards.
- Always bear in mind the risk of drowning, electrical accidents, and burn injuries.

#### Safety equipment

Use safety equipment according to the company regulations. Use this safety equipment within the work area:

- Hard hat
- Safety goggles, preferably with side shields
- Protective shoes
- Protective gloves
- Gas mask
- Hearing protection
- First-aid kit
- Safety devices

---

**NOTICE:**

Never operate a unit unless safety devices are installed. Also see specific information about safety devices in other chapters of this manual.

---

#### Electrical connections

Electrical connections must be made by certified electricians in compliance with all international, national, state, and local regulations. For more information about requirements, see sections dealing specifically with electrical connections.

#### Hazardous liquids

The product is designed for use in liquids that can be hazardous to your health. Observe these rules when you work with the product:

- Make sure that all personnel who work with biologically hazardous liquids are vaccinated against diseases to which they may be exposed.
- Observe strict personal cleanliness.

## Wash the skin and eyes

Follow these procedures for chemicals or hazardous fluids that have come into contact with your eyes or your skin:

Condition	Action
Chemicals or hazardous fluids in eyes	<ol style="list-style-type: none"> <li>1. Hold your eyelids apart forcibly with your fingers.</li> <li>2. Rinse the eyes with eyewash or running water for at least 15 minutes.</li> <li>3. Seek medical attention.</li> </ol>
Chemicals or hazardous fluids on skin	<ol style="list-style-type: none"> <li>1. Remove contaminated clothing.</li> <li>2. Wash the skin with soap and water for at least 1 minute.</li> <li>3. Seek medical attention, if necessary.</li> </ol>

## Ex-approved products

Follow these special handling instructions if you have an Ex-approved unit.

### Personnel requirements

These are the personnel requirements for Ex-approved products in potentially explosive atmospheres:

- All work on the product must be carried out by certified electricians and Xylem-authorized mechanics. Special rules apply to installations in explosive atmospheres.
- All users must know about the risks of electric current and the chemical and physical characteristics of the gas, the vapor, or both present in hazardous areas.
- Any maintenance for Ex-approved products must conform to international and national standards (for example, IEC/EN 60079-17).

Xylem disclaims all responsibility for work done by untrained and unauthorized personnel.

### Product and product handling requirements

These are the product and product handling requirements for Ex-approved products in potentially explosive atmospheres:

- Only use the product in accordance with the approved motor data.
- You must fully submerge the Ex-approved product during normal operation. Dry running during service and inspection is only permitted outside the classified area.
- Before you start work on the product, make sure that the product and the control panel are isolated from the power supply and the control circuit, so they cannot be energized.
- Do not open the product while it is energized or in an explosive gas atmosphere.
- Make sure that thermal contacts are connected to a protection circuit according to the approval classification of the product, and that they are in use.
- Intrinsically safe circuits are normally required for the automatic level-control system by the level regulator if mounted in zone 0.
- The yield stress of fasteners must be in accordance with the approval drawing and the product specification.
- Do not modify the equipment without approval from an authorized Xylem representative.
- Only use parts that are provided by an authorized Xylem representative.

### Guidelines for compliance

Compliance is fulfilled only when you operate the unit within its intended use. Do not change the conditions of the service without the approval of an Xylem representative. When you install or maintain explosion proof products, always comply with the directive and applicable standards (for example, IEC/EN 60079-14).



### Minimum permitted liquid level

See the dimensional drawings of the product for the minimum permitted liquid level according to the approval for explosion proof products. If the information is missing on the dimensional drawing, the product must be fully submerged. Level-sensing equipment must be installed if the product can be operated at less than the minimum submersion depth.

### Monitoring equipment

For additional safety, use condition-monitoring devices. Condition-monitoring devices include but are not limited to the following:

- Level indicators
- Temperature detectors

### Product warranty

#### Coverage

Xylem undertakes to remedy faults in products from Xylem under these conditions:

- The faults are due to defects in design, materials, or workmanship.
- The faults are reported to an Xylem representative within the warranty period.
- The product is used only under the conditions described in this manual.
- The monitoring equipment incorporated in the product is correctly connected and in use.
- All service and repair work is done by Xylem-authorized personnel.
- Genuine Xylem parts are used.
- Only Ex-approved spare parts and accessories authorized by Xylem are used in Ex-approved products.

#### Limitations

The warranty does not cover faults caused by these situations:

- Deficient maintenance
- Improper installation
- Modifications or changes to the product and installation made without consulting Xylem
- Incorrectly executed repair work
- Normal wear and tear

Xylem assumes no liability for these situations:

- Bodily injuries
- Material damages
- Economic losses

#### Warranty claim

Xylem products are high-quality products with expected reliable operation and long life. However, should the need arise for a warranty claim, then contact your Xylem representative.

#### Spare parts

Xylem guarantees that spare parts will be available for 15 years after the manufacture of this product has been discontinued.

# Transportation and Storage

## Inspect the delivery

### Inspect the package

1. Inspect the package for damaged or missing items upon delivery.
2. Note any damaged or missing items on the receipt and freight bill.
3. File a claim with the shipping company if anything is out of order.  
If the product has been picked up at a distributor, make a claim directly to the distributor.

### Inspect the unit

1. Remove packing materials from the product.  
Dispose of all packing materials in accordance with local regulations.
2. Inspect the product to determine if any parts have been damaged or are missing.
3. If applicable, unfasten the product by removing any screws, bolts, or straps.  
For your personal safety, be careful when you handle nails and straps.
4. Contact your sales representative if anything is out of order.

## Transportation guidelines

### Precautions



---

**WARNING:**

- Stay clear of suspended loads.
  - Observe accident prevention regulations in force.
- 

### Position and fastening

The unit can be transported either horizontally or vertically. Make sure that the unit is securely fastened during transportation, and cannot roll or fall over.

### Lifting



---

**WARNING:**

- Crush hazard. The unit and the components can be heavy. Use proper lifting methods and wear steel-toed shoes at all times.
  - Lift and handle the product carefully, using suitable lifting equipment.
  - The product must be securely harnessed for lifting and handling. Use eyebolts or lifting lugs if available.
  - Always lift the unit by its lifting handle. Never lift the unit by the motor cable or by the hose.
  - Do not attach sling ropes to shaft ends.
- 

### Lifting equipment

Lifting equipment is always required when handling the unit. It must fulfill the following requirements:

- The minimum height (contact Xylem for information) between the lifting hook and the floor must be sufficient to lift the unit.
- The lifting equipment must be able to hoist the unit straight up and down, preferably without the need for resetting the lifting hook.
- The lifting equipment must be securely anchored and in good condition.
- The lifting equipment must support weight of the entire assembly and must only be used by authorized personnel.
- Two sets of lifting equipment must be used to lift the unit for repair work.
- The lifting equipment must be dimensioned to lift the unit with any remaining pumped media in it.
- The lifting equipment must not be oversized.

---

**NOTICE:**

Oversized lifting equipment could cause damage if the unit should stick when being lifted.

---

## Temperature ranges for transportation, handling and storage

### Handling at freezing temperature

At temperatures below freezing, the product and all installation equipment, including the lifting gear, must be handled with extreme care.

Make sure that the product is warmed up to a temperature above the freezing point before starting up. Avoid rotating the impeller/propeller by hand at temperatures below the freezing point. The recommended method to warm the unit up is to submerge it in the liquid which will be pumped or mixed.

---

**NOTICE:**

Never use a naked flame to thaw the unit.

---

### Unit in as-delivered condition

If the pump or mixer is still in the condition in which it left the factory - all packing materials are undisturbed - then the acceptable temperature range during transportation, handling and storage is:  $-50^{\circ}\text{C}$  ( $-58^{\circ}\text{F}$ ) to  $+60^{\circ}\text{C}$  ( $+140^{\circ}\text{F}$ ).

If the unit has been exposed to freezing temperatures, then allow it to reach the ambient temperature of the sump before operating.

### Lifting the unit out of liquid

The unit is normally protected from freezing while operating or immersed in liquid, but the impeller/propeller and the shaft seal may freeze if the unit is lifted out of the liquid into a surrounding temperature below freezing.

Units equipped with an internal cooling system are filled with a mixture of water and 30% glycol. This mixture remains a flowing liquid at temperatures down to  $-13^{\circ}\text{C}$  ( $9^{\circ}\text{F}$ ). Below  $-13^{\circ}\text{C}$  ( $9^{\circ}\text{F}$ ), the viscosity increases such that the glycol mixture will lose its flow properties. However, the glycol-water mixture will not solidify completely and thus cannot harm the product.

Follow these guidelines to avoid freezing damage:

1. Empty all pumped liquid.

2. Check all liquids used for lubrication or cooling, both oil and water-glycol mixtures, for the presence of water. Change if needed.

## Storage guidelines

### Storage location

The product must be stored in a covered and dry location free from heat, dirt, and vibrations.

---

#### NOTICE:

- Protect the product against humidity, heat sources, and mechanical damage.
  - Do not place heavy weights on the packed product.
- 

### Long-term storage

If the unit is stored more than 6 months, the following apply:

- Before operating the unit after storage, it must be inspected with special attention to the seals and the cable entry.
- The impeller/propeller must be rotated every other month to prevent the seals from sticking together.

# Product Description

## General description


### Mixer design

The mixer is submersible and driven by an electric motor.

### Intended use

The product is intended for moving waste water, sludge, raw and clean water. Always follow the limits given in [Application limits](#) (page 54). If there is a question regarding the intended use of the equipment, please contact an Xylem representative before proceeding.

### Illustration

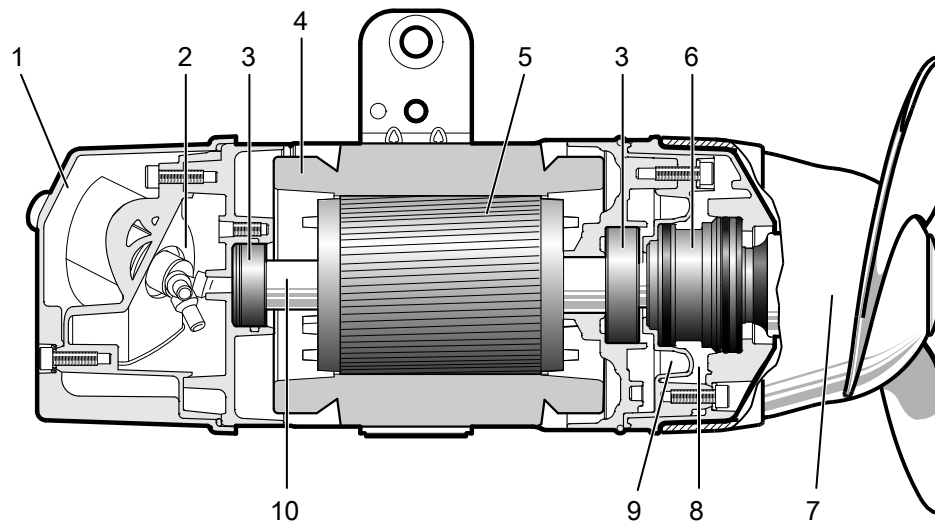

### Parts

Position	Part	Description
1	Cable entry	Spacer sleeve, compressible rubber bushings, and washers to relieve the cable
2	Junction box	Completely sealed off from the surrounding liquid
3	Bearings	Deep-groove ball bearing
4	Thermal contacts	For more information, see <a href="#">Monitoring equipment</a> .
5	Electric motor	For information about the motor, see <a href="#">Motor data</a> (page 54)
6	Mechanical face seal	One stationary and one rotating seal ring
7	Propeller	Double-bladed propeller available in different angles
8	Oil housing	A housing with oil that lubricates and cools the seals, and acts as a buffer against penetrating liquid

Position	Part	Description
9	Inspection chamber	Any leakage through the inner seal will be directed to the inspection chamber
10	Shaft	Integrated rotor, completely sealed off from the surrounding liquid

**Monitoring equipment**

The following applies to the monitoring equipment of the mixer:

- The stator incorporates thermal contacts connected in series that activates the alarm at overtemperature.
- The thermal contacts open at 140°C (285°F).
- The sensors must be connected to either the MiniCAS II monitoring unit or an equivalent unit.
- The monitoring equipment must be of a design that makes automatic restart impossible.
- The mixer can be equipped with an inspection sensor FLS for sensing the presence of any liquid in the connection chamber.
- The mixer can be equipped with a Variable Frequency Drive (VFD).

**Spare parts**

Modifications to the unit/installation should only be carried out after consulting with Xylem. Original spare parts and accessories authorized by the manufacturer are essential for compliance. The use of other parts can invalidate any claims for warranty or compensation. For more information contact your Xylem representative.

**Mixer versions**

Standard versions:


- High-grade steel (ASTM 316L)
- Warm-liquid version

Ex-approved versions:

- High-grade steel (ASTM 316L)

## The data plate

The data plate is a metal label located on the main body of the mixer. The label notes key product specifications. Ex-approved products also have an approval plate. Both are described below.

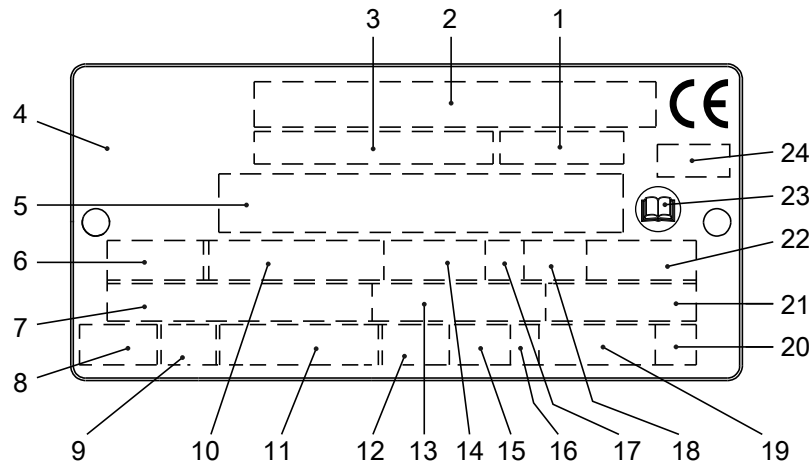

1. Curve code/Propeller code
2. Serial number, see [Product denomination](#) (page 15)
3. Product number
4. Country of origin
5. Additional information
6. Phase; type of current; frequency
7. Rated voltage
8. Thermal protection
9. Thermal class
10. Rated shaft power
11. International standard
12. Degree of protection
13. Rated current
14. Rated speed
15. Maximum submergence
16. Direction of rotation: L=left, R=right
17. Duty class
18. Duty factor
19. Product weight
20. Locked rotor code letter
21. Power factor
22. Maximum ambient temperature
23. Read installation manual
24. Notified body/only for EN-approved Ex-products

## Approvals

This section describes the EN, IEC, and FM approvals that explosion-proof products have. For more information, please contact your Xylem representative. In addition to the data plate, explosion-proof products also have an EN, an IEC, or an FM approval plate.


### EN

European Norm

- ATEX Directive
- EN 60079-0, EN 60079-1, EN 1127-1


The EN approval plate shows the following approval:

 II2G Ex d IIB T3

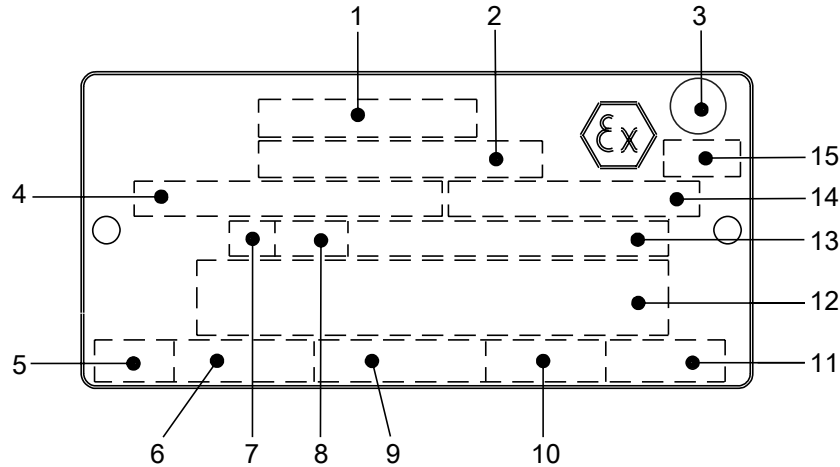

1. Approval
2. Approval authority and Approval number
3. Approval for Class I
4. Approved drive unit
5. Stall time
6. Starting current/Rated current
7. Duty class
8. Duty factor
9. Input power
10. Rated speed
11. Controller
12. Additional information
13. Maximum ambient temperature
14. Serial number
15. ATEX marking


EN approval for cable entry:

- Certificate number: INERIS 02ATEX 9008 U
-  II 2 G or IM2 EEx d IIC or EEx dI

IEC

International Norm; not for EU member countries

- IECEx scheme
- IEC 60079-0, IEC 60079-1
- Ex dI, Ex dII B

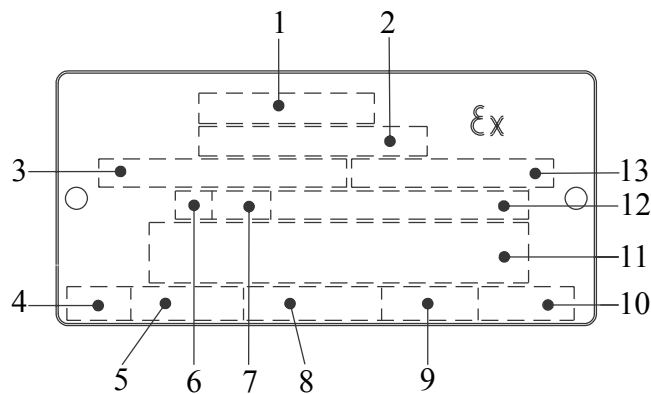

1. Approval
2. Approval authority + approval number
3. Approved for drive unit
4. Stall time
5. Starting current/Rated current
6. Duty class
7. Duty factor


WS001279A



8. Input power
9. Rated speed
10. Controller
11. Additional information
12. Max. ambient temperature
13. Serial number

## FM

This illustration describes the FM approval plate for Factory Mutual (FM) and the information contained in its fields.

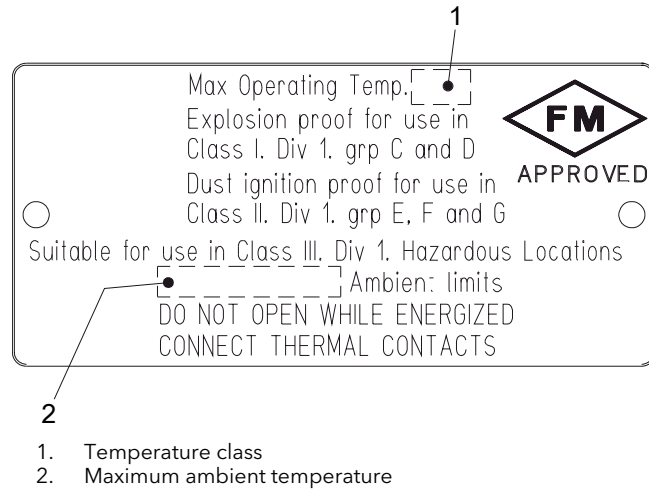


## Product denomination

### Sales denomination

The sales denomination consists of the four-digit sales code and two letters that indicate the hydraulic end and type of installation.


This is an example of a sales denomination, and an explanation of its parts.

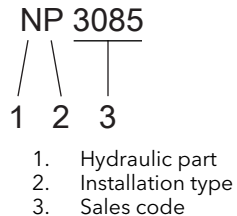

### Product code

The product code consists of nine characters divided into two parts.

This is an example of a product code, and an explanation of its parts.

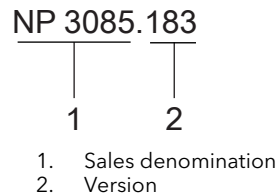

### Serial number

The serial number is used for identification of an individual product, and is divided into four parts.

This is an example of a serial number, and an explanation of its parts.

NP 3085.183 - 951 0163

1                    2    3 4

1. Product code
2. Production year
3. Production cycle
4. Running number

---

# Installation

## Install the mixer



---

**WARNING:**

- Do not install CSA-approved products in locations that are classified as hazardous in the national electric code, ANSI/NFPA 70-2005.
  - Vent the tank of a sewage station in accordance with local plumbing codes.
- 

**NOTICE:**

All mounting to the floor should be made with chemical anchor bolts from Xylem.

---


For information about measurements, see the dimensional drawings of the product.

### Install on a cantilever bar

You install the mixer on the cantilever bar with one of the following brackets:


- Adjustable bracket
- Floor-mounted bracket
- Wall-mounted bracket

#### Types of brackets

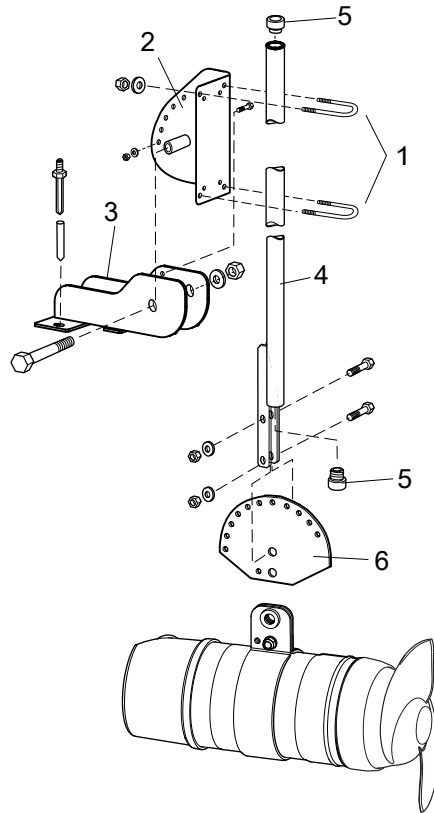


1. Clamp
2. Lock plate
3. Bracket
4. Guide bar
5. Bar plug
6. Lock plate

Figure 1: Adjustable bracket

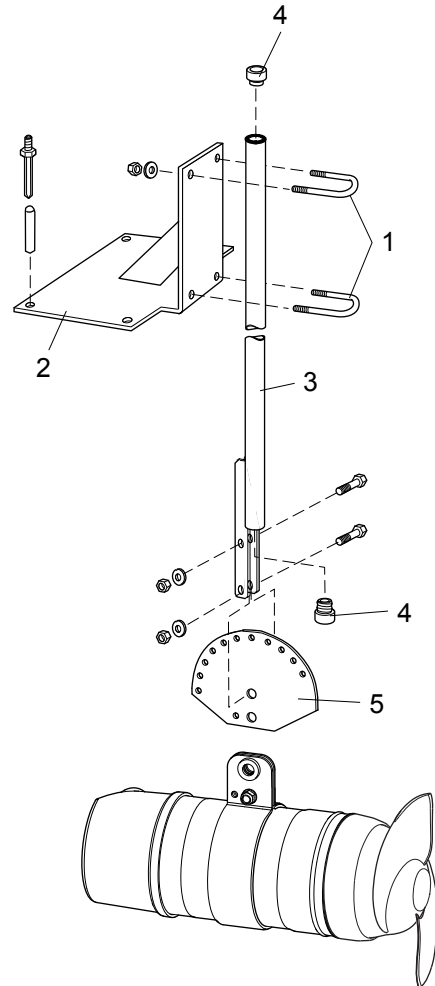

1. Clamp
2. Bracket
3. Guide bar
4. Bar plug
5. Lock plate

Figure 2: Floor-mounted bracket

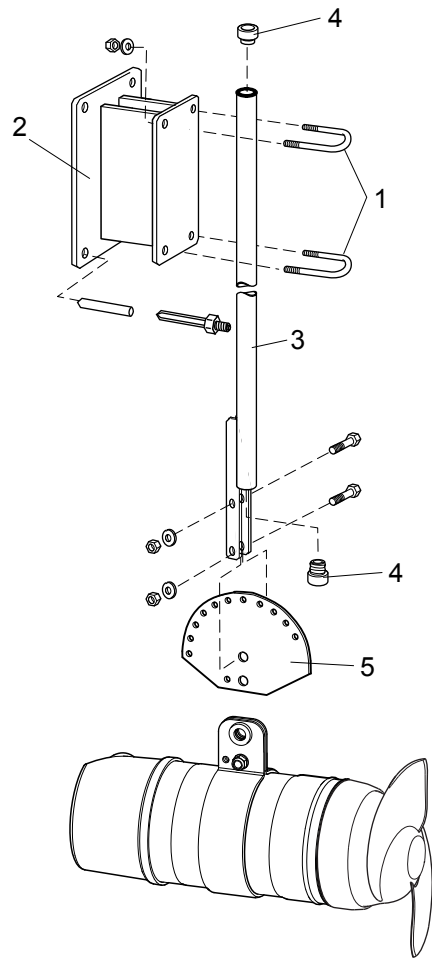

- 1. Clamp
- 2. Bracket
- 3. Guide bar
- 4. Bar plug
- 5. Lock plate

Figure 3: Wall-mounted bracket


**Install with a bracket**

1. Position and mount the bracket.


If you use an adjustable, floor-mounted, or wall-mounted bracket:

If the material is...	Then anchor with...
concrete	chemical anchors
steel	fixing bolts


Adjustable bracket

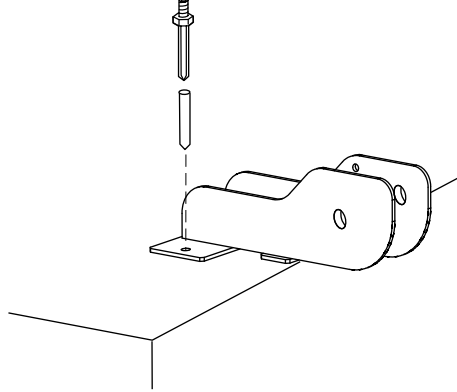


Floor-mounted bracket

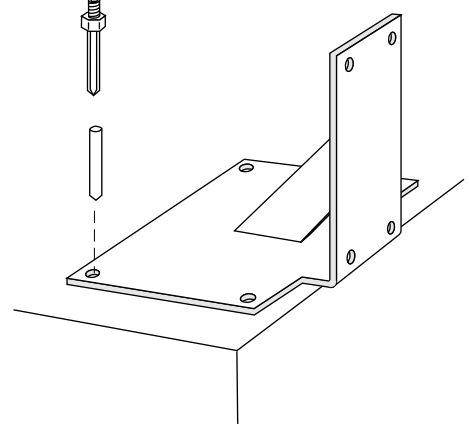

Wall-mounted bracket

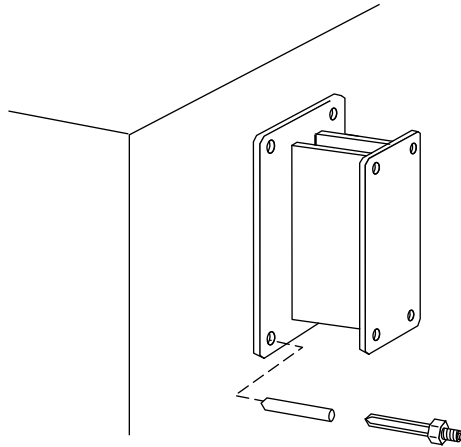


2. If you use an adjustable bracket, place the lock plate in position on the bracket, and tighten the indexing screw.

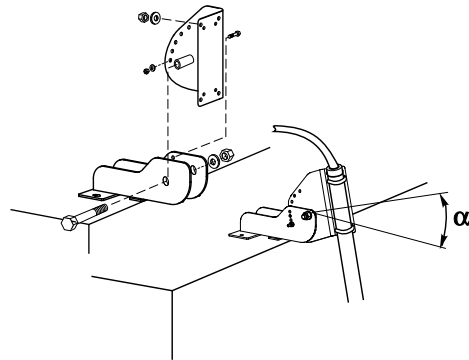


3. Measure the distance (d), and if necessary, cut the bar.  
"d" represents the distance to the position of the mixer, and "H" represents the position of the mixer relative to the floor.


Adjustable bracket

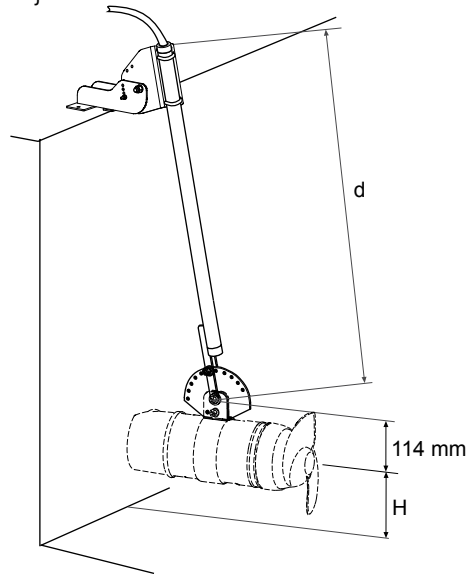


Floor-mounted bracket

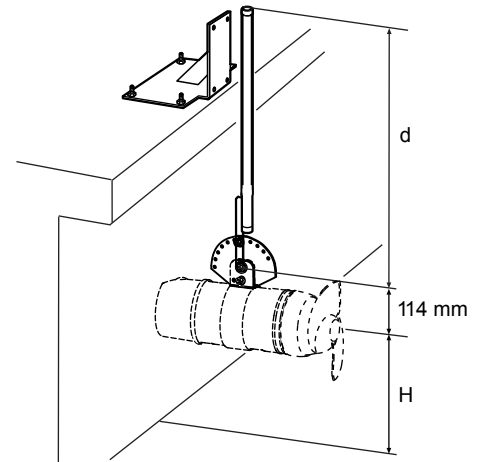

Wall-mounted bracket

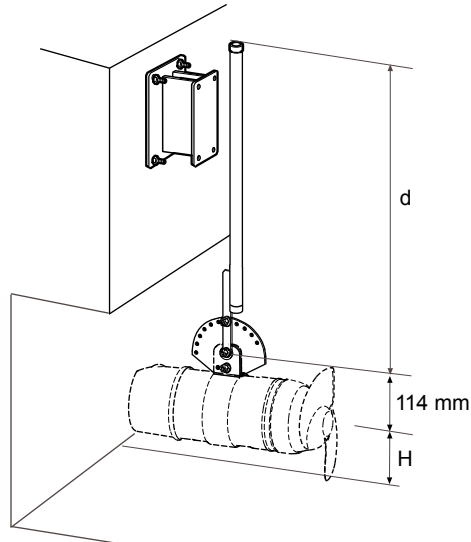

4. Run the power cable:
  - a) Insert the lower bar plug.
  - b) Run the mixer power cable through the bar.
  - c) Insert the upper bar plug.

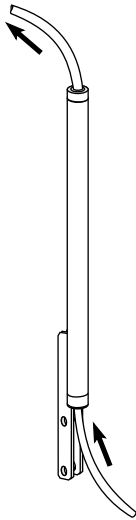


5. Mount the mixer:

- a) Fit the lock plate and the mixer to the end of the bar.
- b) Adjust the vertical angle.

For information about the correct angle setting, see [Position the mixer](#) (page 27).

- c) Insert the indexing screw to prevent the lock plate from rotating.

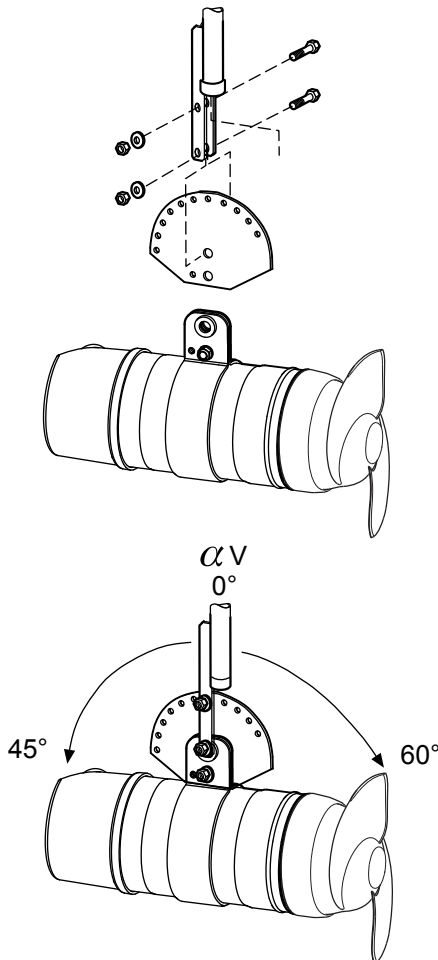

6.



If you use...	Then...
an adjustable bracket	place the bar on the inclinable guide.
a floor-mounted bracket	place the bar on the bracket.
a wall-mounted bracket	place the bar on the bracket.


7. Position the mixer:

a) Adjust the horizontal angle.


For information about the correct angle setting, see [Position the mixer](#) (page 27).

b) Lock the unit in position with the clamps.


Adjustable bracket

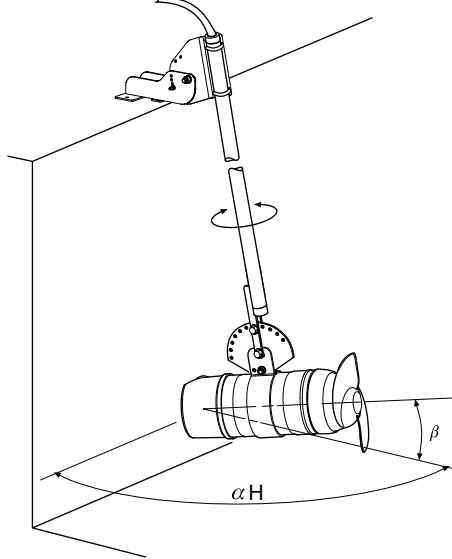

Floor-mounted bracket

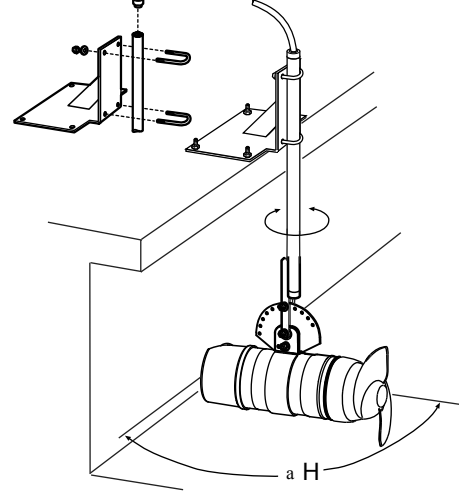


Wall-mounted bracket

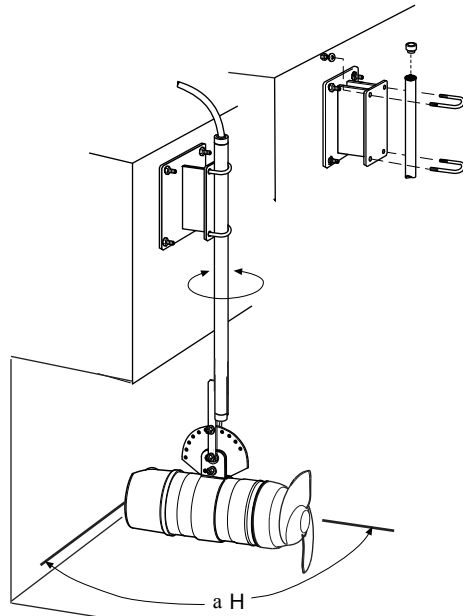


## Install on a single guide bar

The mixer and some of the installation material shown in these figures may not correspond to your equipment.

1. Attach the chains or wires:
  - a) Attach the lifting chain or wire to the mixer with a shackle.
  - b) Attach the support chain or wire for the power cable to the mixer.

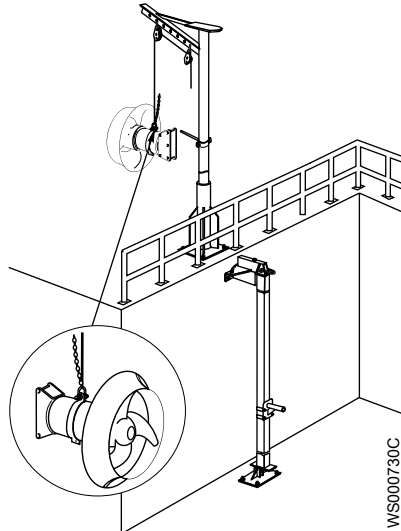


2. Prepare the power cable:
  - a) Place the support grip in position on the power cable.
  - b) Place cable holders on the power cables every 1.5 m (4.9 ft).
  - c) Attach the cable holders to the support chain or wire.

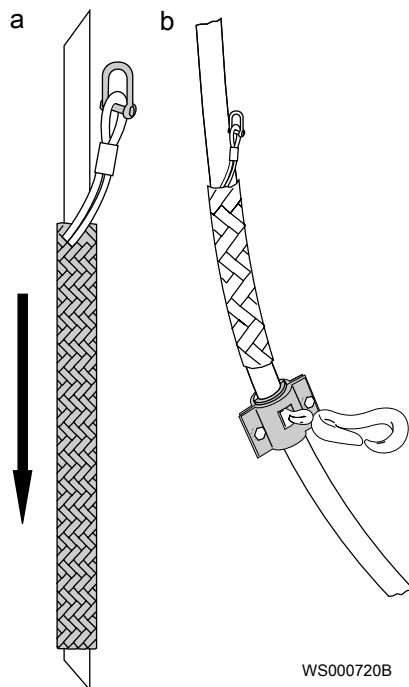


3. Mount the mixer:
  - a) Set the vertical angle.

For more information, see [Set the vertical angle](#) (page 31).

- b) Raise the mixer.
- c) Pivot the mixer with the operating bar on the davit.
- d) Lower the mixer onto the guide bar.

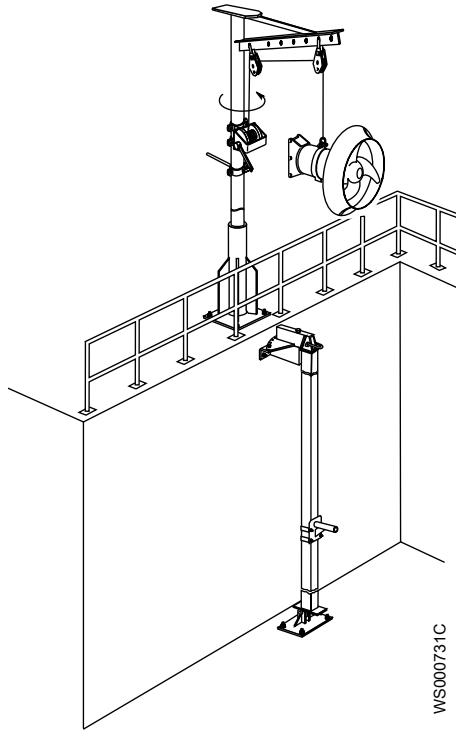

4. Position the mixer on the support at the given height "H".  
For information about the correct angle setting, see [Position the mixer](#) (page 27).

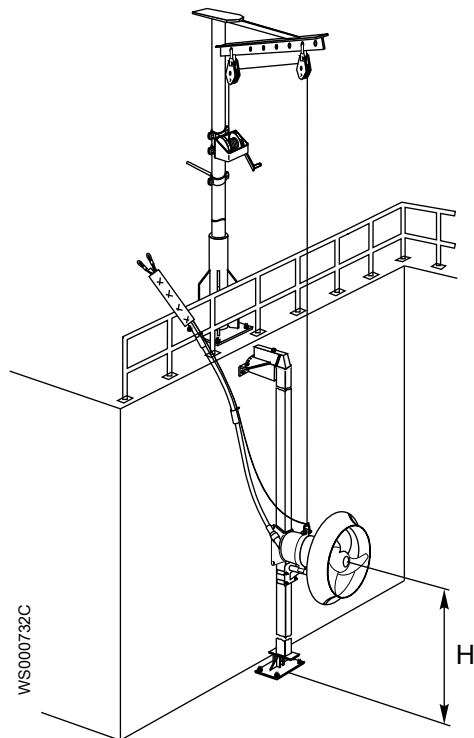


5. Secure the chains or wires, and tighten the power cable.

**NOTICE:**

The power cable must not carry the weight of the mixer.

**Install on a bottom fixing plate**

This figure shows how the mixer is installed on the bottom fixing plate.

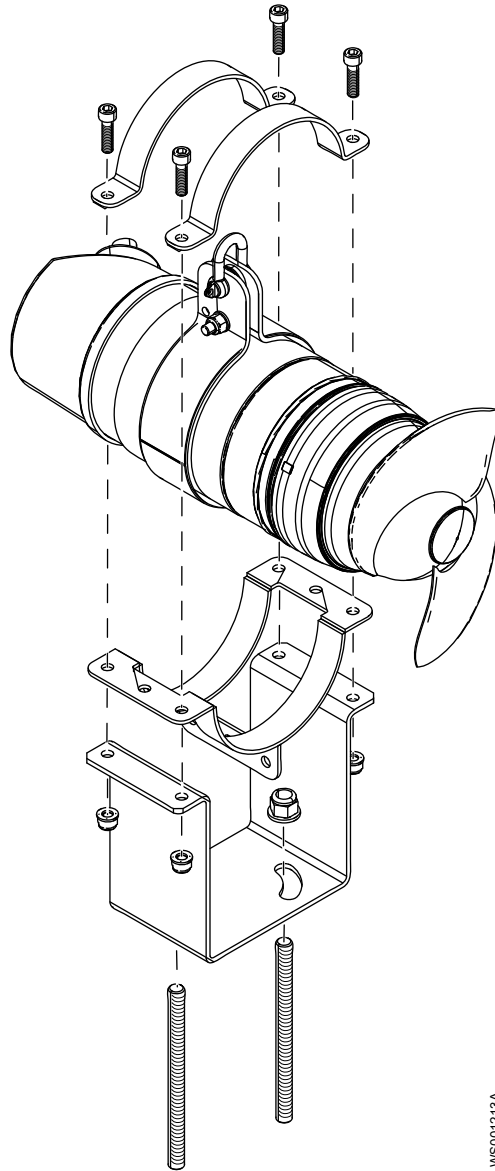

1. Position and mount the fixing plate:

Material	Fastening method
Concrete	Chemical anchors
Steel	Fixing bolts or welded


2. Mount the mixer between the brackets onto the fixing plate.

## Position the mixer

For more information contact your Xylem representative.

### Position parameters

This figure shows the parameters to observe when you position the mixer.

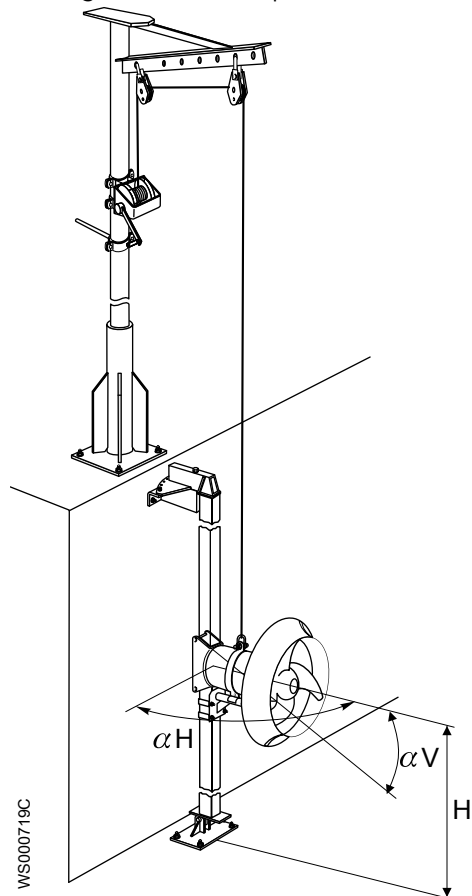


**Table 1: Parameter description**

Parameter	Description
$H$	This parameter represents the height from the tank bottom and is set when the mixer is installed on the guide bar.
$\alpha H$	This parameter represents the horizontal angle and is set when the mixer is installed on the guide bar.
$\alpha V$	This parameter represents the vertical angle.

### Propeller clearance

This figure shows the propeller clearance. It is the minimum distance between the propeller blade and the surrounding environment.

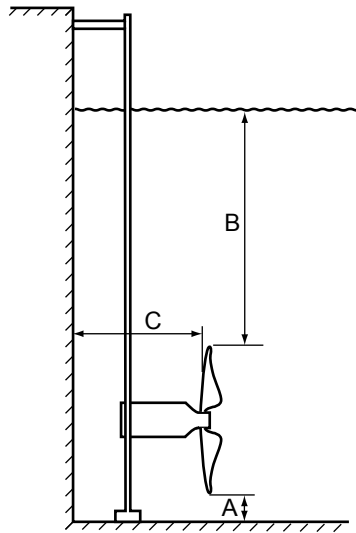

Minimum propeller clearance

Beginning of the distance	End of the distance	Minimum value	Distance in the figure
Propeller	Bottom of the tank	The dimension of the propeller diameter	A
Peak position of the propeller blade	Liquid level	See dimensional drawing for applicable product.	B
Propeller	Background wall	1.5 times the propeller diameter	C
Propeller	Side wall	0.5 times the propeller diameter	-

Obstacles and walls downstream of the mixer

The clear distance downstream of the mixer must be at least 10 times the propeller diameter.

Set the horizontal angle

**Table 2: Identification of the horizontal angle for 0-90 degrees**


$\alpha H$	Letter	Numeral	Other possible combinations	
			Letter	Numeral
0	A	1	-	-
10	B	1	-	-
20	A	2	-	-
30	B	2	-	-
40	A	3	-	-
50	B	3	-	-
60	A	4	-	-

$\alpha$ H	Letter	Numeral	Other possible combinations	
			Letter	Numeral
70	B	4	C	1
80	A	5	D	1
90	B	5	C	2

**Table 3: Identification of the horizontal angle for 100-180 degrees**


$\alpha$ H	Letter	Numeral	Other possible combinations	
			Letter	Numeral
100	A	6	D	2
110	B	6	C	3
120	D	3	-	-
130	C	4	-	-
140	D	4	-	-
150	C	5	-	-
160	D	5	-	-
170	C	6	-	-
180	D	6	-	-

1. Rotate the guide bar to set the horizontal angle.

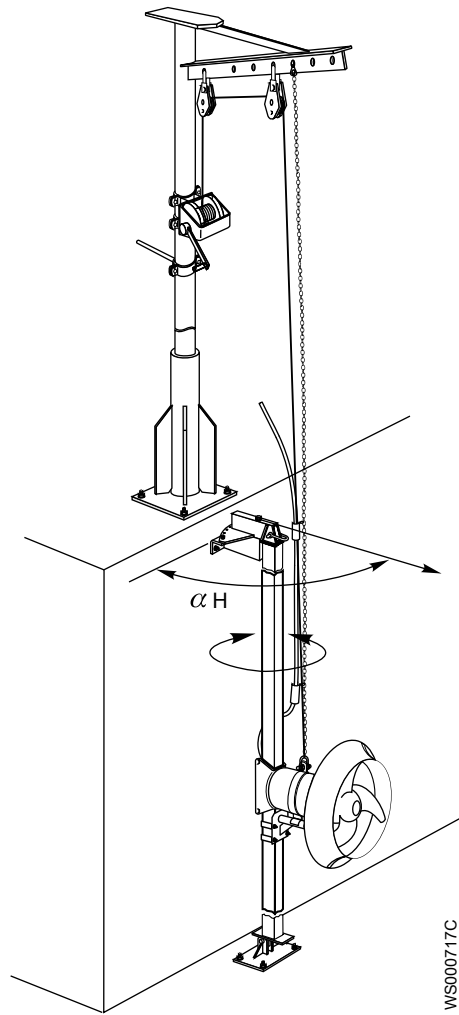

2. Place the indexing screw in the corresponding hole to fasten the angle.  
Make sure to maintain the propeller clearance, see [Propeller clearance](#) (page 27).



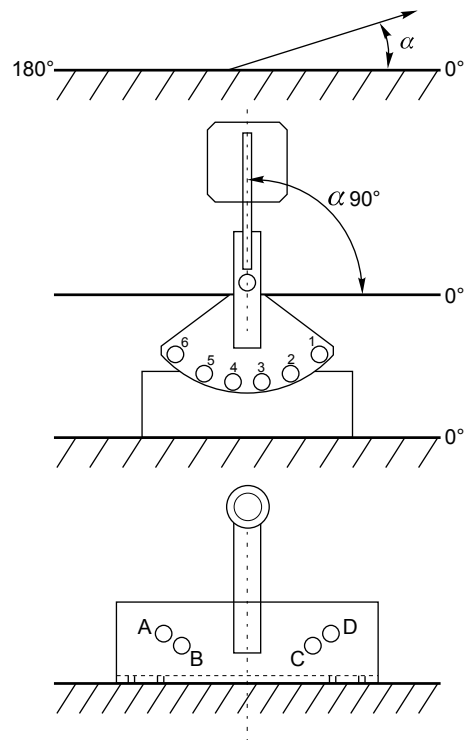


- Place the support grip in position on the power cable, and attach the grip to the shackle.

---

**NOTICE:**

You must use the support grip when the mixer is held in position by a wire instead of a chain.


---



WS000721B


### Set the vertical angle

The figures show examples of how to mount roller type 1 and roller type 2 on the rear guide of the mixer.

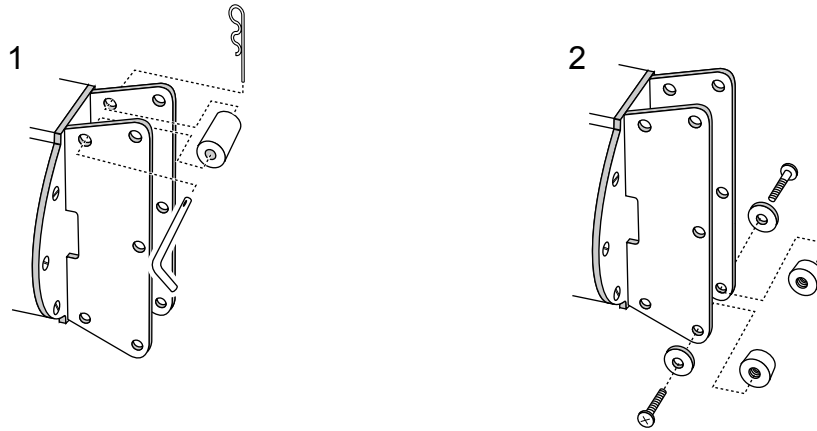

1. Place a set of rollers on the rear guide according to the illustration, to accomplish the desired angle.

Type-1 rollers can only be used in front of the guide bar, while type-2 rollers can be used either in front of or on the back of the guide bar.

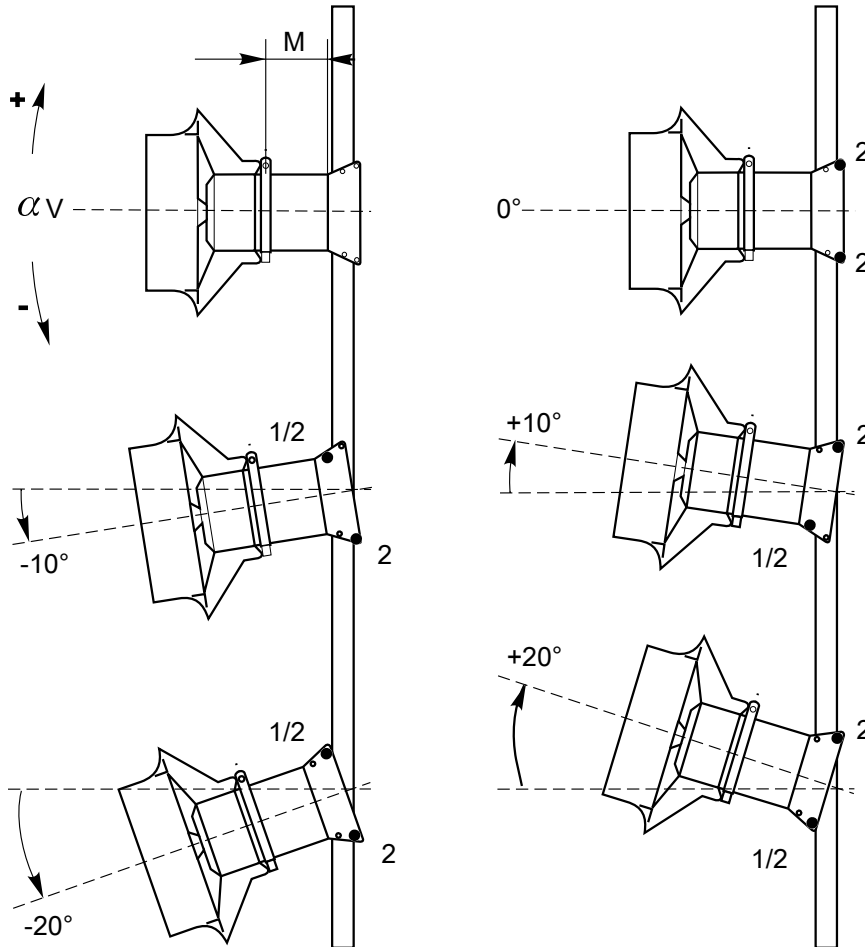

2. Check and correct the position of the lifting equipment.

The M measurement identifies the correct position, see the dimensional drawings for the product. Different measurements apply for mixers with or without a jet ring.

---

# Electrical installation

## Requirements

### General precautions



---

**Electrical Hazard:**

- A certified electrician must supervise all electrical work. Comply with all local codes and regulations.
  - Before starting work on the unit, make sure that the unit and the control panel are isolated from the power supply and cannot be energized. This applies to the control circuit as well.
  - There is a risk of electrical shock or explosion if the electrical connections are not correctly carried out or if there is fault or damage on the product.
  - Make sure that all unused conductors are insulated.
- 

### Requirements

Check that the following requirements are met:

- The supply authority must be notified before installing the unit if it will be connected to the public mains. When the unit is connected to the public power supply, it may cause flickering of incandescent lamps when started.
- The mains voltage and frequency must agree with the specifications on the data plate.
- The fuses and circuit breakers must have the proper rating, and the unit must be connected to an overload protection (motor protection breaker) that is set to the rated power. See the specifications on the data plate. The starting current in direct-on-line starting can be up to six times higher than the rated current.
- The fuse rating and the cables must be in accordance with the local rules and regulations.
- If intermittent operation is prescribed, the unit must be provided with monitoring equipment supporting such operation.
- FM-approved mixers must be provided with a leakage sensor due to the approval requirements.

### Cables

When choosing cables:

- The cables must be in good condition, not have any sharp bends, and not be pinched.
- If a cable has been used before, a short piece must be peeled off when refitting it so that the cable entry seal sleeve does not close around the cable at the same point again. If the cable covering is damaged, replace the cable (contact an Xylem service shop).
- The cable entry seal sleeve and washers must conform to the outside diameter of the cable.
- A screened cable must be used according to the European CE requirements if a Variable Frequency Drive (VFD) is used. For more information, contact your Xylem representative (VFD-supplier).
- The voltage drop in long cables must be taken into account. The drive unit's rated voltage is the voltage measured at the terminal board in the upper part of the product.

## Earthing (Grounding)



### Electrical Hazard:

- All electrical equipment must be earthed (grounded). Make sure that the earth (ground) lead is correctly connected by testing it.
- Risk of electrical shock or burn. You must connect an additional earth- (ground-) fault protection device to the earthed (grounded) connectors if persons are likely to come into physical contact with the pump or pumped liquids.
- If the motor cable is jerked loose by mistake, the earth (ground) conductor should be the last conductor to come loose from its terminal. Make sure that the earth (ground) conductor is longer than the phase conductors. This applies to both ends of the motor cable.

### Connect the motor cable to the mixer



### CAUTION:

Leakage into the electrical parts can cause damaged equipment or a blown fuse. Keep the end of the motor cable above the liquid level.

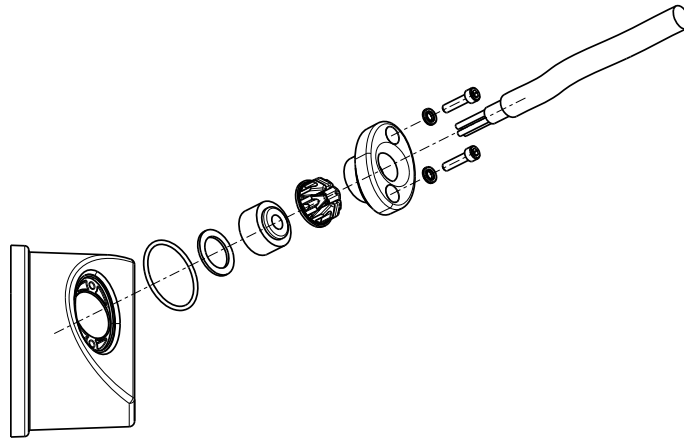


Figure 4: Cable insertion assembly

The mixer is normally delivered with the cable connected. If not, you need to connect it. For more information about the cable entry, see Parts list.

The earth (ground) conductor must be 100 mm ( 4.0 in.) longer than the phase conductors in the junction box of the unit.


1. Remove the entrance cover, fixing plate, and O-ring from the mixer housing.  
You will have access to the terminal board.
2. Check the data plate to see which connections are required for the power supply:
  - Y
  - D
3. Arrange the connections on the terminal board in accordance with the required power supply.
4. Connect the motor conductors (U1, V1, W1, and earth (ground)) to the terminal board.
5. Connect the control conductors (T1 and T2) to the terminal board.
6. Make sure that the mixer is correctly connected to earth (ground).
7. Make sure that any thermal contacts are properly connected to the terminal board.
8. Install the O-ring, fixing plate, and entrance cover on the mixer housing.
9. Fasten the screws on the entrance flange so that the cable insertion assembly bottoms out.

## Connect the motor cable to the starter and monitoring equipment



### WARNING:

Do not install the starter equipment in an explosive zone unless it is explosion-proof rated.

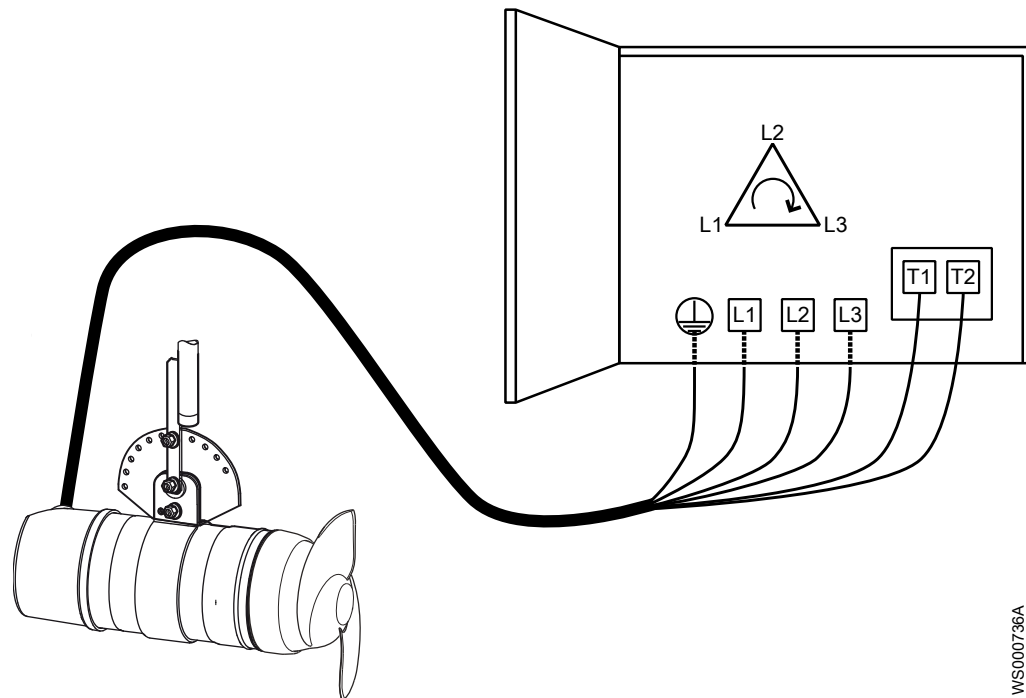

W5000736A

Figure 5: Connection of the motor cable.

1. Connect the T1 and T2 control conductors to the MiniCAS II monitoring equipment.

### NOTICE:

The thermal contacts are incorporated in the stator. Connect them to 24 V over separate fuses to protect other automatic equipment.

2. If thermistors are included in the mixer installation, connect the T3 and T4 control conductors to the thermistor relay, for example MAS 711.
3. Connect the mains conductors (L1, L2, L3, and earth (ground)) to the starter equipment.

See the applicable cable charts for the color codes of the conductors.


## Sensor-connection alternatives

### Sensor alternatives

The mixer is always equipped with thermal contacts incorporated in the stator.

The mixer can also have an optional water leakage sensor (FLS). A leakage sensor is mandatory if the mixer has FM approval.

Connection diagram

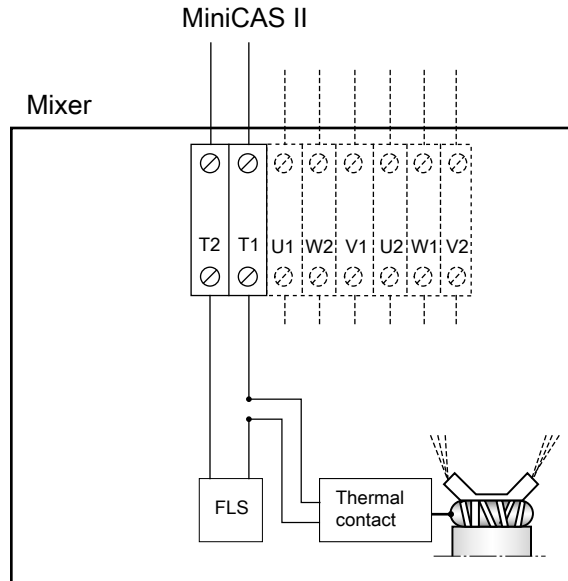

Thermal contact and FLS

This table shows the connection of the thermal contact and the FLS to the MiniCAS II.


Sensor conductor	Terminal board	Cable
White/Grey/Yellow	T1	T1/1 (SUBCAB) Orange (SUBCAB AWG)
Blue	T2	T2/2 (SUBCAB) Blue (SUBCAB AWG)

MiniCAS II

For information about the connection to MiniCAS II, see its separate manual.

## Cable charts

### Connection locations

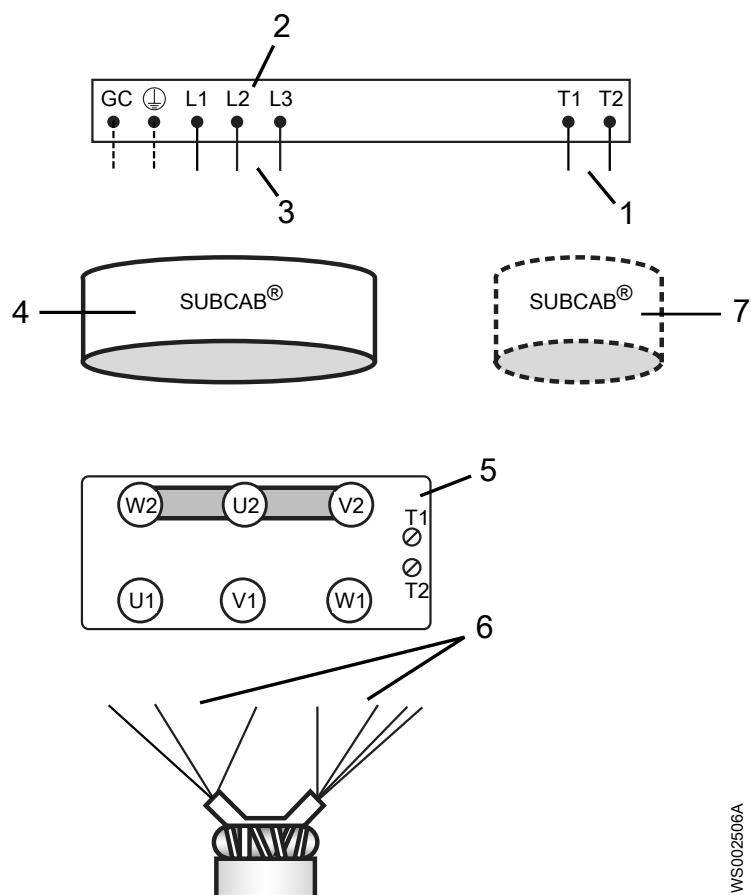

WS002506A


1. Control leads
2. Starter equipment
3. Mains leads
4. Motor cable
5. Terminal blocks on mixer
6. Stator leads
7. Control cable

### Colors and marking of the mains leads

Mains	SUBCAB 4GX	SUBCAB AWG	SUBCAB screened	Silicone cable 7G2,5
L1	Brown	Red	Brown	Black 1
L2	Black	Black	Black	Black 2
L3	Gray	White	Gray	Black 3
	Yellow/Green	Yellow/Green	Screen twisted together	Yellow/Green
Ground check (GC)	-	Yellow	-	-

### Colors and markings, 1-phase

Core	SUBCAB 4GX	SUBCAB AWG	Silicone cable 7G2,5
Capacitor	Brown	Red	Black 1
Main winding	Black	Black	Black 2

Core	SUBCAB 4GX	SUBCAB AWG	Silicone cable 7G2,5
Common	Gray	White	Black 3
	Yellow/Green	Yellow/Green	Yellow/Green
Ground check (GC)	-	Yellow	-

Colors and marking of the control leads


Control	SUBCAB 4GX	SUBCAB AWG	Silicone cable 7G2,5	SUBCAB screened
T1	T1	Orange	Black 4	T1
T2	T2	Blue	Black 5	T2

Colors of the stator leads


Stator connection	Lead color	Lead color, single phase
U1	Red	Red
U2	Green	Brown
V1	Brown	-
V2	Blue	-
W1	Yellow	-
W2	Black	-
Z1	-	Yellow
Z2	-	Black




SUBCAB / SUBCAB AWG / Silicone cable

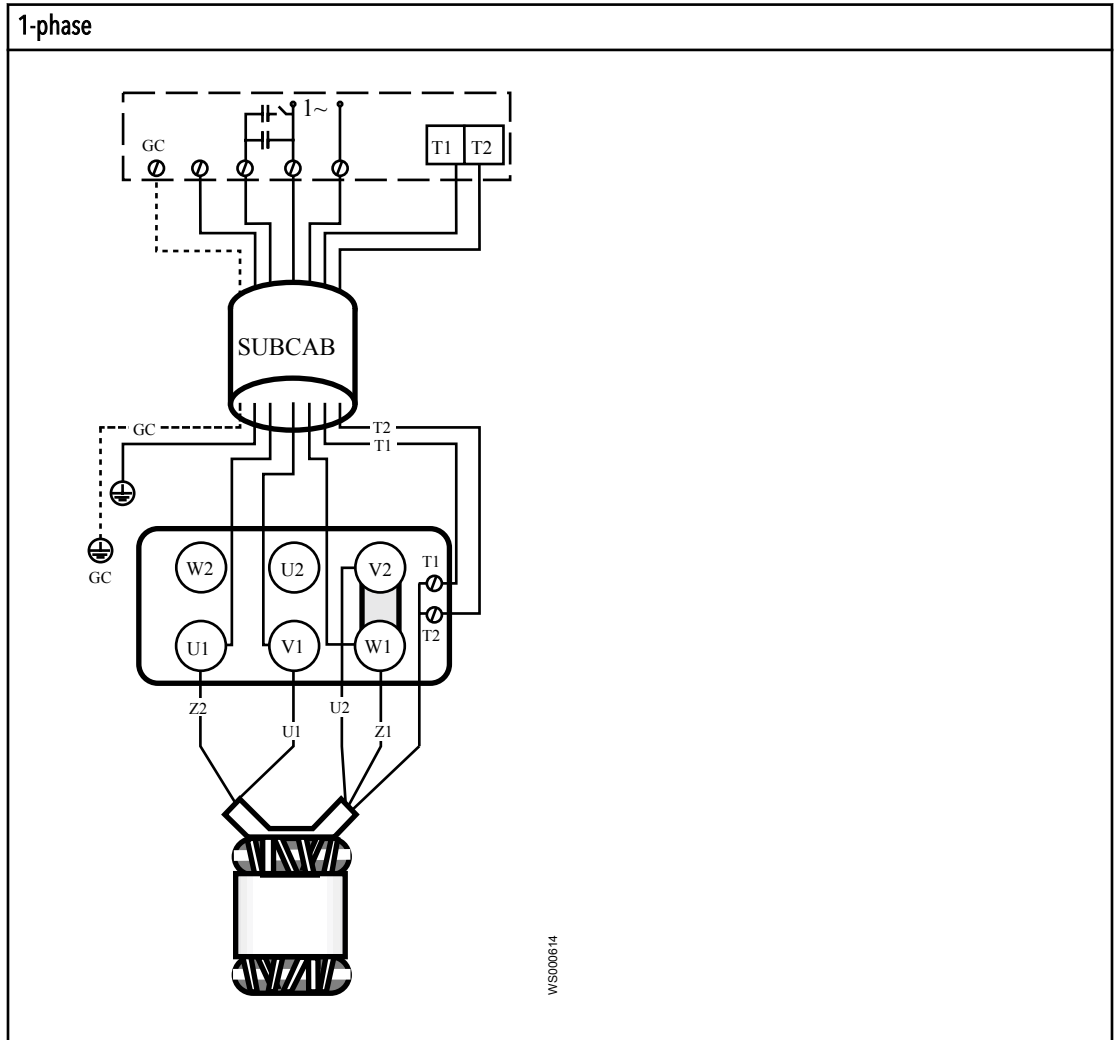

SUBCAB 4GX / SUBCAB AWG / Silicone cable, 6 stator leads, Y and D connections

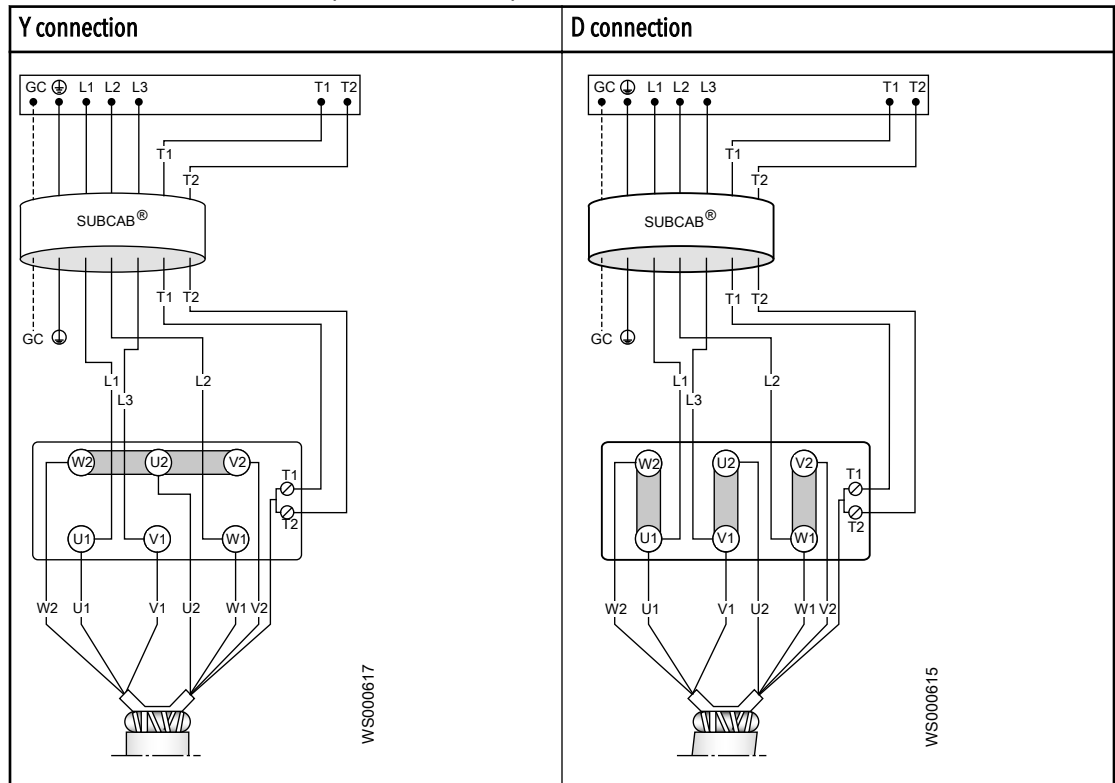

SUBCAB, screened, 6 stator leads, Y and D connections

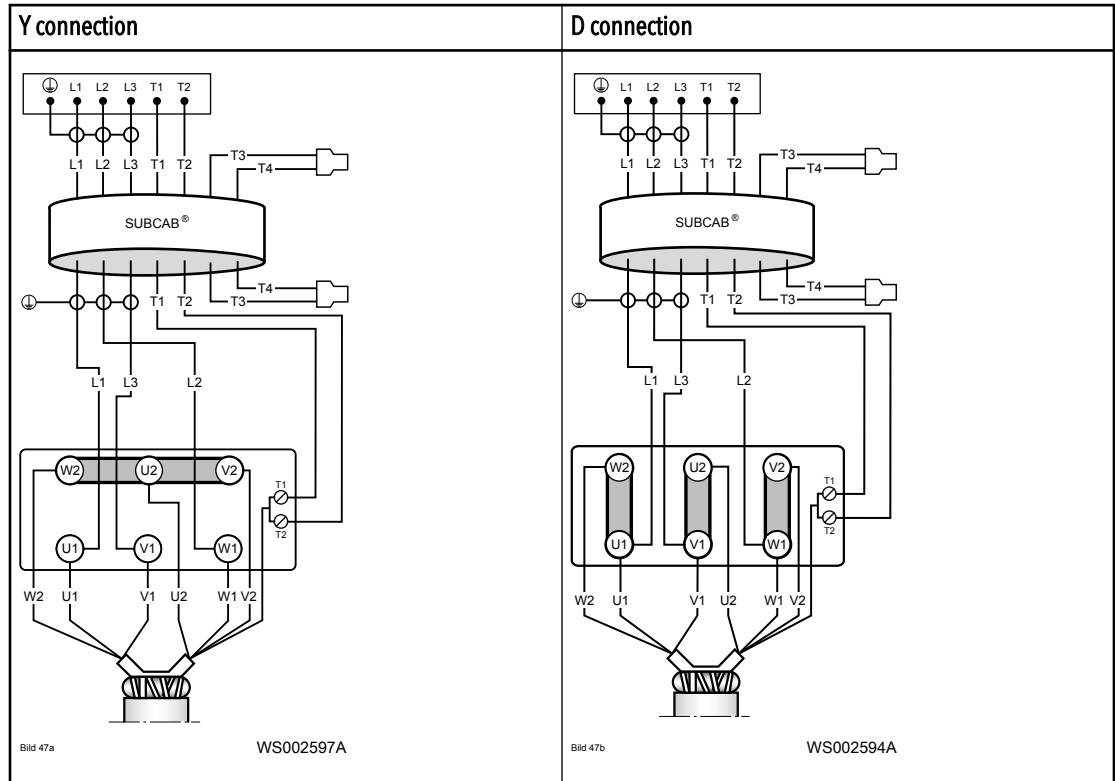

# Operation

## Noise level

The noise level of the unit is normally lower than 70 dB, but in some installations at certain operation points on the performance curve the noise level of 70 dB can be exceeded.

## Distance to wet areas



### Electrical Hazard:

Risk of electrical shock. Make sure no one gets closer than 20 m (65 ft.) to the unit when being in contact with the pumped or mixed liquid.



### Electrical Hazard:

Risk of electrical shock. This unit has not been investigated for use in swimming pools. If used in connection with swimming pools special safety regulations apply.

## Start the mixer



### WARNING:

- Make sure nobody is close to the unit when it is started. The unit will jerk in the opposite direction of the propeller rotation.


### NOTICE:

The maximum number of starts allowed per hour is 30.

Before you start the mixer, the following requirements must be met:


- There is oil in the oil casing.
  - The motor cable entry is securely tightened.
  - The machine is fixed to the guide bar.
  - The monitoring equipment incorporated in the product is correctly connected.
1. Start the motor briefly to check the direction of rotation.  
The correct direction of propeller rotation is counterclockwise when you look at the mixer from the propeller side. See the illustration.

The illustration shows the correct direction of rotation.

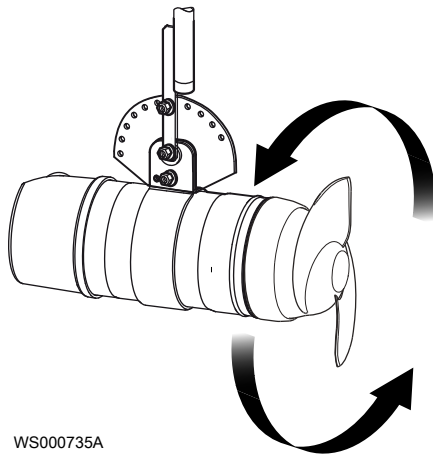

WS000735A

2. If the direction of rotation is incorrect, do as follows:
  - a) Stop the motor.
  - b) Disconnect the power supply.
  - c) Change positions of two of the three mains leads to the power supply.  
For instructions on how to connect the power supply, see [Electrical installation](#) (page 33).

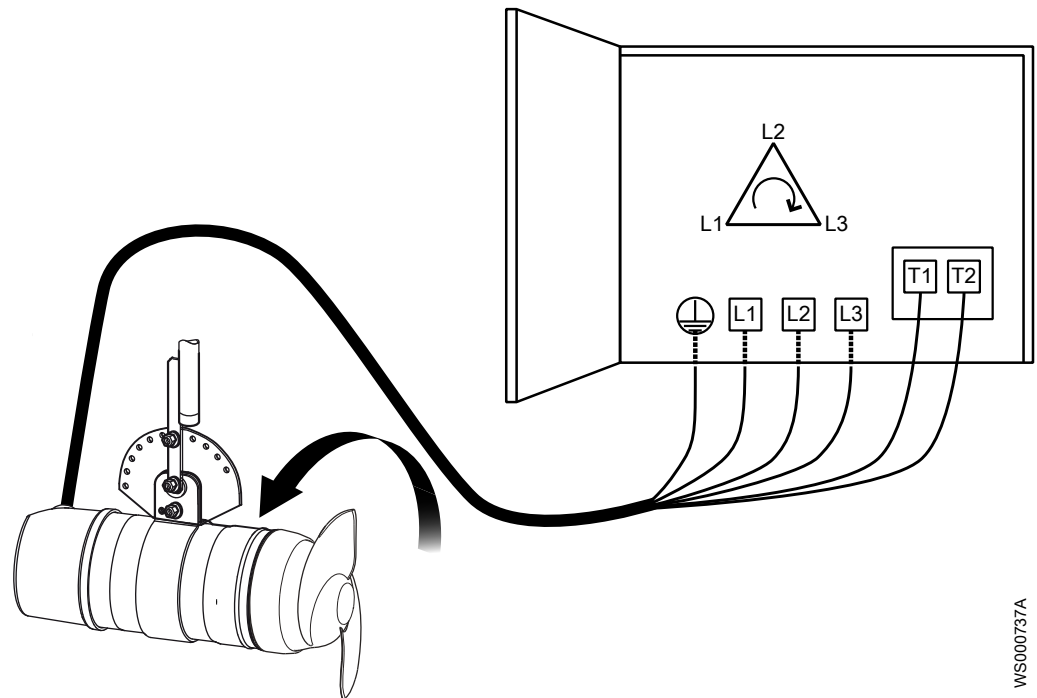

WS000737A

Figure 6: Correct motor cable connection

- d) Start the motor briefly to check that the direction of rotation is correct.

# Maintenance

## Requirements


**WARNING:**

Always disconnect and lock out power before servicing to prevent unexpected startup. Failure to do so could result in death or serious injury.


**CAUTION:**

- EN/ATEX or FM-approved mixers may only be repaired or maintained by certified electricians and Xylem-authorized mechanics.
- If the mixer is EN/ATEX or FM-approved, see specific Ex information before taking any further actions.

**NOTICE:**

When a unit is used for a long period of time, the unit acquires a "patina". Other working methods besides those recommended here will sometimes have to be used.

## Requirements

Check that the following requirements are met:

- The mixer must be isolated from the power supply.
- All tools must be on hand.
- O-rings and other parts that are to be replaced must be set out.
- All parts that have been removed must be cleaned carefully, especially the O-ring seats.
- All screws that have been removed must be lubricated before they are refitted.

## Reference

See Parts lists for more details and exploded views of the product, including special tools and parts for service.

## Maintenance intervals

Type of service	Purpose	Inspection interval
Initial inspection	To make a check up by an authorized Xylem service representative and, based on the result and findings from these measures, determine the intervals for periodical inspection and major overhaul for the specific installation.	Within the first year of operation.
Periodical inspection	To prevent operational interruptions and machine breakdown. Measures to secure performance and efficiency are defined and decided for each individual application. It can include such things as general inspection, wear part control and replacement, control of zinc-anodes and control of the stator.	Up to 4,000 hours or 1 year, whichever comes first. Applies to normal applications and operating conditions at media (liquid) temperatures <40°C (104°F).

Type of service	Purpose	Inspection interval
Major overhaul	To secure a long operating lifetime for the product. It includes replacement of key components and the measures taken during an inspection.	Up to 12,000 hours or 3 years, whichever comes first. Applies to normal applications and operating conditions at media (liquid) temperatures <40°C (104°F).

**NOTICE:**

Shorter intervals may be required when the operating conditions are extreme, for example with very abrasive or corrosive applications or when the liquid temperatures exceed 40°C (104°F).

## Inspection

Service item	Action
Cable	<ol style="list-style-type: none"> <li>If the outer jacket is damaged, replace the cable.</li> <li>Check that the cables do not have any sharp bends and are not pinched.</li> </ol>
Connection to power	Check that the connections are properly tightened.
Electrical cabinets	Check that they are clean and dry.
Insulation	Use a megger maximum 1000 V. <ol style="list-style-type: none"> <li>Check that the resistance between the earth (ground) and phase lead is more than 5 megohms.</li> <li>Conduct a phase-to-phase resistance check.</li> </ol>
Junction box	Check that it is clean and dry.
Lifting device	Check that local safety regulations are followed.
Lifting handle	<ol style="list-style-type: none"> <li>Check the screws.</li> <li>Check the condition of the lifting handle.</li> <li>Replace if necessary.</li> </ol> Check the screws and the condition of the lifting handle. Replace if necessary.
Oil housing	Check, and if necessary change the oil.
O-rings	<ol style="list-style-type: none"> <li>Replace the O-rings of the filling plugs and at the junction cover.</li> <li>Grease the new O-rings.</li> </ol>
Overload protection and other protections	Check the correct settings.
Personnel safety devices	Check the guard rails, covers, and other protections.
Rotation direction	Check the propeller rotation.
Stator housing	Inspect the stator housing for any leakage.
Terminal board	Check that the connections are properly tightened.
Thermal contacts	Normally closed circuit; interval 0–1 ohm.
Thermistor	Check the resistance, which should be 20–250 ohms. Measuring voltage: max 2 VDC.

Service item	Action
Voltage and amperage	Check the running values.

## Major overhaul

For a major overhaul, take this action in addition to the tasks listed under Inspection

Service item	Action
Support and main bearing	Replace the bearings with new bearings.
Mechanical seal	Replace with new seal units.


## Service in case of alarm

Alarm source	Action
FLS	<ol style="list-style-type: none"> <li>1. Check the connection chamber for any leakage, and drain if necessary.</li> <li>2. Check mechanical seals and O-rings and replace any damaged seals with new ones.</li> </ol>
Thermal contact	<ol style="list-style-type: none"> <li>1. Check the connections and the electrical motor.</li> <li>2. Check the start and stop levels.</li> <li>3. Check that the position is according to the installation requirements.</li> </ol>
Overload protection	Check that the propeller can rotate freely.

## Inspect the stator housing

A screwdriver is required for this procedure.

1. Attach the mixer in a screw vice.  
Use the lifting handle as an attachment.
2. Loosen and remove the inspection plug and O-ring.

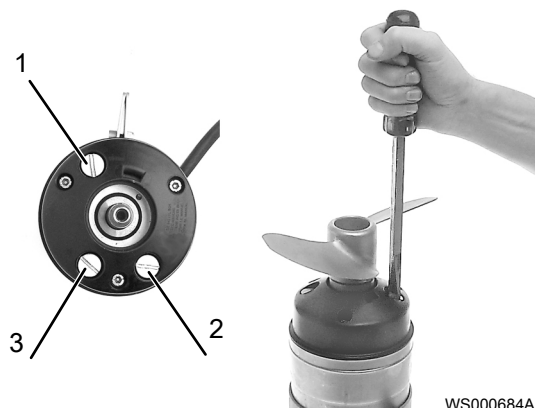

1. Oil plug (filling)
  2. Oil plug (drainage)
  3. Inspection plug
3. Undo the mixer from the screw vice and turn the mixer upside down over an oil tray.



4. If any liquid runs out, replace the seal.

## Change the oil

Before you change the oil, the propeller must be removed. See [Remove the jet ring, guiding claw, and propeller](#) (page 48).

### Drain the oil




---

#### WARNING:

The oil housing may be pressurized. Hold a rag over the oil plug to prevent oil from spraying out.

---

1. Unscrew the two oil plugs.

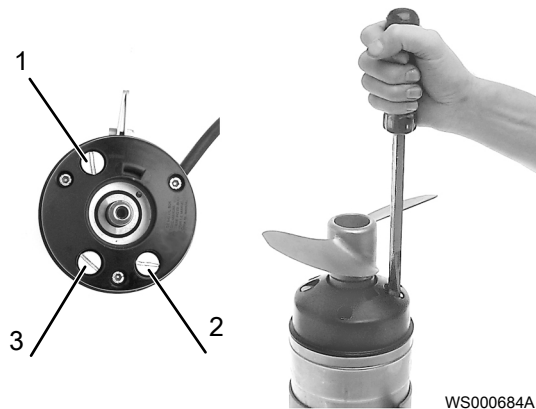

1. Oil plug (filling)
  2. Oil plug (drainage)
  3. Inspection plug
2. Hold the mixer over a cup and allow the oil to run out.  
Turn the mixer back and forth to make sure that all oil is drained.





3. Check for water in the oil. If there is water in the oil, do as follows:
  - a) Replace the shaft seal and the O-rings.
  - b) Check the oil housing for any damage, and replace if necessary.

## Fill the oil



### WARNING:

The oil housing may be pressurized. Hold a rag over the oil plug to prevent oil from spraying out.


The mixer is delivered from the factory with paraffin oil with a viscosity close to ISO VG32. Recommended oil: 90 17 52.

The required oil quantity is 0.15 L (0.16 qt).

The following tools are required for this procedure:

- Funnel
- Torque wrench

1. Unscrew the two oil plugs.

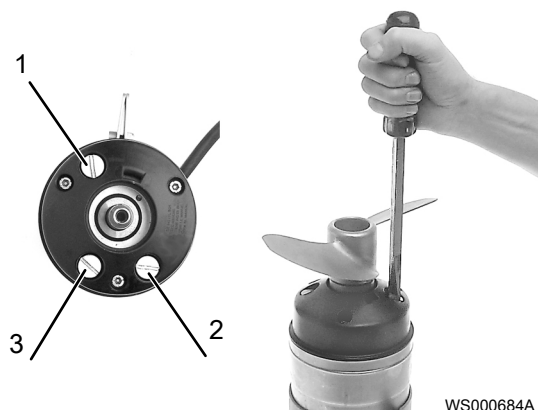

1. Oil plug (filling)
2. Oil plug (drainage)
3. Inspection plug

2. With the mixer in a vertical position, fill with new oil through the oil filling hole.



3. Replace the O-rings of the oil plugs and put the oil plugs back. Tighten the plugs. Tightening torque: 10 Nm (7.4 ft-lbs).

If you replaced the shaft seals, then inspect the oil after one week of operation.

## Change the propeller



---

### WARNING:

Wear protective clothing. The edges of the parts can be sharp.

---

You need the following tools for this procedure:


- Hexagon socket wrench (13 mm)
- Hexagon socket head cup wrench (6 mm)
- Screwdriver
- Tool 82 93 11
- Torque wrench (6 mm)

## Remove the jet ring, guiding claw, and propeller

The following tools are used in this procedure:

- Hexagon socket wrench (13 mm)
- Hexagon socket head cup wrench (6 mm)
- Screwdriver


1. Remove the jet ring and the guiding claw:
  - a) Loosen the screws, washers, and nuts.

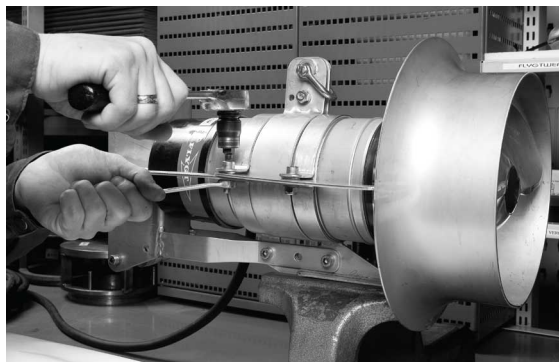

- b) Remove the clamp, the jet ring, and the guiding claw.
2. Remove the propeller:

- a) Remove the plastic plug.
- b) Loosen the central screw and washer.
- c) Remove the propeller together with screw and washer.
3. Check for seal leakage:
  - a) Attach the mixer in a screw vice.
 

Use the lifting handle as an attachment.
  - b) Loosen and remove the inspection plug and O-ring.

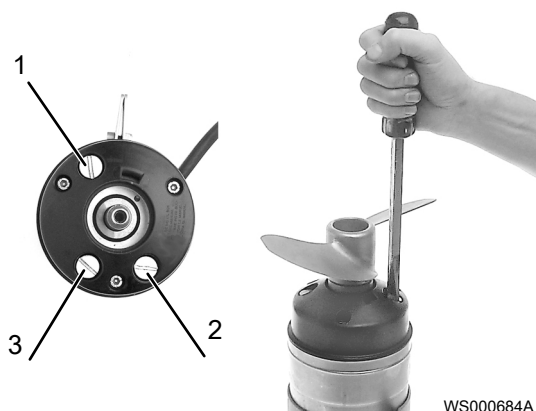

1. Oil plug (filling)
2. Oil plug (drainage)
3. Inspection plug

- c) Undo the mixer from the screw vice and turn the mixer upside down over an oil tray.



- d) If any liquid runs out, replace the seal.

## Assemble the propeller, jet ring, and guiding claw

Before following this procedure, you must fill the oil. See [Fill the oil](#) (page 47).

The following tools are used in this procedure:

- Hexagon socket wrench (13 mm)
- Hexagon socket head cup wrench (6 mm)
- Strap mounting tool 82 93 11
- Torque wrench (6 mm)

1. Mount the protective ring.
2. Press it down towards the oil housing until it bottoms out.



3. Put on the strap and tighten it 7-2 mm (0.28-0.08 in.) from the bottom edge.



4. Mount the propeller onto the shaft.
5. Fit the screw and tighten it to 17 Nm (12.6 ft-lbs).




6. Press the plastic plug in place.
7. Mount the jet ring and guiding claw:
  - a) Attach the mixer to the screw vice.
  - b) Mount the jet ring towards the lifting handle.

**NOTICE:**

Note the position of the electric poles (polar position).

- c) Fit the clamp, screws, washers, and nuts.
- d) Tighten the screws to 17 Nm (12.6 ft-lbs).
- e) Make sure that the propeller rotates free from the jet ring.
- f) Mount the guiding claw.

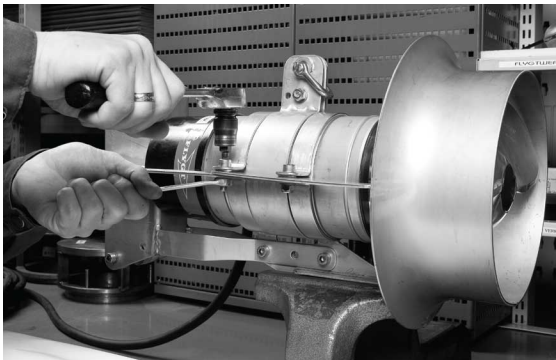

# Troubleshooting

## Troubleshooting

### Before you begin

Follow these guidelines when troubleshooting the mixer:

- Disconnect and lock out the power supply except when conducting checks that require voltage.
- Make sure that no one is near the mixer when the power supply is reconnected.
- When troubleshooting electrical equipment, use the following:
  - Universal instrument multimeter
  - Test lamp (continuity tester)
  - Wiring diagram

### The mixer does not start



**WARNING:**

Always disconnect and lock out power before servicing to prevent unexpected startup. Failure to do so could result in death or serious injury.

Cause	Remedy
An alarm signal has been triggered on the control panel.	Check the thermal contacts, and that the overload protection has not tripped.
The mixer does not start automatically, but can be started manually.	Check the following: <ul style="list-style-type: none"> <li>• All connections are intact.</li> <li>• The relay and contactor coils are intact.</li> <li>• The control switch (Man/Auto) makes contact in both positions.</li> </ul>
The installation is not receiving voltage.	Check the following: <ul style="list-style-type: none"> <li>• The main power switch is on.</li> <li>• There is control voltage to the start equipment.</li> <li>• The fuses are intact.</li> <li>• There is voltage in all phases of the supply line.</li> <li>• All fuses have power and that they are securely fastened to the fuse holders.</li> <li>• The overload protection is not tripped.</li> <li>• The motor cable is not damaged.</li> </ul>
The propeller is stuck.	Clean the following: <ul style="list-style-type: none"> <li>• The propeller</li> <li>• The jet ring</li> </ul> Check the propeller clearance to the jet ring, and that the propeller and shaft can be rotated.

If the problem still persists, contact the local Xylem service shop. Always state the serial number of your mixer when contacting Xylem, see [The data plate](#) (page 13).

## The mixer starts-stops-starts in rapid sequence



**WARNING:**

Do NOT override the motor protection repeatedly if it has tripped. Doing so may result in equipment damage.

Cause	Remedy
The self-holding function of the contactor malfunctions.	Check the voltage in the control circuit in relation to the rated voltages on the coil, and that the contactor connections are intact.

If the problem still persists, contact the local Xylem service shop. Always state the serial number of your mixer when contacting Xylem, see [The data plate](#) (page 13).

## The mixer runs but the motor protection trips



**WARNING:**

Always disconnect and lock out power before servicing to prevent unexpected startup. Failure to do so could result in death or serious injury.

Cause	Remedy
The motor protection is set too low.	Set the motor protection according to specifications on the data plate.
There is a malfunction in the overload protection.	Replace the overload protection.
The propeller is difficult to rotate by hand.	Do the following: <ul style="list-style-type: none"> <li>• Clean the propeller.</li> <li>• Check that the propeller size is correct.</li> <li>• Check the propeller clearance to the jet ring.</li> <li>• Check if the shaft has too much play due to worn out bearing.</li> </ul>
The installation is not receiving full voltage on all three phases.	Do the following: <ul style="list-style-type: none"> <li>• Check the motor fuses. Replace fuses that have tripped.</li> <li>• If the fuses are intact, notify a certified electrician.</li> </ul>
The phase currents vary, or are too high.	Contact the local Xylem service shop.
The rated speed differs from what is stated on the data plate.	Contact the local Xylem service shop.
The density of the liquid is too high.	Do the following: <ul style="list-style-type: none"> <li>• Dilute the liquid.</li> <li>• Change the propeller blades or to a more suitable mixer.</li> <li>• Contact the local Xylem service shop.</li> </ul>

If the problem still persists, contact the local Xylem service shop. Always state the serial number of your mixer when contacting Xylem, see [The data plate](#) (page 13).

# Technical Reference

## Motor data

Feature	Description
Motor type	Squirrel-cage induction motor
Frequency	50 or 60 Hz
Supply	1-phase or 3-phase 3-phase
Starting methods	<ul style="list-style-type: none"> <li>• Direct On-Line</li> <li>• Star-delta</li> </ul>
Maximum starts per hour	30 evenly-spaced starts per hour
Design in applicable parts	According to IEC 60034-1
Rated output	Variation of $\pm 10\%$
Accepted variation from the rated voltage without overheating	Variation of $\pm 10\%$ provided that the motor does not run continuously at full load
Voltage imbalance between the phases	Maximum of 2%
Insulated stator	In accordance with class F (155°C, 311°F)

## Application limits

Data	Description
Liquid temperature	<ul style="list-style-type: none"> <li>• Maximum 40°C, (104°F)</li> <li>• Warm liquid version: maximum 90°C, (195°F)</li> </ul>
Liquid density	Maximum 1100 kg/m <sup>3</sup> (9.2 lb per US gal)
pH of the mixed liquid	1–12
Depth of immersion	Maximum 20 m (65 ft)





# Xylem |'zīləm|

- 1) The tissue in plants that brings water upward from the roots
- 2) A leading global water technology company

We're 12,000 people unified in a common purpose: creating innovative solutions to meet our world's water needs. Developing new technologies that will improve the way water is used, conserved, and re-used in the future is central to our work. We move, treat, analyze, and return water to the environment, and we help people use water efficiently, in their homes, buildings, factories and farms. In more than 150 countries, we have strong, long-standing relationships with customers who know us for our powerful combination of leading product brands and applications expertise, backed by a legacy of innovation.

For more information on how Xylem can help you, go to [xylem.com](http://xylem.com)



Xylem Water Solutions AB  
Gesällvägen 33  
174 87 Sundbyberg  
Sweden  
Tel. +46-8-475 60 00  
Fax +46-8-475 69 00  
<http://tpi.xylem.com>

Visit our Web site for the latest version of this document and more information

The original instruction is in English. All non-English instructions are translations of the original instruction.

© 2011 Xylem Inc